

ClearSonic IsoPac D Assembly Instructions

Tools needed: rubbing alcohol, rubber mallet and tall assistant or step ladder



1. Open boxes and check for damage. Call us immediately if you have any damaged or missing items. Save all your boxes and packing for as long as possible or at least a few weeks.



2. Stand up the main shield system in zig-zag formation, base channel on bottom.



3. Peel masking off panels. Wear gloves when handling acrylic to avoid fingerprints.




4. Fold up the system and "walk" them to the front center of kit or whatever you're isolating.



5. With one person on each side, unfold the system and wrap around kit.



6. Use your fingers to lift the panels at bottom cable cut-outs to pull or push system into final position. End panels should be near parallel and symmetrical on either side of kit, 6 to 7 feet apart for most applications. Figure 4 to 5 feet for smaller booths.

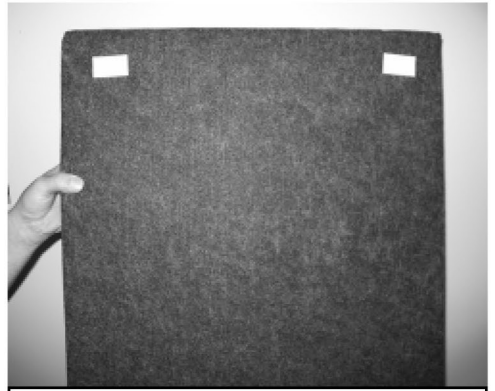

7. Place Velcro on all four corners of S2224/S2216 baffles about 1-inch from corners and peel off paper to expose adhesive.



8. Place S2224/S2216 baffles in position on shields. Have assistant apply opposing pressure from opposite side then press baffle corners to secure Velcro to shield.



9. Move the S2444x2 baffles into position behind kit. Use the Velcro flaps on outside top and bottom sides of S2444x2 to attach the units together. Ends of baffles should overlap inside of shields or butt up against them.



10. Use end S2444x2 as door to enter IsoPac.



Your IsoPac D is now complete! See below for a parts list.

Boxes	Weight (Lbs.)	Contents
(1)50"x27"x4"	64	A2448x5
(2)46"x27"x4"	18	S2444x2
(1)25"x24"x10"	20	(5)S2224

Please contact us should you have any questions or concerns about IsoPac assembly or operation. Thank you for using ClearSonic products.
 800.888.6360 / info@clearsonic.com