

ClearSonic IsoPac F Assembly Instructions

Tools needed: rubbing alcohol, rubber mallet and tall assistant or step ladder




1. Open boxes and check for damage. Call us immediately if you have any damaged or missing items. Save all your boxes and packing for as long as possible or at least a few weeks.



2. Stand up the main shield system in zig-zag formation, base channel on bottom.



3. Peel masking off panels. Wear gloves when handling acrylic to avoid fingerprints.

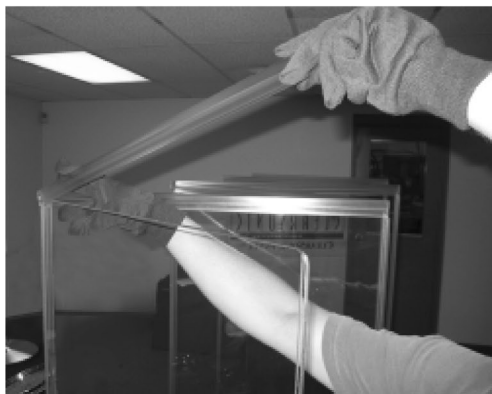

4. Install H-channels on top of main shields. Outside edge of H-channel should line up with outside edge of shield below.



5. Find an assistant if possible to help you install the AX Height Extenders. Lubricate bottom of AX panels with rubbing alcohol to aid installation.



6. Use your fingers to lift the panels at bottom cable cut-outs to pull or push system into final position. End panels should be near parallel and symmetrical on either side of kit, 6 to 7 feet apart for most applications. Figure 4 to 5 feet for smaller booths.



7. Move the S2466x2 baffles into position behind kit. Use the Velcro flaps on outside top and bottom sides of S2466x2 to attach the units together. Ends of baffles should overlap inside of shields or butt up against them.



8. Use end S2466x2 as door to enter IsoPac.



Your IsoPac F is now complete! See below for a parts list.

Boxes	Weight (Lbs.)	Contents
(1)68"x27"x4"	91	A2466x4,S2448,AX2412x4
(1)68"x27"x4"	27	S2466x2,(1)BAR
(1)68"x27"x4"	26	S2466x2
(1)50"x27"x4"	18	(2)ST2448
(1)8"x8"x8"	2	FAN

Please contact us should you have any questions or concerns about IsoPac assembly or operation. Thank you for using ClearSonic products.
800.888.6360 / info@clearsonic.com