



7. Fold up the larger of the two panel systems and “walk” it to the front center of the drum kit or whatever you’re isolating.




8. With one person on each side, unfold the system and wrap it around the kit.



9. Use your fingers to lift the panels at the bottom cable cut-outs to pull or push system into final position. End panels should be parallel and symmetrical on either side of the kit, about 7 feet apart for most applications.



10. Wrap the smaller panel system around the back so it meets with front panels on both sides.

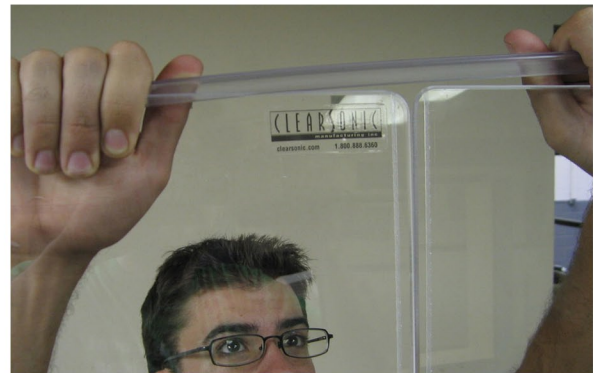

11. Next, use the extra base channel included with your MegaPac to connect the front panels with the rear panels on the side opposite the door. Line up the end panels of both shields, and attach the base channel to the top of the AX extenders.