

ClearSonic T-Base Installation Instructions

Tools Needed: Rubber Mallet, Drill, Screws



1. Set your ClearSonic Panel system horizontally on the floor in a carpeted area.



2. Using a small flat-head screwdriver, carefully pry the end of the existing standard base channel off of the panel.



3. Peel base channel off of clear panel. (Base channel is re-usable, so you may want to save these for future use.)



4. Line up the T-Base with the bottom of the panel and press gently into place. Do not block corner cable access cut-outs.




5. Seat the T-Base onto the clear panel using a rubber mallet.



6. Drill a pilot hole and use a screw that is appropriate for the surface you are attaching to. Use four screws per side.

Fully-Attached T-Base

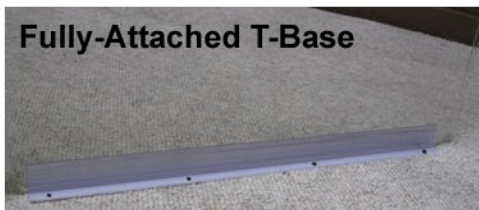

Please contact us at
1-800-888-6360 should
you have any questions.

CLEARSONIC
manufacturing inc
www.clearsonic.com