



335D E92 Intake Kit Install Instructions

- 1) Remove center ducting, and stock airbox from vehicle. Remove rubber bushing off stud on the frame rail.



- 2) Remove MAF sensor from stock airbox.


- 3) Insert MAF into shield. MAF should sit at an angle with ear in cutout as shown.



- 4) Place air filter on MAF and locate intake shield in place. Insert front ear of shield into radiator support and route single connector and main harness into cutout as shown. While pulling inlet boot out of the way, push intake in place over lower stud.



- 5) Plug in MAF sensor connector, listening for audible “click”. Connect inlet hose to MAF and tighten.

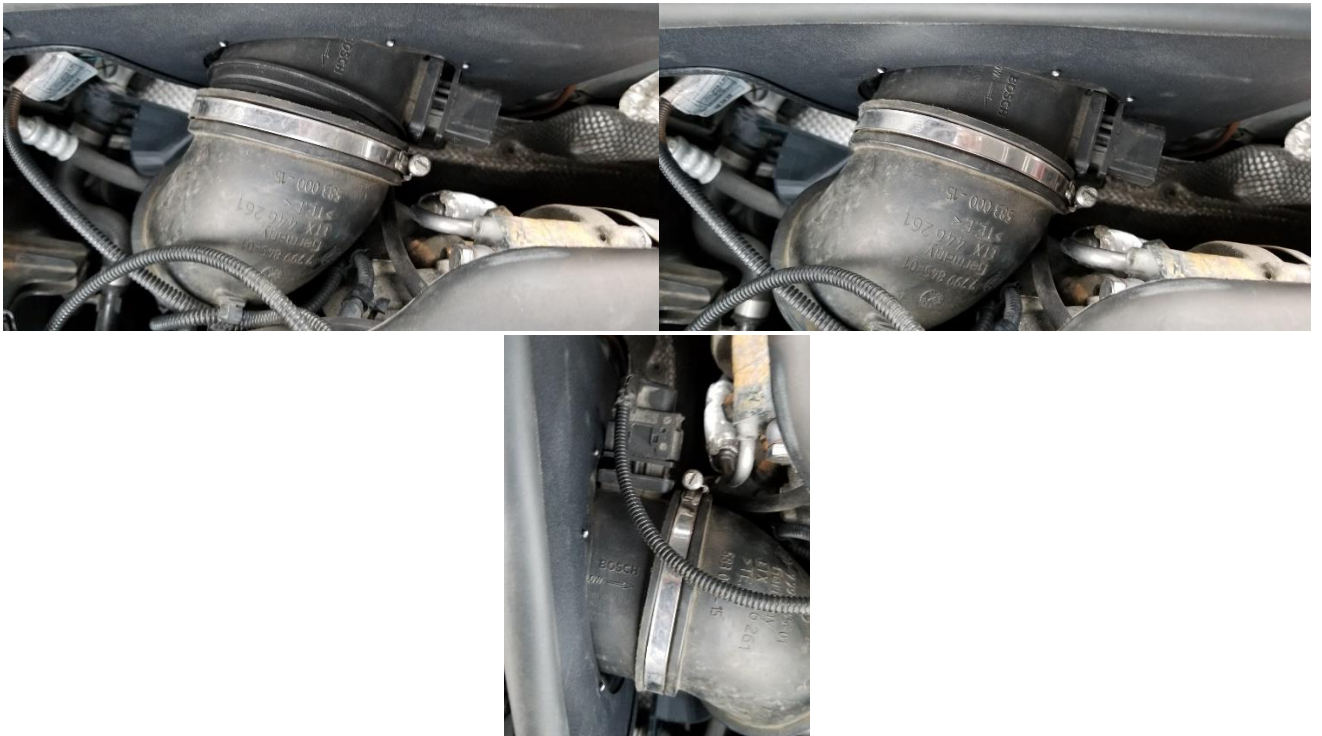

- 6) Insert hold-down into slot as shown. Tighten down using included washer w/factory bolt. Tighten supplied nut/washer onto bottom stud



- 7) Tighten air filter connection.

- 8) Insert OEM duct into receiver. Insert center duct over and swing down and into place. Tighten 3 duct screws.



9) Enjoy!

