

Initial Pairing of the Wireless UVC Button

1. Wire the button to the UVC lamp as follows:

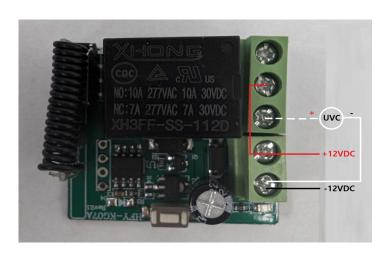



2. Prime the memory by pressing the button 8 times, wait for the LED to flash 8 times.

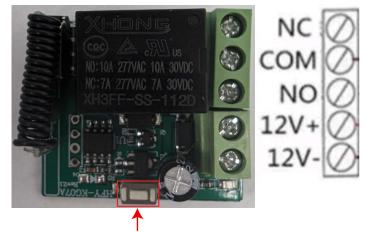

Memory Button

3. Press the memory button again two times, and then press the wireless button to finish pairing.

