
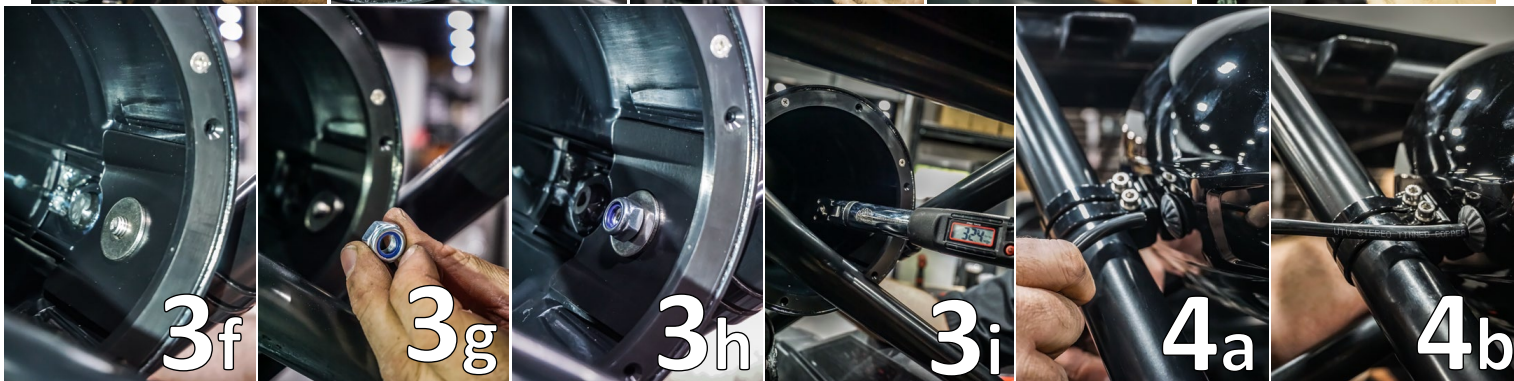


Install Instructions UTVS 8" Cage Pod Enclosures: UTVS-ECP8

When installing, order of washers and torque of nut is important!

Make sure to put washers in correct position and torque to specifications to prevent damage of the pod.

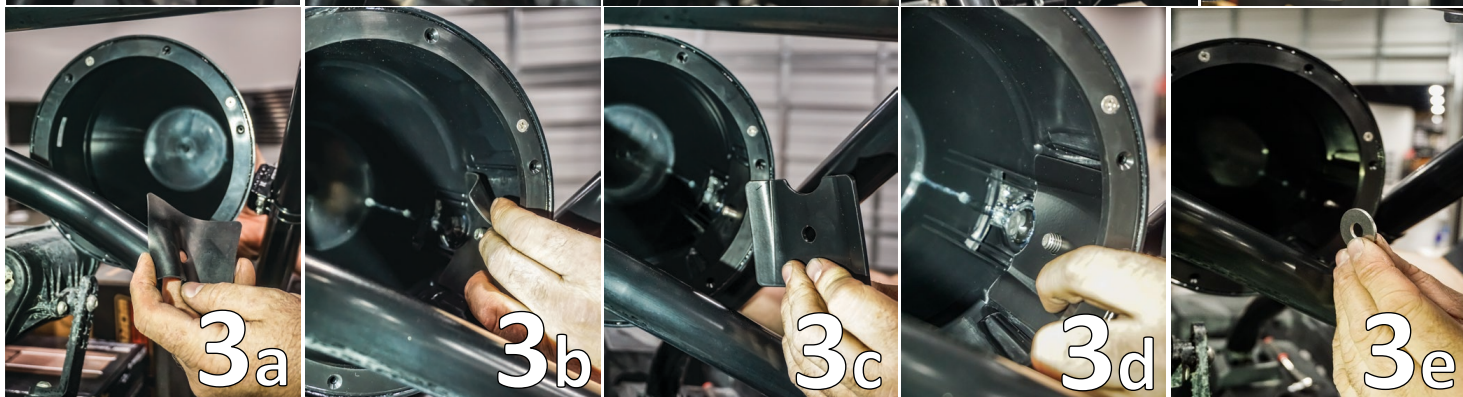

INSTRUCTIONS STEPS:

1. Loosely install included clamp around cage with nuts facing down. (Reference Figure 1)
2. Add rubber washer to cage mount bolt then push bolt through the 8" in Cage Pod. (Reference Figures 2a-2d)
3. Once mounting bolt with the rubber washer has been pushed through the 8" Cage Pod take the included rubber mounting gasket, then metal mounting bracket, then metal washer followed by the nylon nut and add them to the bolt inside of the 8" Speaker Pod where it has been pushed through. Adjust and level 8" Speaker Pod then tighten hardware to 32ft-lbs torque. (Reference Figures 3a-3i)
4. Run speaker wire through rubber grommet on side of 8" Cage Pod. (Reference Figures 4a-4b)
5. Wire and mount speaker. Locate desired position on cage to now tighten down the cage pod clamp to secure in place on the cage. Add UTV Stereo Metal Decal by peeling off plastic and aligning it on the back of the Cage Pod. (Figures 5a-5b)

UTV Stereo
PERFORMANCE AUDIO

UTVS 8" Cage Pod Enclosures
UTVS-ECP8

UTVSTEREO.COM

COPYRIGHT © 2022 UTV STEREO ALL RIGHTS RESERVED. UTV STEREO AND ANY COMPANIES ASSOCIATED WITH UTV STEREO ASSUME NO RESPONSIBILITY OR LIABILITY FOR FINES OR DAMAGES INCURRED AS A RESULT OF IMPROPER USE OF THIS PRODUCT.

QUESTIONS? 480-616-2299