

Can-Am X3 Center Console Covers


Compatible with all Can-Am X3 models.

Parts List: 1 Set of Center Console Covers & 5 Speed Clips

Need Help? Call Tech Support: (480)-616-2299

Email: info@utvstereo.com

Go to utvstereo.com for colored installation pictures & YouTube videos.

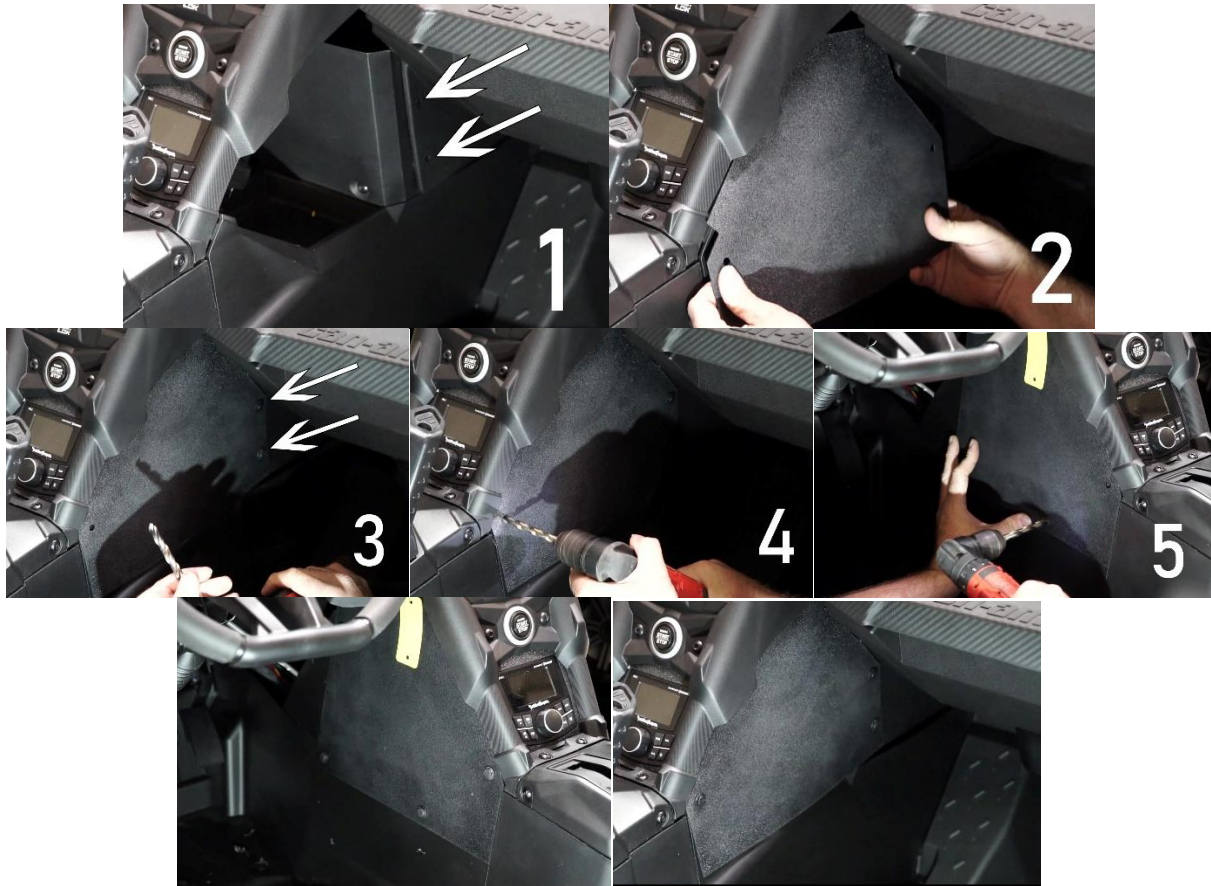

INSTRUCTIONS

Step 1: Remove the two factory speed clips on passenger side center console. (Reference Picture 1)

Step 2: Slide center cover into position. Line up the two holes on the right side of the cover with the factory speed clip holes. (Reference Picture 3)

Step 3: Insert the two factory speed clips into the factory holes. (Reference Picture 3)

Step 4: Drill through the provided hole in the center console cover using a 21/64ths drill bit. (Reference Picture 4)

Step 5: Install speed clip.

Step 6: Move to the driver side and place center console covers identical to the passenger side. There are no factory speed clips you need to remove on the driver side.

Step 7: Drill through the provided holes in the center console covers using a 21/64ths drill bit. (Reference picture 5)

Step 8: Install the last four speed clips provided in kit.