

Can-Am X3 Down-Fire Boxes

Compatible with 2019+ 4 Seat Can-Am X3 models & 2017-2018 2 Seat Models


NOT COMPATIBLE WITH 2019+ 2 SEAT MODELS

Parts List: One Down-Fire Sub Box, Three Button Head Bolts with Nylon Nuts, Three Foam Pads, Eight 1" Philips Head Screws

Need Help? Call Tech Support: (480)-616-2299

Email: info@utvstereo.com

Go to utvstereo.com for colored installation pictures & YouTube videos.

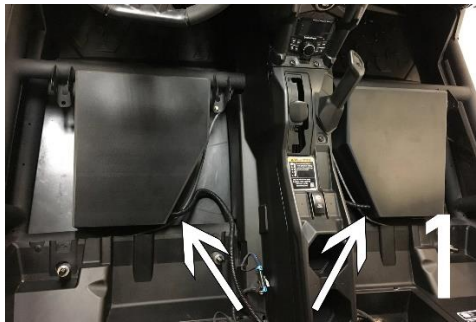

INSTRUCTIONS

Step 1: Drill a hole on the side of the sub box that will be facing the center console when the box is installed. (This hole will be used for speaker wire) (Reference picture 1)

Step 2: Tie a knot 2 feet from the end of the speaker wire.

Step 3: Apply silicone to the knot.

Step 4: Feed speaker wire through the hole of the sub box until the knot presses tight up against the hole.

Step 5: Connect speaker wire to the sub.

Step 6: Apply silicone to the outside edge of the sub woofer and place the sub into the sub box.

Step 7: Pre-drill box for screws.

Step 8: Install provided screws to mount the sub to the sub box.

Step 9: Remove driver or passenger seats. (Depeding on which sub box you've ordered)

Step 10: Install sub box inside the vehicle and center. (Make sure sub box isn't touching any metal tubing)

Step 11: Drill 3 holes through the provided legs of the sub box and through the floor panel.

Step 12: Apply the provided foam pads underneath the legs of the sub box.

Step 13: Install bolts. The bolts need to come up from underneath the box. Install washers & nuts.