



CAN-AM® DEFENDER OVERHEAD SPEAKER ADAPTERS

PART #: UTVS-DEF-OSA




1
REMOVE THE 8 SCREWS IN THE PLASTIC ROOF PANEL THEN REMOVE PANEL



2
REMOVE THE 6 SCREWS IN THE ROOF LINER




3
REMOVE THE ROOF LINER
**DO NOT LOSE THE FOAM PIECES. YOU CAN REATTACH THEM IF NEEDED*

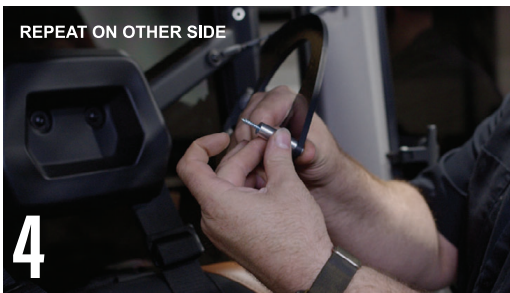

4
REPEAT ON OTHER SIDE
RUN THE SCREW THROUGH THE MOUNT AND ADD THE SPACER ON BACK



5
REPEAT ON OTHER SIDE
ATTACH THE MOUNT TO THE PLASTIC PILLARS ON THE ROOF

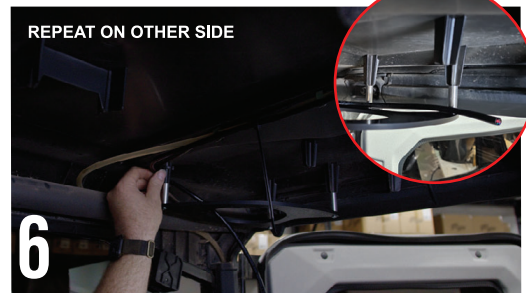

6
REPEAT ON OTHER SIDE
RUN YOUR SPEAKER WIRES ALONG ROOF AND SECURE WITH ZIPTIES
**KEEP THE SPEAKER WIRE ON TOP OF THE MOUNT, SO YOU CAN EASILY GRAB IT ONCE HOLE IS CUT*



7
REATTACH THE ROOF LINER AND PLASTIC PANEL



8
REPEAT ON OTHER SIDE
CAREFULLY CUT OUT THE HOLE FOR THE SPEAKER
**CUT A SMALL NOTCH SO YOU CAN SEE WHERE TO CUT USING THE MOUNT AS A GUIDE*



9
REPEAT ON OTHER SIDE
PULL THE SPEAKER WIRE THROUGH THE NEW HOLE AND STRIP THE SHEATH TO EXPOSE THE RGB AND POWER WIRE



10
REPEAT ON OTHER SIDE
YOU CAN PLACE A SCREW INTO THE MOUNT TO MARK THE LOCATION OF THE HOLE



11
REPEAT ON OTHER SIDE
MAKE ALL YOUR CONNECTIONS TO THE SPEAKER (RGB & POWER)



12
REPEAT ON OTHER SIDE
MOUNT THE SPEAKER AND SECURE IT WITH THE INCLUDED SCREWS