

UTV Stereo Signature Series Cage Mount Pods


Compatible with all Can-Am X3 and Polaris RZR

Parts List: 1 Set of 1.75" or 1.85" clamps (depending on vehicle) & 2 rubber grommets

Need Help? Call Tech Support: (480)-616-2299

Email: info@utvstereo.com

Go to utvstereo.com for colored installation pictures & YouTube videos.

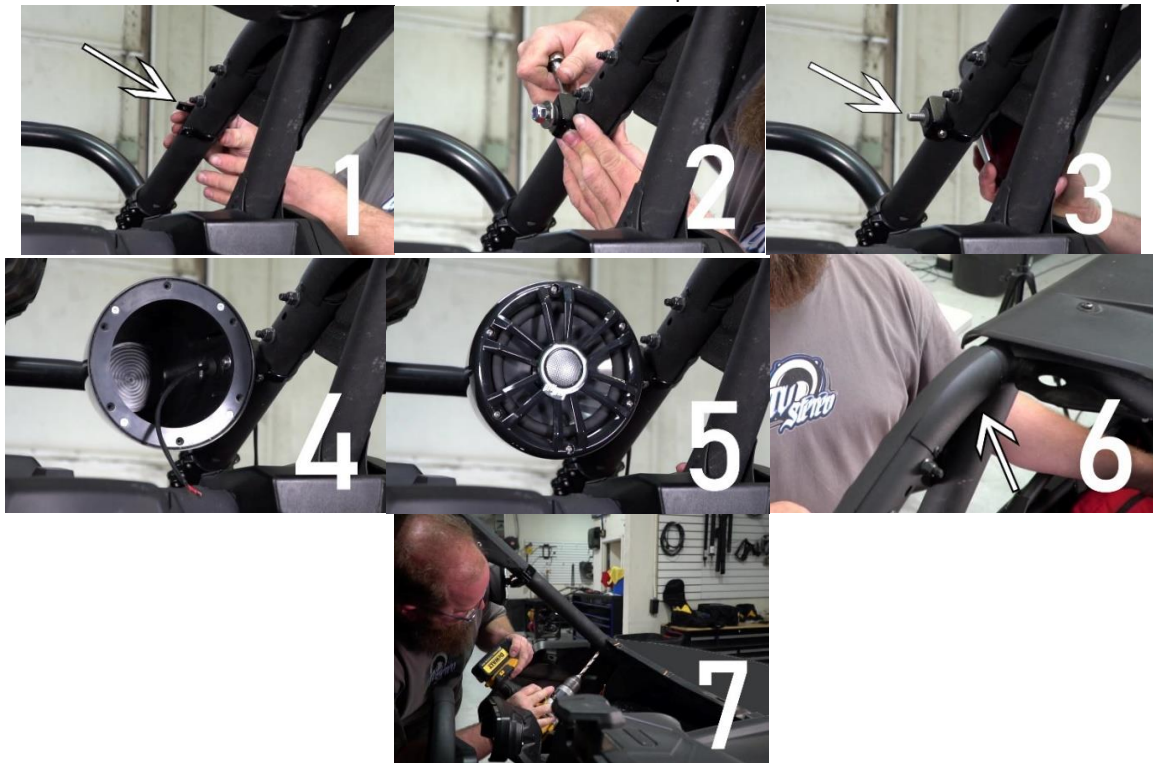

Instructions:

Step 1: Install Axia clamp ring around the cage. (Reference Picture 1)

Step 2: Place the body of the Axia clamp through the opening of the clamp ring and install the provided nut and bolt that come with Axia clamp. **KEEP CLAMP LOOSE FOR ADJUSTMENT.** (Reference Picture 2)

Step 3: Remove bottom nut from the body of the Axia clamp and install the cage pod over the threads by securing it with the Axia clamp nut. (Reference Picture 3 & 4)

Step 4: Feed speaker wire through the cage pod. (Reference Picture 4)

Step 5: Connect speaker wire to the speaker. (Red wire is positive, black ground wire is negative)

Step 6: Mount speaker to speaker pod with the 6 screws provided with the speaker. (Reference Picture 5)

Step 7: Feed speaker wire through the cage. If you have a factory cage there is a hole to feed the wire through. (Reference Arrow of Picture 6) If you have an after-market cage, you will need to drill a hole using a 9/64ths drill bit. Mark and drill hole on the side of the cage where the speaker wire comes out of the speaker pod.

Step 8: Move up to the front of the vehicle and drill a hole for wires to feed out of the cage. Use a 9/64ths drill bit and make sure the hole is below the level of the plastics. (Reference Picture 7)

Step 9: Feed speaker wire through the hole you've just drilled and connect speaker wire to amplifier.