

**Brookstone®**

*Mach IX*

Installation Manual

**Brookstone®**



# Hello.


Congratulations on purchasing your new Brookstone BK-750/MACH IX.

At Brookstone, we understand every body is different and have carefully designed our massage chair with that in mind. But enough about us, this is about you. Learning how to use your new chair is simple (we designed it that way).

So let's get started.

## MACH IX Assembly Instructions


**1** MACH IX arrives in 2 boxes.




**2** **Open box 1 and remove all contents.** Remove the packing materials. Take the chair out of the box. Collect all the accessories and put them aside.



**3** **Remove the cotter pins and bolts from the chair base.** Locate the two cotter pins and bolts on the chair base. Take them off and put aside the chair base. Then get rid of the cable ties to release the link rod.

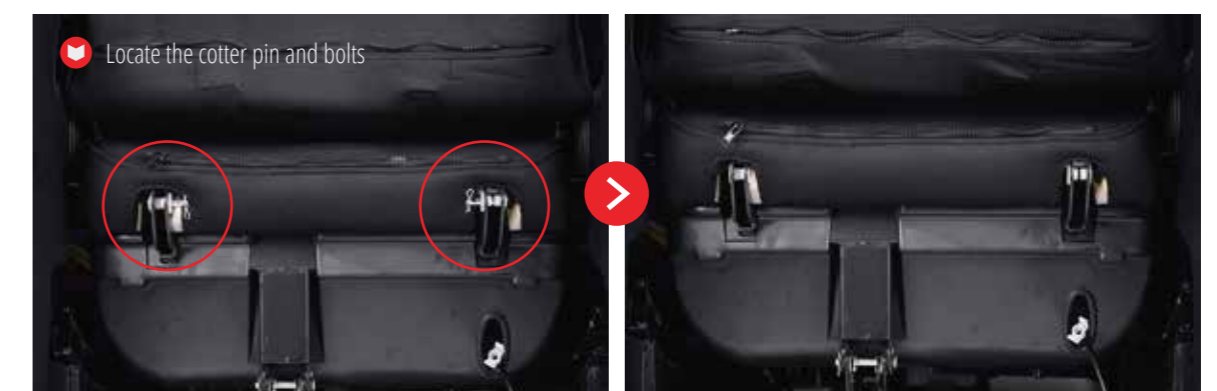


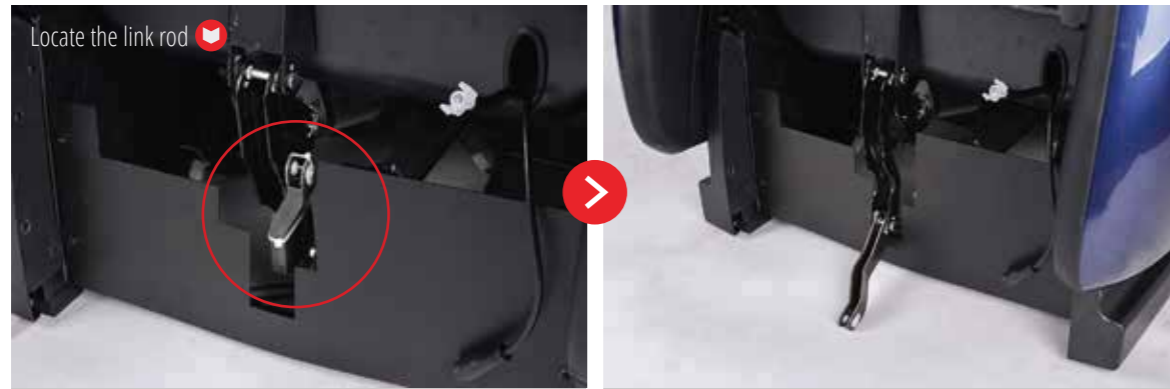

**4 Open box 2.** Take out footrest and remove the cotter pin and bolt and put aside the chair base.



**5 Connect footrest to base.** Move the footrest close to the chair. Engage the link rod with the footrest joint, then insert the bolt and lock with the cotter pin.

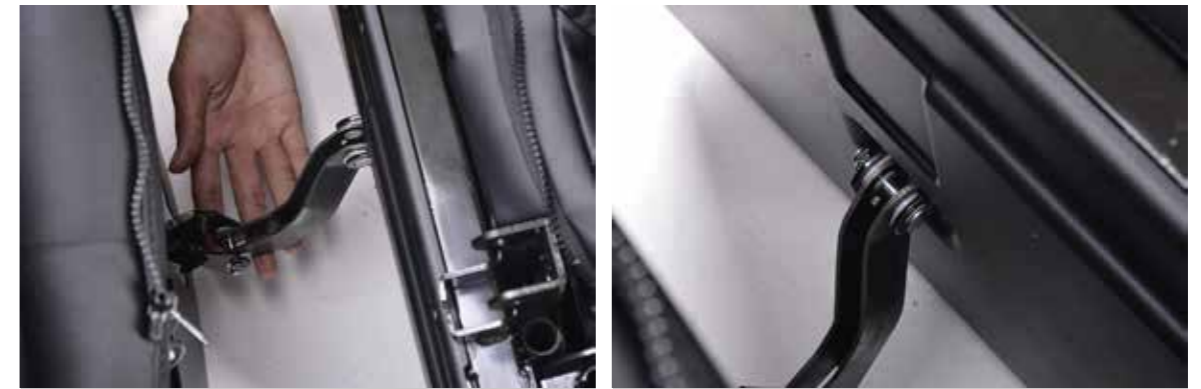

**6 Connect wires in footrest.** Connect footrest wire connector and screw the caps tight, then connect the air hose.  
**Caution:** After the wire connector have been connected the cap must be screwed tight.



**7 Fully connect the footrest to the base.** Move the footrest closer to the chair. Engage the joints of the footrest and base. Lift footrest up to align the holes on the joints, then insert the bolt and lock it with cotter pin (that you had set aside).






**8** Zip the zippers between seat pad and base, zip the zipper between seat pad and footrest cushion.



**9** Place the remote control into the holder.

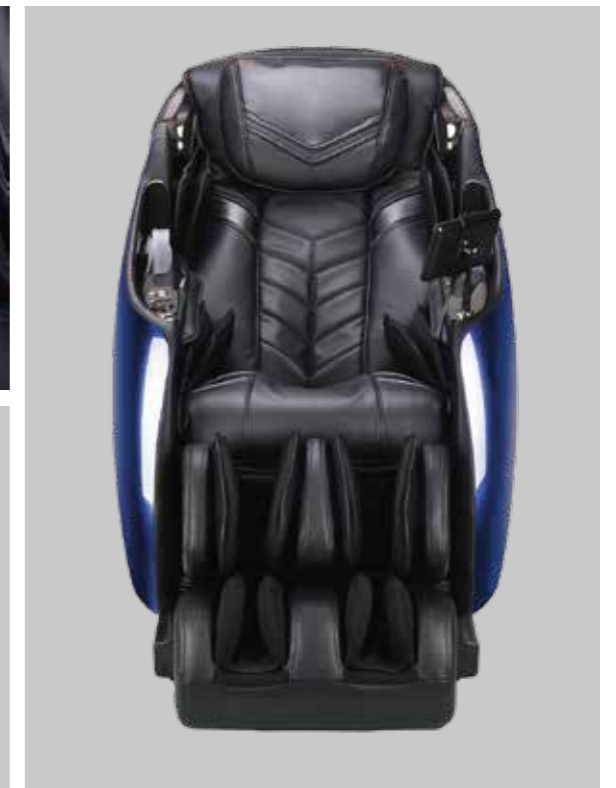

**10 Turn on the chair.** Connect the chair to a power supply and turn on the power switch. The chair will now be ready to start.

