


# 2001 Civic Front With Stock Shock

- ① KNOCK OFF GOLD CAP OFF SHOCK.
- ② SLIDE THREADED TUBE AND GOLD NUT ONTO SHOCK (RECESS UPWARD). REPLACE GOLD CAP AFTER HARDWARE IS IN PLACE.
- ③ DISCARD STOCK BUMP STOP AND DUST BOOT. REPLACE WITH PROVIDED BUMP STOP.
- ④ PLACE FACTORY BEARING INTO PROVIDED NEW ALUMINIUM SPRING PERCH.

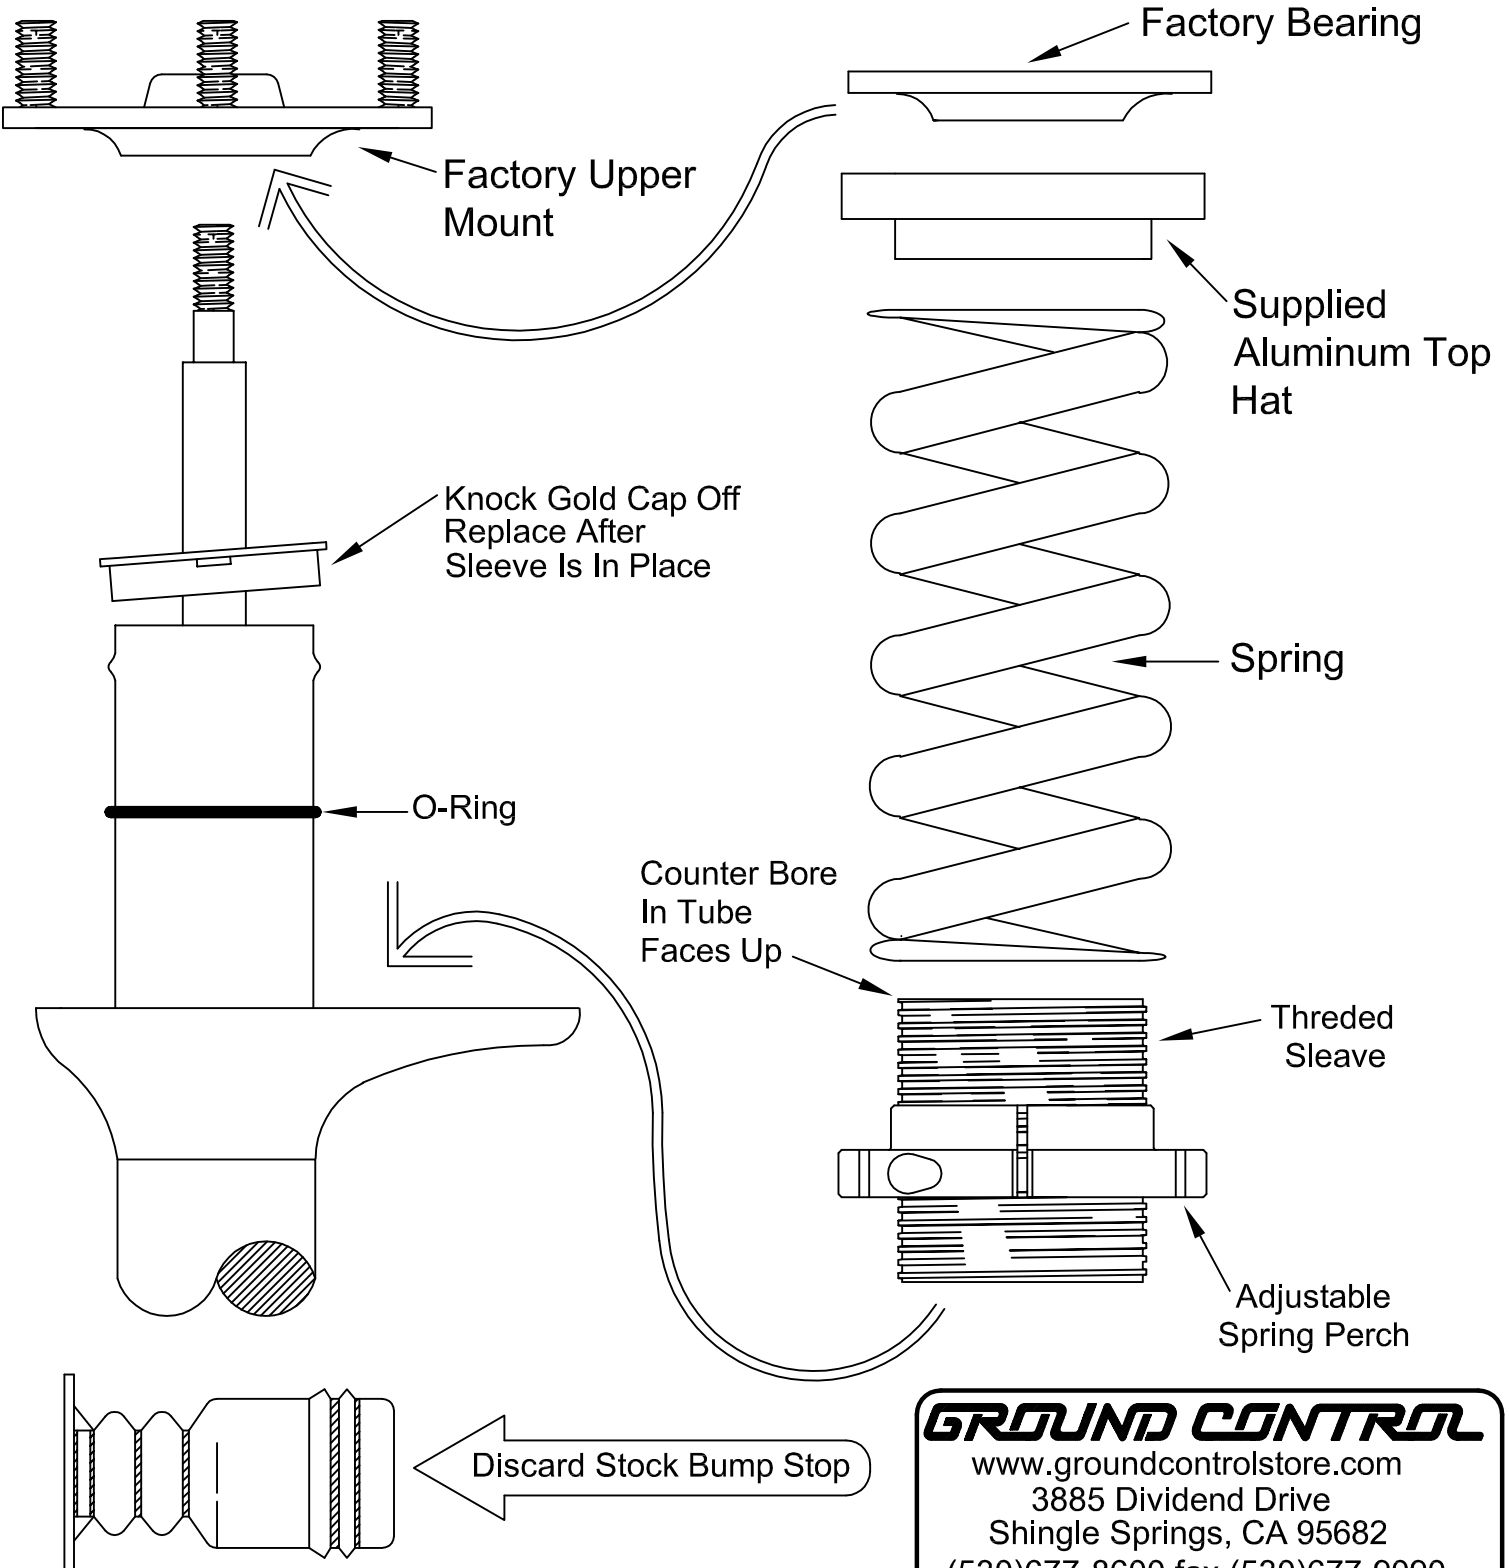

**GROUND CONTROL**  
www.groundcontrolstore.com  
3885 Dividend Drive  
Shingle Springs, CA 95682  
(530)677-8600 fax (530)677-9090