


2003 CIVIC FRONT KONI

- ① KNOCK OFF GOLD CAP OFF SHOCK.
- ② SLIDE THREADED TUBE AND GOLD NUT ONTO SHOCK (RECESS UPWARD). REPLACE GOLD CAP AFTER HARDWARE IS IN PLACE.
- ③ DISCARD STOCK BUMP STOP AND DUST BOOT. REPLACE WITH PROVIDED BUMP STOP.
- ④ PLACE FACTORY BEARING INTO PROVIDED NEW ALUMINUM SPRING PERCH.

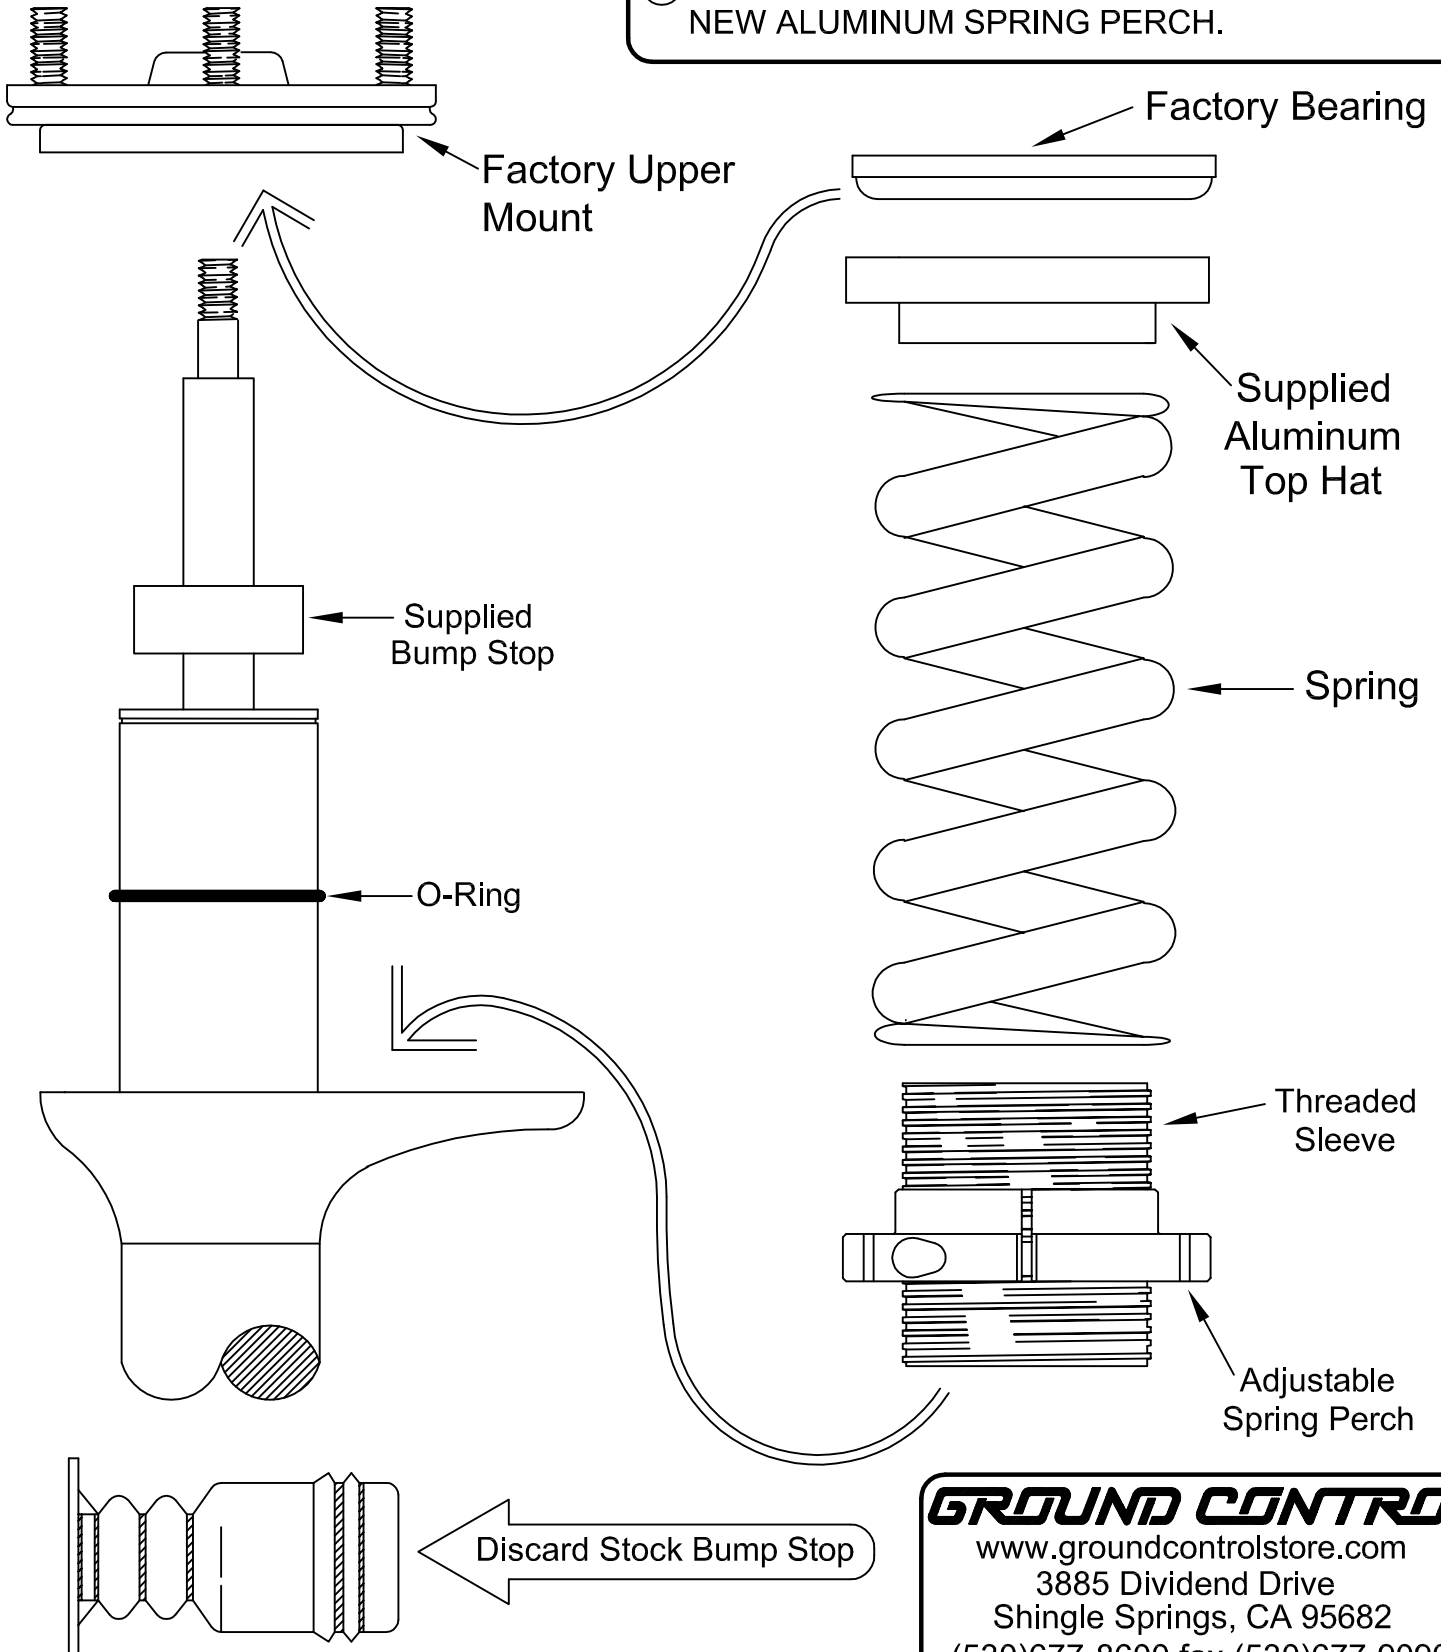

GROUND CONTROL
www.groundcontrolstore.com
3885 Dividend Drive
Shingle Springs, CA 95682
(530)677-8600 fax (530)677-9090