


# Audi 4000 Quattro Front

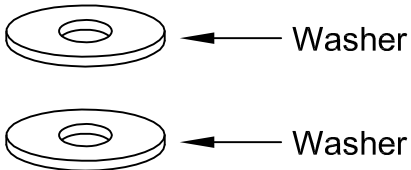

Aluminum Top Hat  
(Optional To Use  
Nylon Ties To  
Hold Springs)

Set Threaded Collar  
And Perch Directly  
Onto The Steering Arm

Threaded Collar  
And Perch  
(Flat Edge To Outside  
(Toward Tire))

Spring

2-Piece  
Adjuster

Strut Top Nut  
Will Fit Into Recess In  
Top Of Threaded Collar  
After Threaded Collar  
Is Installed

Weld  
From  
Lower Side

**GROUND CONTROL**  
[www.groundcontrolstore.com](http://www.groundcontrolstore.com)  
 3885 Dividend Drive  
 Shingle Springs, CA 95682  
 (530)677-8600 fax (530)677-9090