
## BMW E30 FRONT

THIS INFORMATION NEED ONLY BE USED WHEN MODIFYING HOUSING TO FIT GROUND CONTROL STRUT INSERTS DO NOT USE FOR STOCK STRUTS.

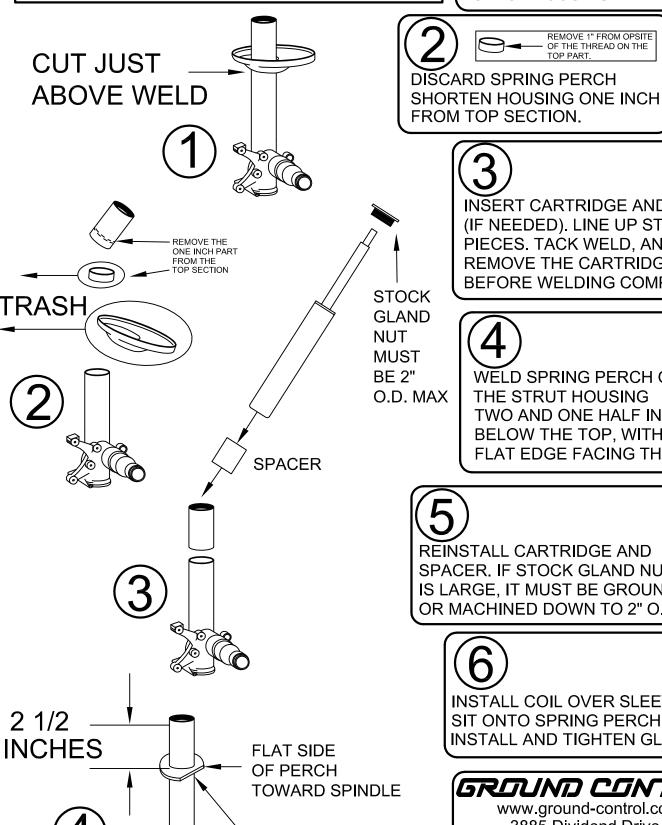

REMOVE STOCK SPRING PERCH BY CUTTING THROUGH THE STRUT HOUSING.



WELD TUBE FIRST

THEN SPRING PERCH

INSERT CARTRIDGE AND SPACER (IF NEEDED), LINE UP STRUT PIECES. TACK WELD, AND REMOVE THE CARTRIDGE BEFORE WELDING COMPLETELY.

WELD SPRING PERCH ONTO THE STRUT HOUSING TWO AND ONE HALF INCHES BELOW THE TOP, WITH THE FLAT EDGE FACING THE TIRE.

SPACER. IF STOCK GLAND NUT IS LARGE, IT MUST BE GROUND OR MACHINED DOWN TO 2" O.D.

> INSTALL COIL OVER SLEEVE TO SIT ONTO SPRING PERCH. INSTALL AND TIGHTEN GLAND NUT.

## GROUND CONTROL

www.ground-control.com 3885 Dividend Drive Shingle Springs, CA 95682 (530)677-8600 fax (530)677-9090