

CADILLAC CTSV FRONT LOWER MOUNT

1

REMOVE UPPER CAP

2



REMOVE STOCK
SPRING PERCH

3

INSTALL GROUND CONTROL
SLEEVE AND ADJUSTER NUT

4



VISUALLY CONFIRM SNAP RING
IS CAPTURED AND PERCH IS
SEATED WELL AFTER ASSEMBLY

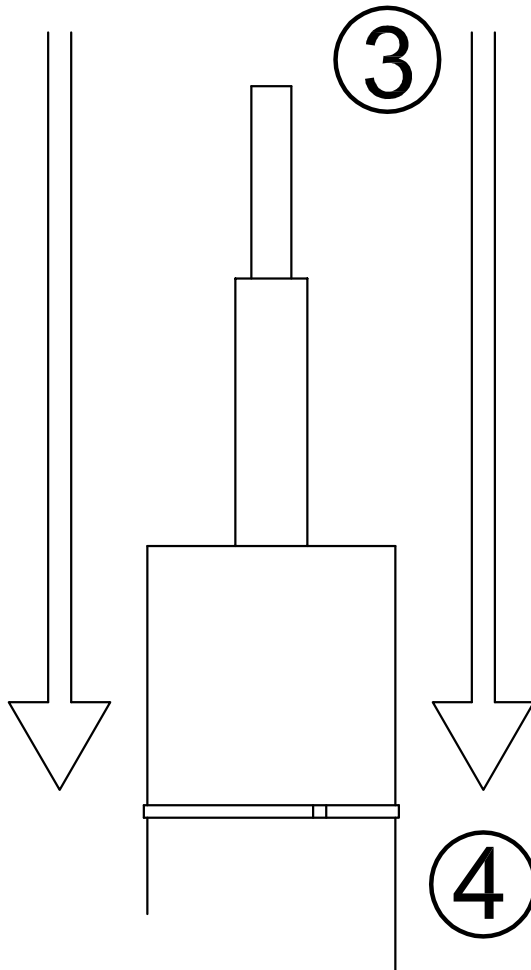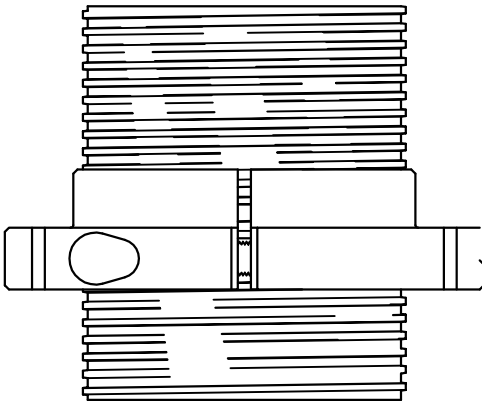

1

2

4

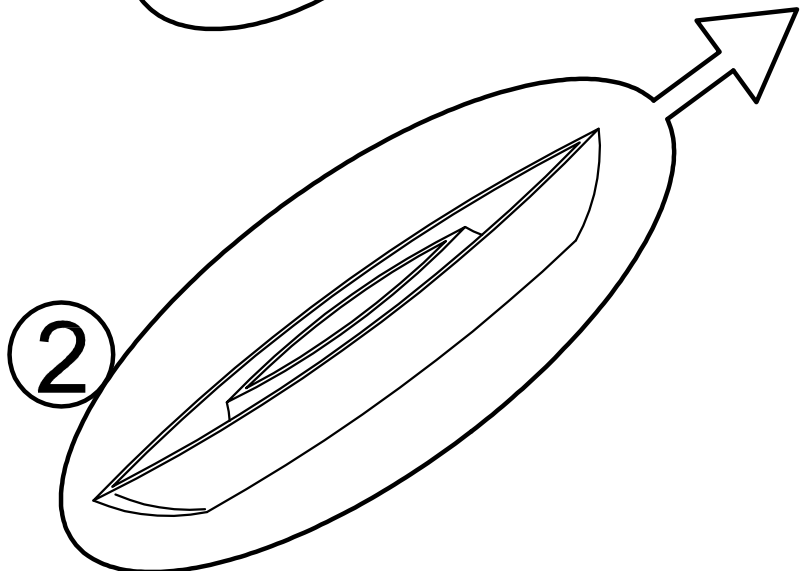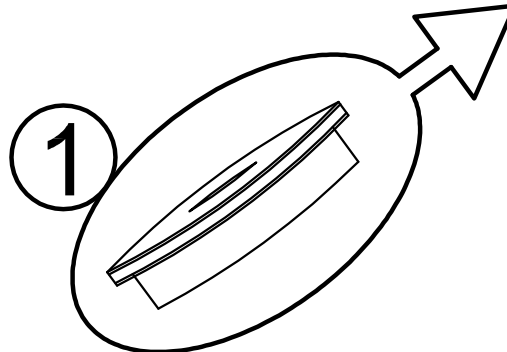

GROUND CONTROL

www.groundcontrolstore.com

3885 Dividend Drive

Shingle Springs, CA 95682

(530)677-8600 fax (530)677-9090