


BMW E36 KONI INSERT

Koni May Need To Be
Removed And Then
Reinstalled Into Housing
After Red Threaded
Sleeve Is Installed.

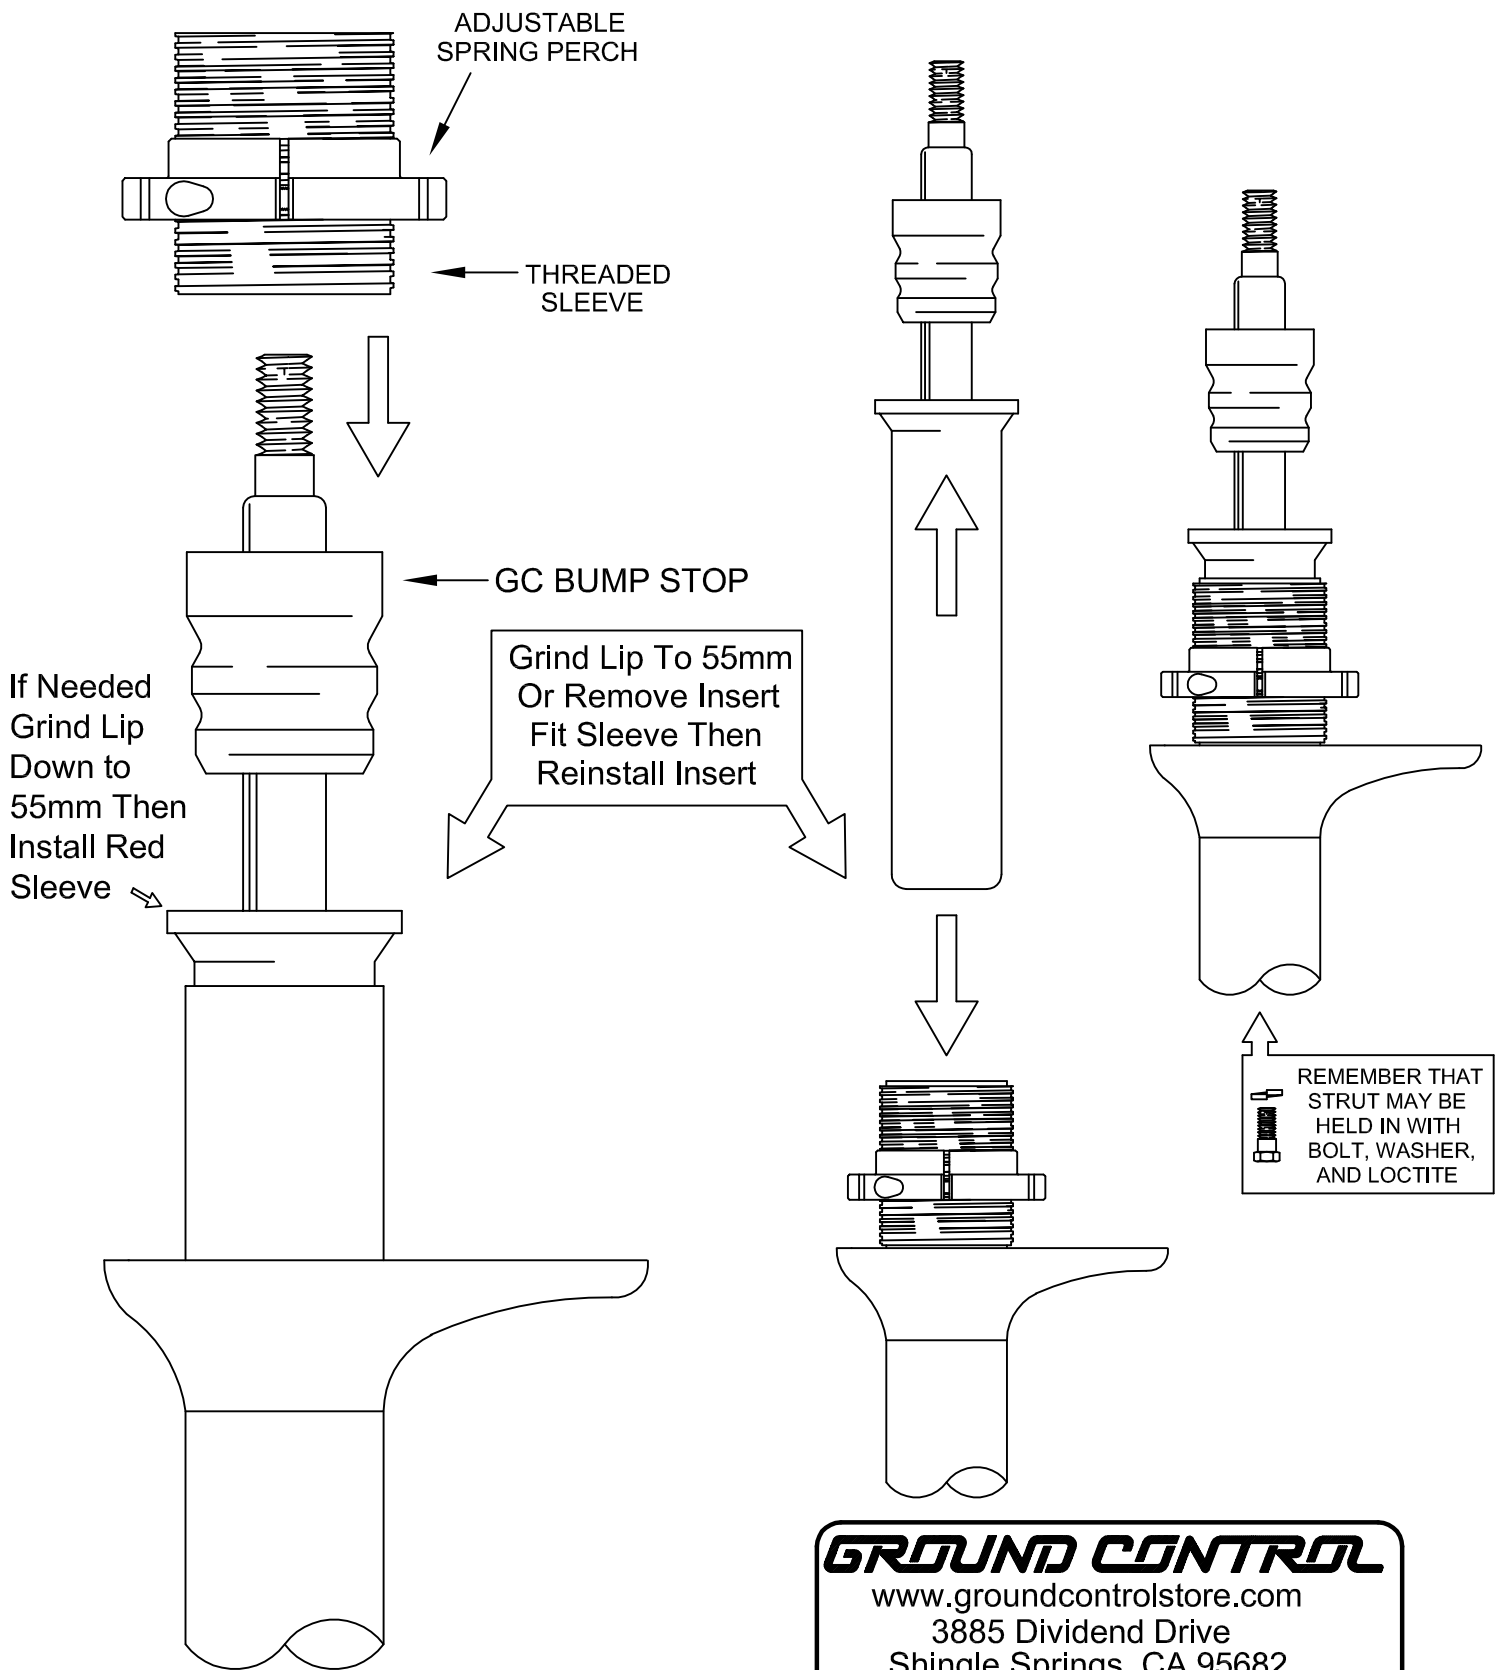

GROUND CONTROL

www.groundcontrolstore.com
3885 Dividend Drive
Shingle Springs, CA 95682
(530)677-8600 fax (530)677-9090