


BMW E46, E46 M3 & MZ4 FRONT SWAY BAR

LINK BUSHING FITS INTO HOLE IN TAB ATTACHED TO STRUT HOUSING SO ROD END WITH STUD FITS TIGHTLY NUT AND WASHER ON OTHER SIDE OF TAB HOLD ROD END WITH STUD FIRMLY TO HOUSING

BUSHING AND BAR ARE SANDWICHERD BETWEEN BRACKET AND BACK UP PLATE THEN FASTENED TO CAR ON STUDS AND HELD INTO PLACE WITH NUTS

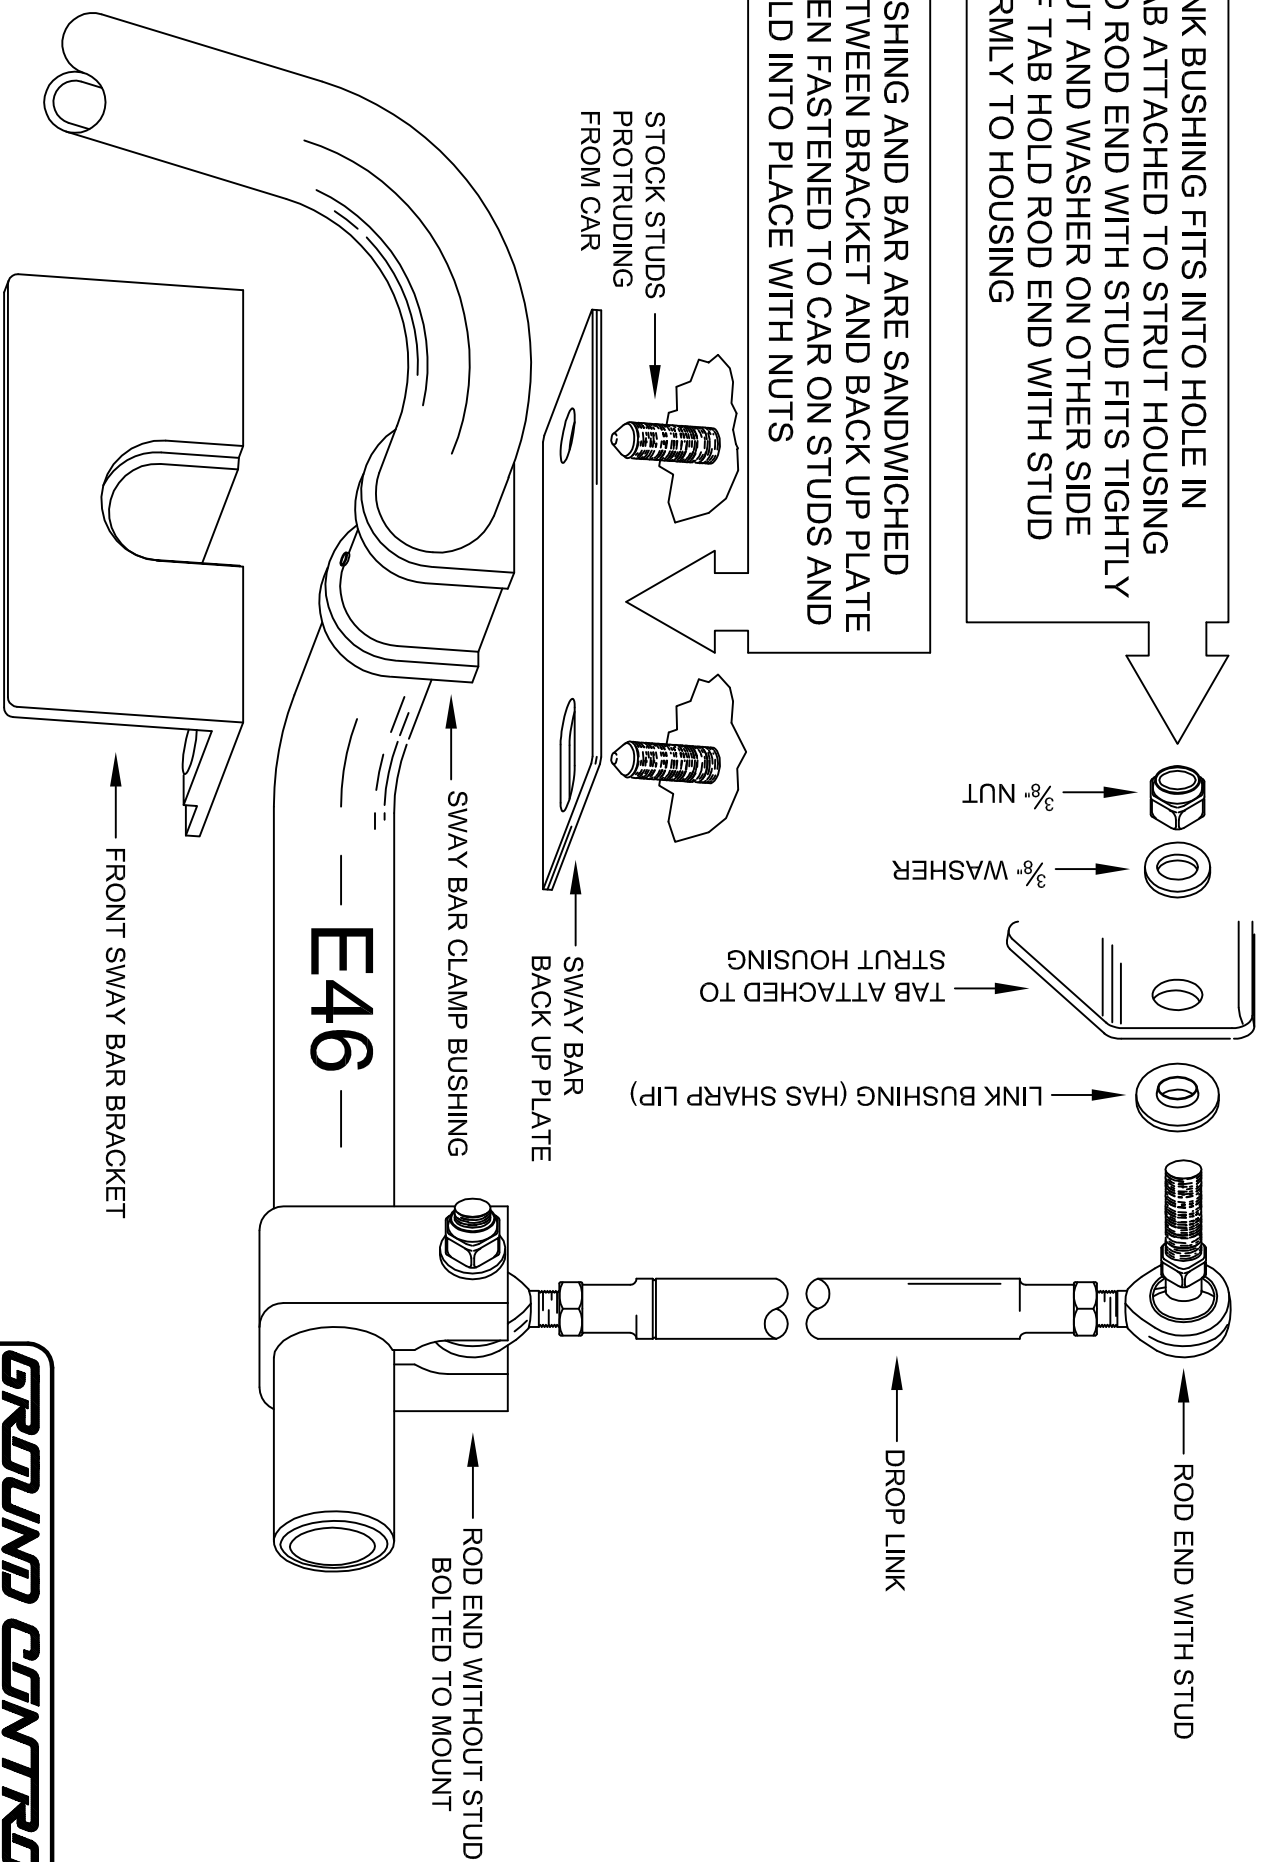

GROUND CONTROL

www.groundcontrolstore.com

(530)677-8600 fax (530)677-9090