

2019+ Chevy Silverado Mud Flap Installation Instructions


FRONT HARDWARE

- | | |
|-----|----------------------|
| (2) | Clamp Brackets |
| (4) | Large Fender Washers |
| (4) | Split Lock Washers |
| (4) | 1/4-20 Nuts |
| (6) | #6 x 1" Hex screws |
| (6) | Small Fender Washers |

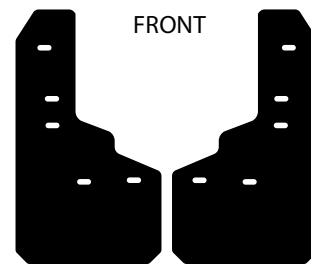

REAR HARDWARE

- | | |
|-----|----------------------|
| (2) | Clamp Brackets |
| (4) | Large Fender Washers |
| (4) | Split Lock Washers |
| (4) | 1/4-20 Nuts |
| (4) | #6 x 1" Hex Screws |
| (4) | Small Fender Washers |

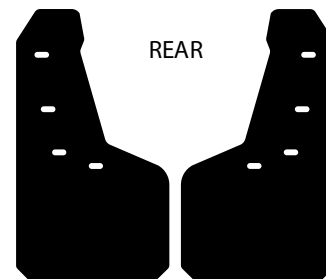


Front Mud Flap Installation Instructions

Important: Turning front wheels is recommended to allow access for installation

NOTE: Flaps can be installed with or without OEM plastic rock guard. Removing this rock guard, however, exposes a mounting hole on outside of fender.

FIGURE 1

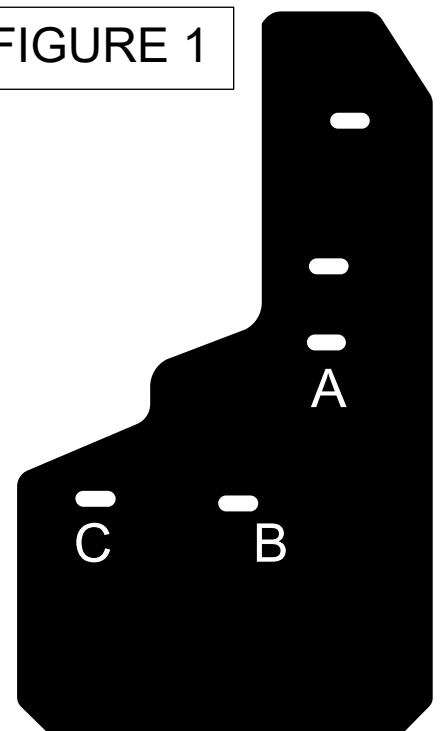

1. Remove Factory Screws (FIGURE 2)
2. Start by attaching Clamp Bracket to flap at top 2 mounting locations on the flap (FIGURE 1, 3, 4 & 5) using large fender washers, lock washers & nuts (NOTE: Leave bracket loose on flap). Next attach flap to fender well factory location B using hex screw and mall fender washer.
3. Once attached at location B, fasten clamp bracket to fender well lip by making sure "clamping" portion of bracket is 'pinching' the lip. (NOTE: Tighten slightly to allow adjustment and alignment while fastening at remaining locations A & C). Check alignment with level and tighten all fasteners when desired vertical and horizontal alignment is complete. NOTE: DO NOT OVERTIGHTEN NUTS ON CLAMP BRACKET STUDS AS CROSSTHREADING MAY OCCUR.
4. Repeat above steps on opposite side.

FRONT

FIGURE 2



FIGURE 3



FIGURE 4



FIGURE 5

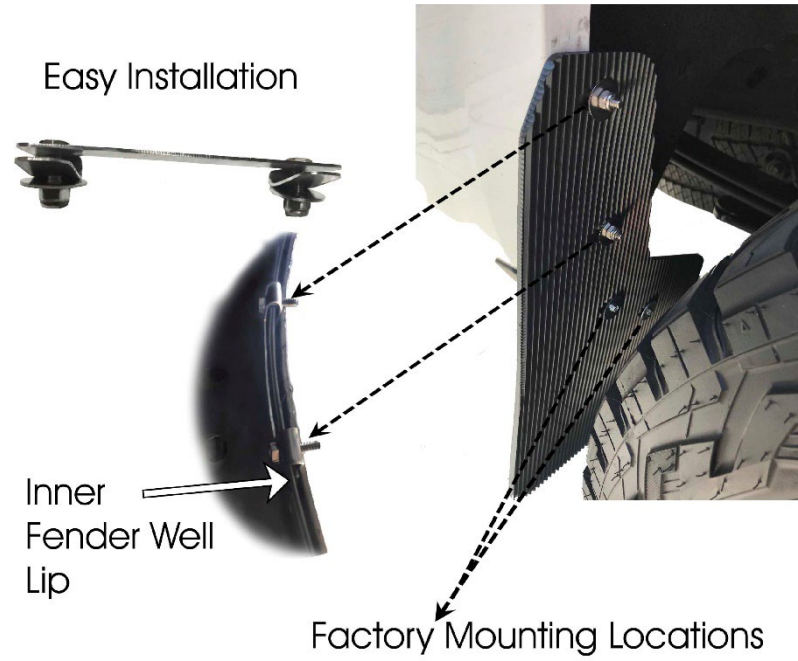


FIGURE 6



REK GEN
No Drill Clamping Bracket

REAR

Rear Flap Installation Instructions

Important: It is recommended to read through all instructions prior to starting install

1. Remove Factory screws at 2 locations (See corresponding locations A and B in FIGURE 7)
2. Start by attaching Clamp Bracket to flap (Same as front install) at top 2 mounting locations on flap using large fender washers, lock washers & nuts (NOTE: Leave bracket loose on flap). Next attach flap to fender well factory location B FIGURE 7 using hex screw and small fender washer.
3. Once attached at location B, fasten clamp bracket to fender well lip by making sure “clamping” portion of bracket is ‘pinching’ the lip. (NOTE: Tighten slightly to allow adjustment and alignment while fastening at remaining location A). Check alignment with level and tighten all fasteners when desired vertical and horizontal alignment is complete. NOTE: DO NOT OVERTIGHTEN NUTS ON CLAMP BRACKET STUDS AS CROSSTHREADING MAY OCCUR.
4. Repeat above steps for opposite side.

FIGURE 7

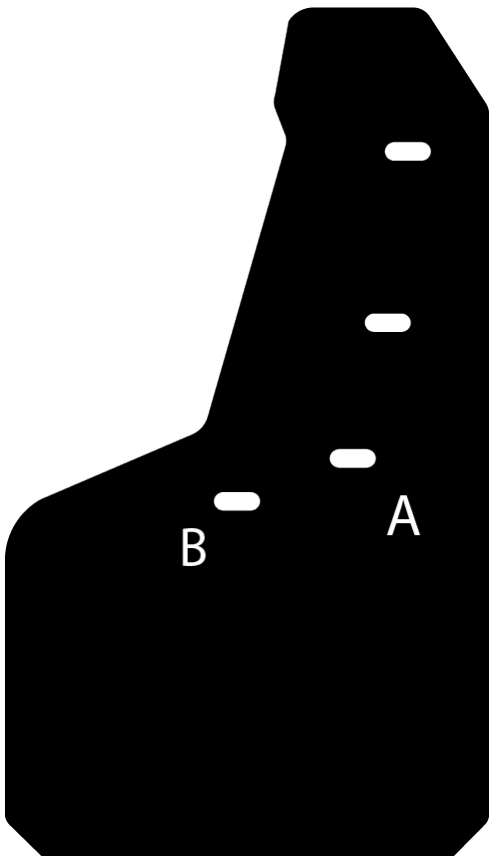


FIGURE 8

