


CHEVY "15+ (1500, 2500, 3500)RG FLAPS INSTALLATION INSTRUCTIONS (Rear ± Front)

PACKAGE CONTENTS:

REAR	FRONT
(2)- Clamp Brackets	(2) - Spacers
(4) - Screws	(6) - Screws
(4)- 1/4-20 Lock Nuts	(8) - Washers
(8) - Washers	

REAR FLAPS INSTALLATION

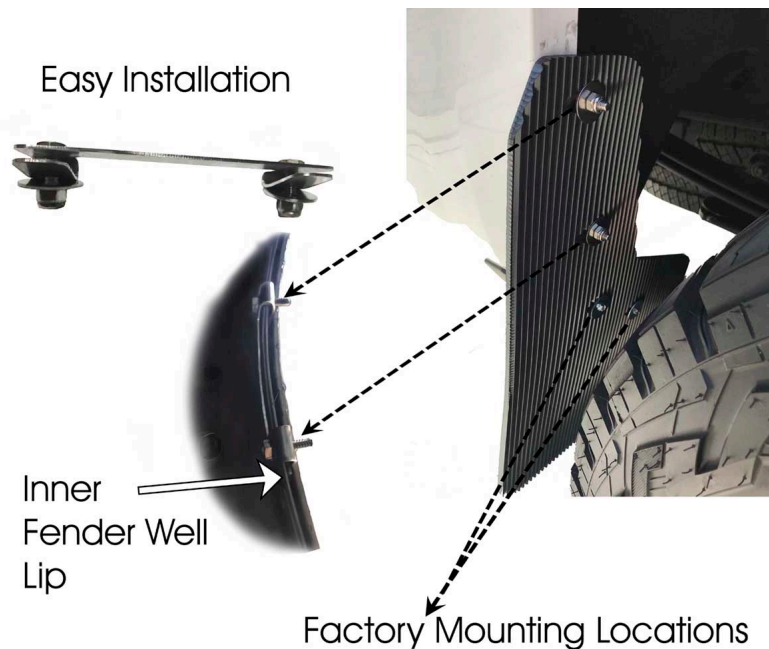

REK GEN No Drill Clamping Bracket


1. Install Lower portion of flap first using Factory mounting locations (Use Factory Screws if available otherwise use screws & washers included in package)

NOTE: Do not fully tighten screws until all hardware is attached and flaps are aligned as desired.)

2. Next pull top portion of flap away from fender and attach clamp bracket onto inner lip. Slide clamp bracket up or down to align 2 clamp bolts with holes in flap. Place washers and locknuts onto bolts and tighten to secure clamp bracket to lip.

Adjust flap as desired and tighten all fasteners. Repeat install on opposite side.

FRONT FLAPS INSTALLATION

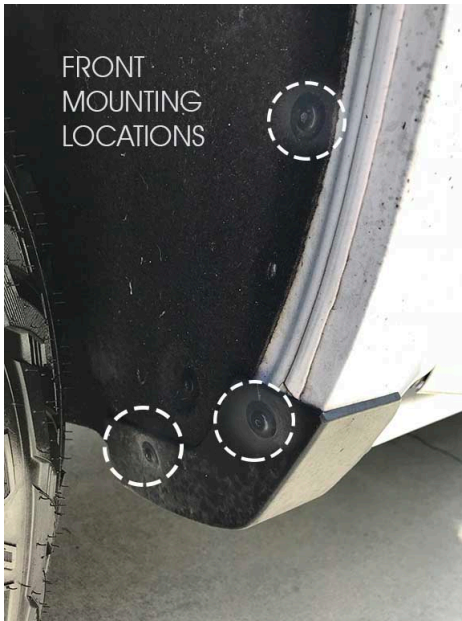

1. Locate Factory Mounting locations on fender well that correspond to the 3 slotted holes in flap(Use Factory screws if available, otherwise use screws and washers included in package)
2. Beginning with the top hole in flap, attached screw, washer & spacer as shown. Next fasten flap to the top mounting location on fender well. (Note: do not fully tighten screw until all fasteners are attached.)
3. with the top of flap attached to well fasten flap at remaining 2 locations. Once aligned as desired tighten all fasteners.

Adjust flap as desired and tighten all fastener. Repeat install on opposite side.

Note: These are general mounting guidelines. installation may vary for different model and year vehicles.