

REKGEN

VEHICLE PROTECTION

2021+ Ford Bronco Mud Flap Installation Instructions

FRONT HARDWARE KIT

| QTY | DESCRIPTION | IMAGE |
|-----------|---------------------------------|---|
| 6 | PLASTIC U CLIPS |  |
| 2 | SMALL SPACERS - 1/2" |  |
| 2 | MEDIUM SPACERS |  |
| 2 | LONG SPACERS |  |
| 2 | #14 X 1-1/2" HEX TAPPING SCREWS |  |
| 2 | #14 X 2" HEX TAPPING SCREWS |  |
| 2 | #14 X 2-1/2" HEX TAPPING SCREWS |  |
| 2 | PLASTIC PUSH RETAINERS |  |
| 2 | #8 X 1" SCREWS |  |
| 2 | SMALL WASHERS |  |
| 12 | LARGE FENDER WASHERS |  |

FRONT INSTALLATION INSTRUCTIONS

| | |
|--------|---|
| STEP 1 | Remove Factory Push Clips (Shown in FIGURE 1) from fender well liner at locations A, B, C & D using a flat head screwdriver and pliers. |
| STEP 2 | Next pull liner back to expose 3 tabs at locations A, B, & C (FIGURE 2). |
| STEP 3 | Slide plastic U-Clips over tabs w flat side of U-Clip on top(FIGURE 3) Push fender liner back in place |
| STEP 4 | At location D, insert supplied plastic push retainer. This retainer will receive #8 x 1" Hex screw. |
| STEP 5 | Pre-assemble Screws, Spacers and Washers to flap at locations A, B & C. (See FIGURE 5 & 6) |
| STEP 6 | Begin install by fastening flap at inside Location D using #8 x 1" hex screw and small washer (screw into plastic push retainer previously installed at Step 4) using 5/16" Ratchet. Do not tighten completely to allow for adjustment. |
| STEP 7 | Next align pre-assembled screws at locations A, B, & C with 3 corresponding holes in liner. Fasten using 3/8" Ratchet. Do Not tighten completely to allow for adjustment (FIGURE 7). |
| STEP 8 | Using a level, align flaps as desired and tighten all fasteners. Repeat above steps on opposite side |

FIGURE 1



FIGURE 2



FIGURE 3

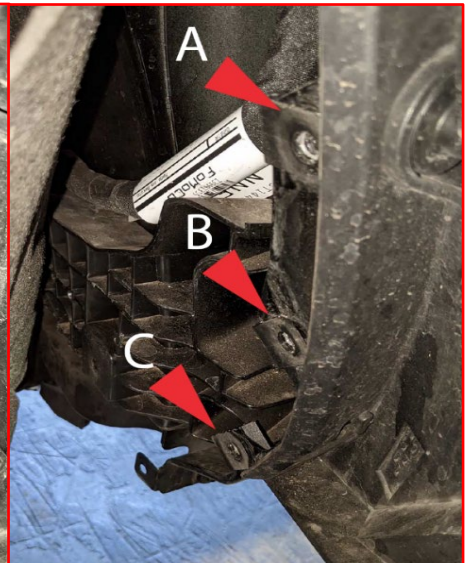


FIGURE 4

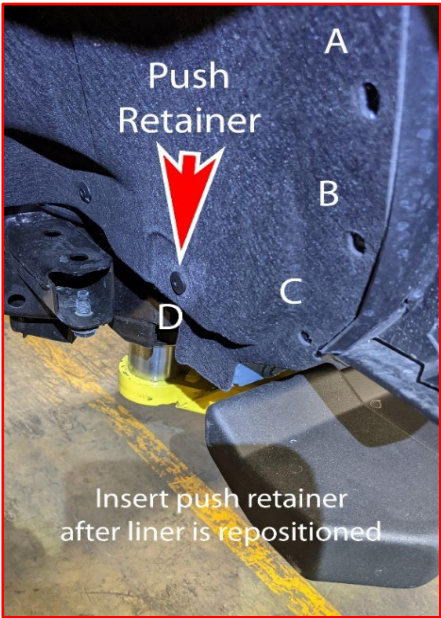


FIGURE 5

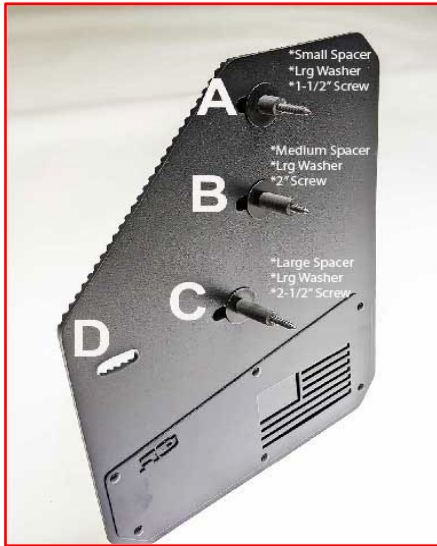


FIGURE 6

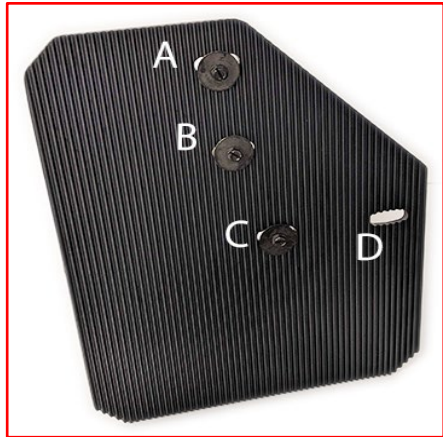


FIGURE 7









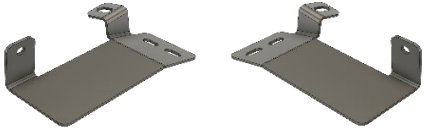


FIGURE 8

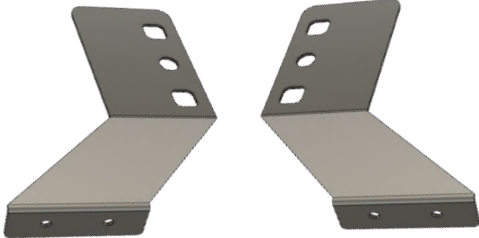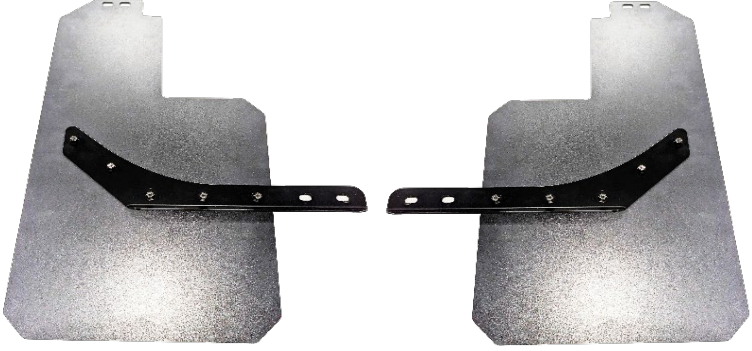

2021+ Ford Bronco Mud Flap Installation Instructions

REAR HARDWARE KIT

| QTY | DESCRIPTION | IMAGE |
|--------------|----------------------------------|--|
| 2 | M5 U NUTS |  |
| 2 | M5 HEX HD BOLT |  |
| 2 | #10 X 3/4" Small washers |  |
| 8 | ALLEN HEAD SCREWS |  |
| 8 | 1/4" Small Washers |  |
| 8 | 1/4-20 Locknuts |  |
| 1 Set | Fender Brackets |  |
| 1 Set | Tow Bar Brackets |  |
| 1 Set | Flap Brackets (Pre-Installed) |  |

REAR INSTALLATION INSTRUCTIONS

| | |
|---------|--|
| STEP 9 | Remove Rear Fender Flare. Flare is secured by 5 rotating fender clip on inside of flare. (FIGURE 9, 10 & 11) Remove by rotating each clip counter clockwise. Once all are turned firmly pull outwards on the flare with both hands. |
| STEP 10 | Remove Factory push retainer & Factory M6 Bolt. (FIGURE 12) |
| STEP 11 | Attach U NUT . Pull away liner where push retainer was removed to locate metal tab. Place metal U NUT over tab aligning the hole in tab with hole in U NUT. FIGURE 13 & 14). |
| STEP 12 | Install Fender Bracket. Using removed M6 bolt attach flat section of bracket to fender. (FIGURE 15). Next fasten lower end of bracket with M5 Bolt & #10 Washer, by aligning slot in bracket with U NUT below liner and .(FIGURE 16 & 17) Tighten bolts to secure bracket in place. |
| STEP 13 | Attach Tow Bar Bracket to Flap Bracket. Assemble Tow Bar Bracket to Flap Bracket using 2 allen head screws, small 1/4" washers and locknuts. (FIGURE 18). NOTE: Fasten loosely until installation is complete. |
| STEP 14 | Remove Tow Bar. Remove tow bar by removing 2 factory bolts and large push retainer (FIGURE 19). |
| STEP 15 | Install Flap Assembly. Begin by attaching flap at Fender Bracket by aligning 2 slots at top of flap with 2 slots in bracket. Fasten using 2 allen head bolts, 1/4" washers and locknuts (FIGURE 20). NOTE: This first attachment secures flap assembly enough to facilitate final attachment at Tow Bar. |
| STEP 16 | Attach Flap assembly to Tow Bar. Attach Tow Bar Bracket by aligning holes in Tow bar bracket with holes in undercarriage. Next sandwich Tow Bar Bracket between undercarriage and Factory Tow Bar and fasten with Factory bolts and large push retainer (FIGURE 21 & 22). |
| STEP 17 | Check alignment of flap using small level and once desired alignment is reached Tighten all fasteners. REPEAT ABOVE STEPS ON OPPOSITE SIDE. |

FIGURE 9



FIGURE 10



FIGURE 11



FIGURE 12

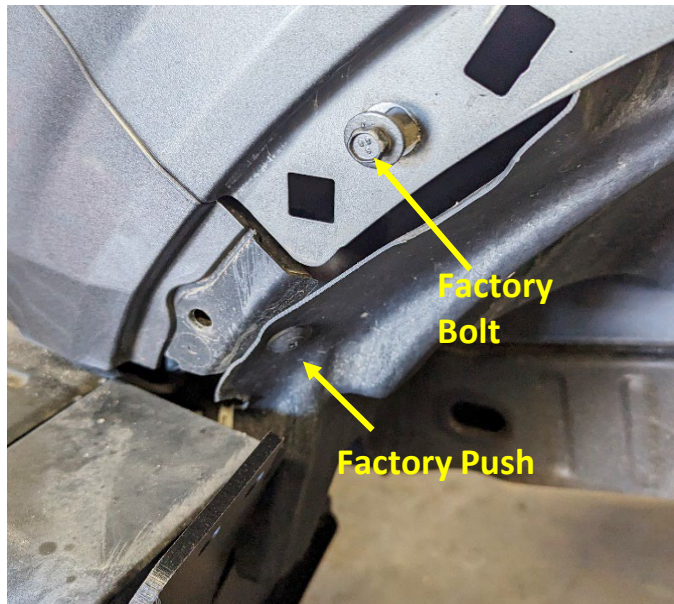


FIGURE 13



FIGURE 14



FIGURE 15



FIGURE 16



FIGURE 17



FIGURE 18

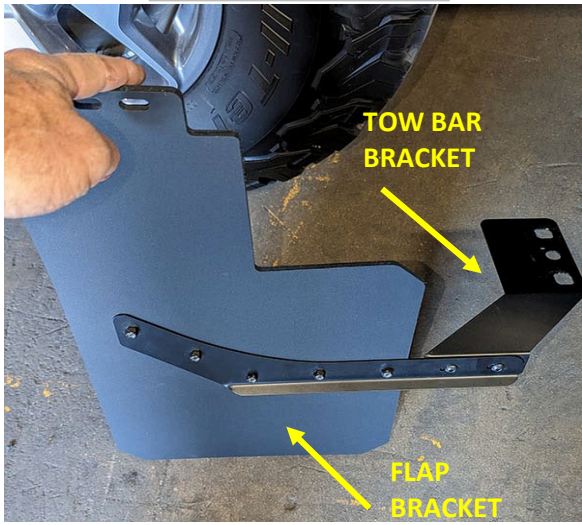


FIGURE 19



FIGURE 20



FIGURE 21



FIGURE 22

