



# Ford F-150

## 2015+ Sport Mud Guards

### Installation Instructions\*

\*Professional installation is recommended

#### CONTENTS: Front &/or Rear F-150 REKGEN MUD GUARDS+ HARDWARE

##### FRONT HARDWARE:

2-Clamp Brackets  
4-1/4-20 Bolts  
8-Washers  
4-Locknuts  
4-1/4-20 U-Clips

##### REAR HARDWARE:

2-Clamp Brackets  
4-1/4-20 Bolts  
8-Washers  
4-Locknuts  
2-1/4-20 U-Clips

##### TOOLS NEEDED:

-Ratchet w/ 7/16" & 7/32" socket or **Open End Wrenches**  
-Pliers and/or **Slotted Screw Driver**



#### Before beginning installation:

1. Read through assembly procedure before starting installation
2. Have necessary tools for installation
3. Make sure location for installation is clean and flat
4. Use of safety glasses & gloves is recommended
5. Verify contents of hardware packages from lists above

## Front Installation

1. Turn front wheels to facilitate installation of Mud Guard and Fasteners
2. Remove factory screws (using 7/32" socket or wrench) from bottom fender well lip to expose factory mounting holes using pliers and/or slotted screw driver.
3. Pull away plastic trim & place provided U Clips over factory holes in 2 locations along bottom of fender well lip. (Photo 1) NOTE: VEHICLES WITH FENDER FLARES REQUIRE HOLES DRILLED FOR PROPER FASTENING (Photo 2)
4. Place flap on to fender well making sure bottom holes in flap align with U Clips in factory locations.
5. Fasten w/ 1/4-20 bolts and washers.
6. Next, with bottom of flap fastened loosely, pull top of flap away from fender well and place clamp bracket on fender well lip to align 2 top holes in flap with 2 studs on clamp bracket. Once aligned place fender washers and locknuts onto studs and tighten to allow bracket to clamp onto lip. (Photo 3 & 4)
7. Adjust alignment of flap and tighten all fasteners.

REPEAT ABOVE STEPS ON OPPOSITE SIDE


# Rear Installation

1. Remove factory push clips (plastic) from bottom fender well lip with pliers and/or slotted screwdriver.
2. Pull away plastic trim & place provided U Clips over factory holes in 2 locations along bottom of fender well lip. (Photo 1) NOTE: VEHICLES WITH FENDER FLARES REQUIRE HOLES DRILLED FOR PROPER FASTENING (Photo 2)
3. Place flap on to fender well making sure bottom holes in flap align with U Clips in factory locations.
4. Fasten with ¼-20 bolts and washers.
5. Next, with bottom of flap fastened loosely, pull top of flap away from fender well and place clamp bracket on fender well lip to align 2 top holes in flap with 2 studs on clamp bracket. Once aligned place fender washers and locknuts onto studs and tighten to allow bracket to clamp onto lip.(Photo 3 & 4)
6. Adjust alignment of flap and tighten all fasteners.

REPEAT ABOVE STEPS ON OPPOSITE SIDE



WITHOUT FENDER FLARE

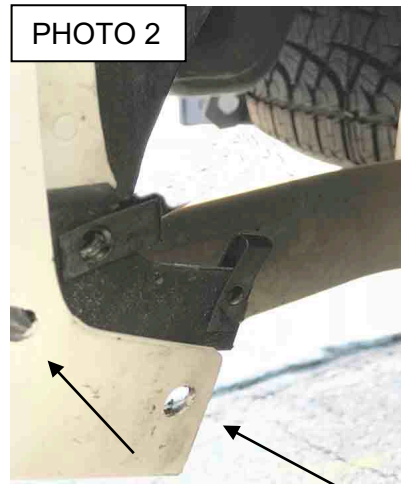

WITH FENDER FLARE

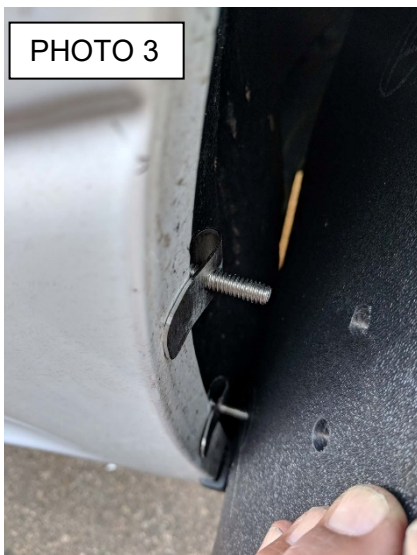


PHOTO 3



PHOTO 4