



Ford Focus 11'-17' Rally Edition Mud Flaps

Includes:

- 4 Rally Flaps (2 Front + 2 Rear)
- 6 Spacers (4 long + 2 short)
- 14 U Nuts (6 Front + 8 Rear)
- 14 Washers (6 Front + 8 Rear)
- 14 Hex Bolts (6 Front + 8 Rear)

Front Installation

1. Turn wheel to allow easier access for installation.
2. Remove plastic factory fasteners **(FIGURE 1)**.
3. Pull away liner and place speed nuts over holes **(FIGURE 2)**.
4. Put liner back in place.
5. Put short bolts and washers through the mud flap and thread through holes in the liner into the U nuts **(FIGURE 3)**.
6. Leave loose and align before tightening.

FIGURE 1



FIGURE 2


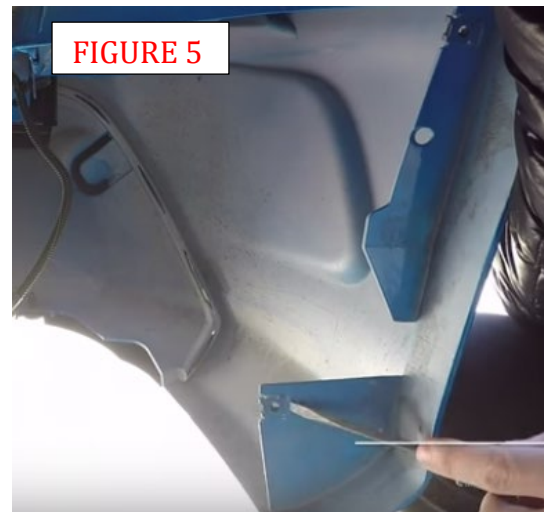


FIGURE 3



Rear Installation

1. Remove factory fasteners attaching fender liner and pull away fender liner . (FIGURE 4)
2. Remove factory U-clips with flathead screw driver or pliers (FIGURE 5)
3. Pierce hole in the part of the liner covering the second factory hole from the top. Make sure the hole is big enough to easily fit the supplied bolt.
4. Attach provided U nuts over holes on the car body (FIGURE 6).
5. Put back liner.
6. First attach 3rd mounting point from the top. Put bolt through the washer then the mud flap and then the shorter spacer. Do not tighten all the way.
7. Repeat with the two holes above it on the outside of the fender well using longer spacers.
8. Line up and tighten.
9. For the inner most hole pierce hole in liner across from the 4th hole on the mud flap.
10. Make sure hole is big enough and then attach U nut on the hole.
11. Attach with shorter hex bolt and washer and tighten.

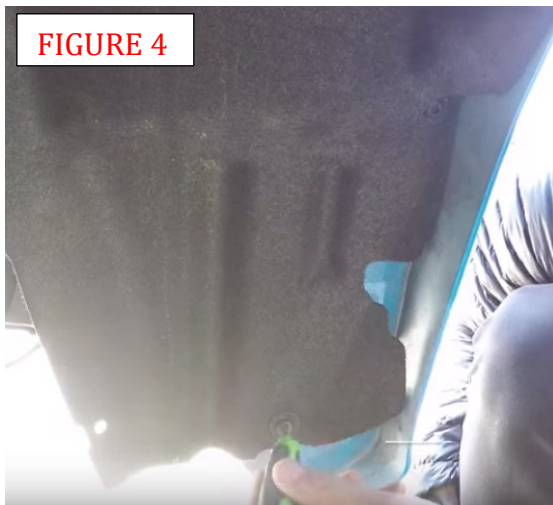

VIEW FROM REAR AFTER INSTALLATION

