

Dodge Ram 1500 TRX – 2021+

Installation Instructions


FRONT HARDWARE

QTY	DESCRIPTION
8	#10 X 1-1/2" HEX SCREWS
8	SMALL BLACK WASHERS
8	LARGE 1/4" FENDER WASHERS

REAR HARDWARE

QTY	DESCRIPTION
8	#10 X 1-1/2" HEX SCREWS
8	SMALL BLACK WASHERS
8	LARGE 1/4" FENDER WASHERS


TOOLS:
5/16" SOCKET
LEVEL

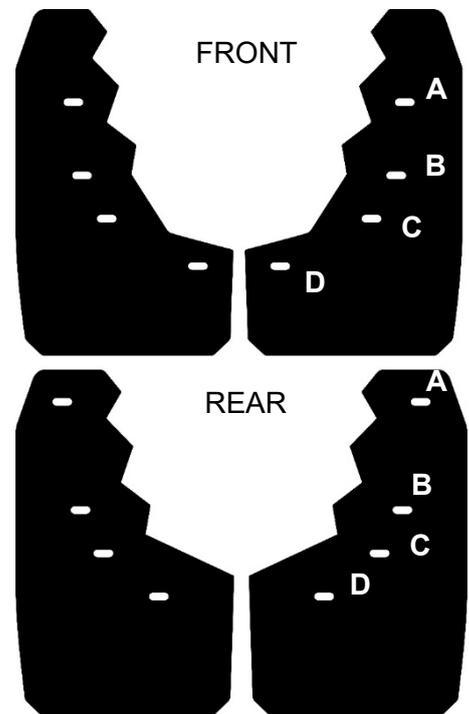

Front Mud Flap installation

Important: It is recommended to read through all instructions prior to starting install

1. Remove Factory screws on fender well.
(FIGURE 1)
2. With logo facing the rear begin installation by fastening mud flap at location A in fender well using #10 screws with Small and Large washers. (FIGURE 2).
3. Align remaining holes in flap with corresponding factory mounting locations (B, C & D) Fasten using #10 screw with Small and Large washers (FIGURE 3).
4. Using a level on bottom of flap or align with outside of tire, adjust as needed to ensure flap is aligned vertically and horizontally to your preference.
5. Tighten all fasteners & Repeat above steps for opposite side

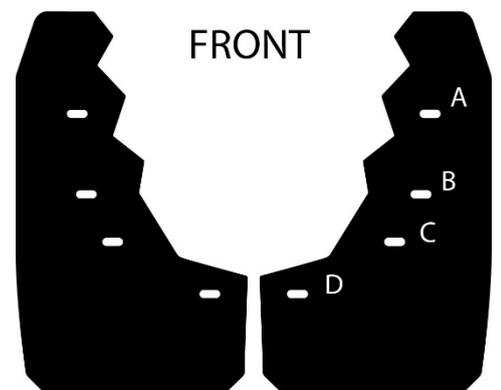

Rear Mud Flap Installation

Important: It is recommended to read through all instructions prior to starting install

1. Remove Factory screws on fender well. (FIGURE 4)
2. With logo facing the rear begin installation by fastening mud flap at location A in fender well using #10 screws with Small and Large washers. (FIGURE 5)
3. Align remaining holes in flap with corresponding factory mounting locations (B, C & D) Fasten using #10 screw with Small and Large washers (FIGURE 6).
4. Using a level on bottom of flap or align with outside of tire, adjust as needed to ensure flap is aligned vertically and horizontally to your preference.
5. Tighten all fasteners & Repeat above steps for opposite side

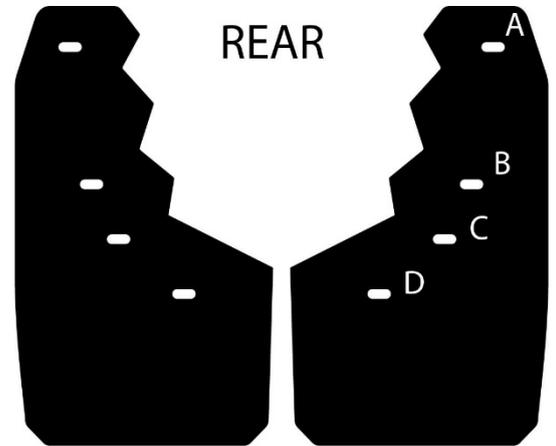


FIGURE 1 (FRONT)

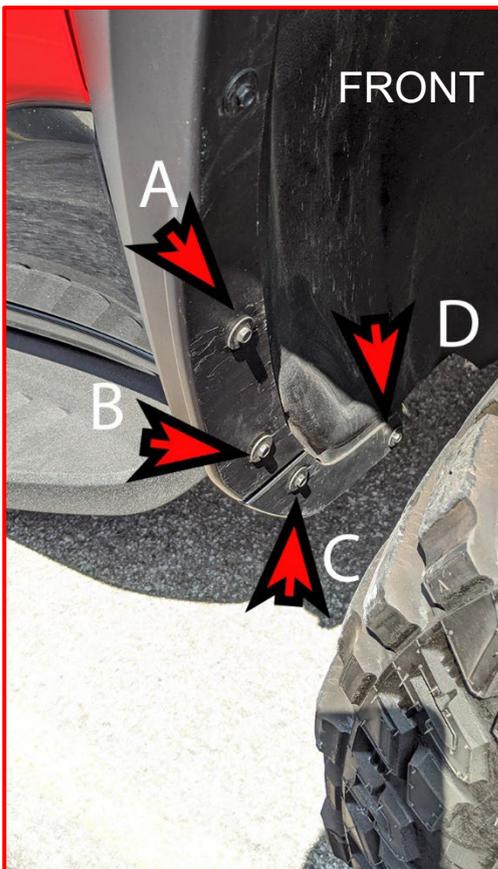


FIGURE 2 (FRONT)



FIGURE 3 (FRONT)



FIGURE 4 (REAR)

FIGURE 5 (REAR)

FIGURE 6 (REAR)

