

Dodge Ram 2010-'18 1500,2500, 3500 Mud Flap Installation

(Rear &/or Front)

REAR INCLUDES:


- (2) Rear Flaps
- (4) Metal U-Clips
- (6) SS 1/4" Bolts
- (2) SS Locknuts
- (8) SS Washers

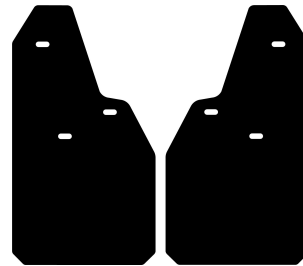

REAR

FRONT INCLUDES:

- (2) Rear Flaps
- (4) Metal U-Clips
- (6) SS 1/4" Bolts
- (2) SS Locknuts
- (8) SS Washers

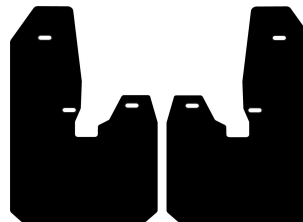


FRONT

Rear Mud Flap Installation Instructions

Important: It is recommended to read through all instructions prior to starting install

1. Remove 2 Lower Factory screws on fender well lip.
2. Place supplied metal U-Clips over Factory Holes . Align 2 outer holes in flap (holes **A** & **B** FIGURE 1) over 2 factory holes. Fasten loosely with supplied 1/4" bolts and washers. (Note: in place of U-Clips & 1/4" bolts, you can opt to use the factory screws with supplied washers to attach at points **A** & **B**)
3. With flap aligned, Mark inside hole location (**C**) on fender liner. Remove flap and drill 1/4" hole in liner at marked location. (Note: it may be necessary to punch through liner with sharp object to drill hole from back side of liner otherwise it may be necessary to remove wheel to allow for drilling from the front). Once hole is drilled re-attach flap with supplied bolts and washers. Fasten inside location (**C**) using 2 washers and a locknut on bolt.
4. Adjust as needed to ensure flap is aligned vertically and horizontally to your preference.
5. Tighten all fasteners & Repeat above steps for opposite side

FIGURE 1

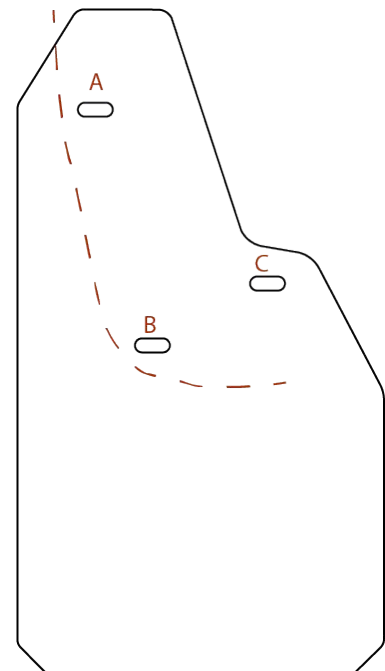

Front Mud Flap Installation Instructions

Important: It is recommended to read through all instructions prior to starting install

NOTE: TURNING FRONT WHEELS IS RECOMMENDED TO ALLOW ACCESS FOR INSTALLATION

1. Remove 2 Lower Factory screws on fender well lip
2. Place supplied metal U-Clips over Factory Holes . Align 2 outer holes in flap (holes **A** & **B** FIGURE 1) over 2 factory holes. Fasten loosely with supplied 1/4" bolts and washers. (Note: in place of U-Clips & 1/4" bolts, you can opt to use the factory screws with supplied washers to attach at points **A** & **B**)
3. With flap aligned, Mark inside hole location (**C**) on fender liner. Remove flap and drill 1/4" hole in liner at marked location. (Note: Turning wheels will allow space to drill through front of fender well liner. Once hole is drilled re-attach flap with supplied bolts and washers. Fasten inside location (**C**) using 2 washers and a locknut on 1/4" bolt.
4. Adjust as needed to ensure flap is aligned vertically and horizontally to your preference.
5. Tighten all fasteners & Repeat above steps for opposite side

