




Universal Rekmesh 11" & 12" Mud Flaps Assembly & Installation Instructions

Assembly (Flap to Bracket)

- 1- Attach flap to bracket using included hardware.
- 2- Feed screws thru bracket & flap and secure w/ washers and nuts using 1/8" Hex key (5/32" for Dually) and 3/8" Socket wrench (7/16" for Dually)

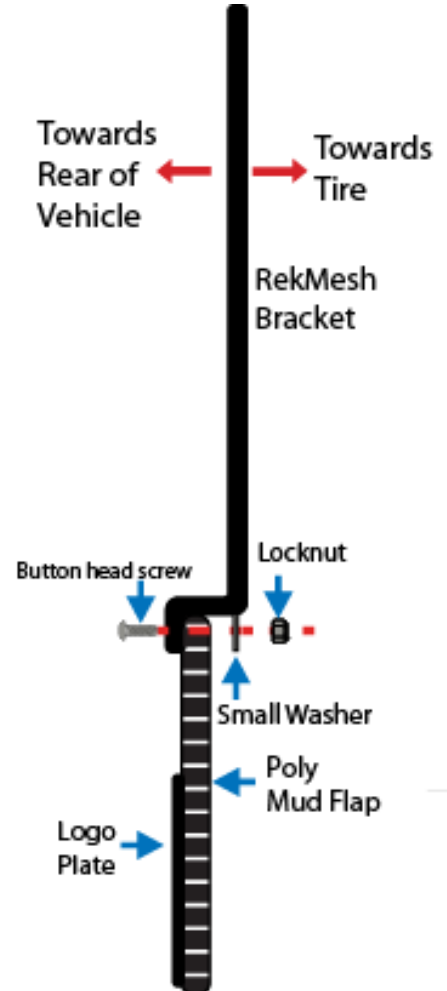

Installation

NOTE: REKMESH PRODUCT IS UNIVERSAL FIT FOR FRONT OR REAR. FITMENT MAY BE INCOMPATIBLE FOR SOME VEHICLE MAKES AND MODELS DUE TO FACTORY TRIM OR OTHER FEATURES.

1. Locate factory attachment locations inside your vehicle's Fender well (See Figure 1). Note: When removing factory hardware set aside to re-use for Rekmesh Bracket Attachment. Included hardware can be used if factory hardware is unusable or unavailable.
2. Place provided clamp bracket onto fender well lip to support upper portion of Rekmesh bracket (See Figure 2) Note: Some model vehicles may have factory attachments to support upper portion of bracket. If this is the case clamp brackets may not be necessary. (NOTE: A minimum of 3 fastening locations is recommended for secure attachment for upper and lower portion of bracket.)
3. Place Rekmesh bracket with flap onto fender well with offset of bracket as high as possible underneath bottom of fender well (See Figure 3) and align cells in mesh with factory attachment locations and Clamp bracket studs (See Figure 4). Once desired alignment is complete begin fastening bracket to fender well at lower portion of bracket first. NOTE: This step may require a helper to hold bracket for proper alignment and fastening.
4. Repeat above steps on opposite side.

FIGURE 1



FIGURE 2



FIGURE 3



FIGURE 4



FIGURE 5



FIGURE 6





REK-mesh
Drill-less 20min Installation
(Patent Pending)

GEN3 Tacoma
FG Mud Flaps