



Subaru Crosstrek 2017+ Mud Guards

Installation Instructions★

★ Professional installation is recommended

CONTENTS: 4 CROSSTREK COMPATIBLE MUD GUARDS+ HARDWARE

FRONT HARDWARE:

- 6-Short Self Tapping Screws
- 6-Plastic U-Clips
- 6-Washers

REAR HARDWARE:

- 4-Long Self Tapping Screws
- 4-Locknuts
- 8-Washers
- 4-Plastic U-Clips
- 2-Support Brackets

TOOLS NEEDED:

-*Ratchet* w/ 7/16" socket
or 7/16" *Open End Wrench.*

-*Pliers* and/or *Slotted Screw Driver*

-*Right Angle Bit Driver* or
Right Angle Screw Driver
(Philips Head)

-*Short Philips Head Screw Driver*



Before beginning installation:

1. Read through assembly procedure before starting installation
2. Have necessary tools for installation
3. Make sure location for installation is clean and flat
4. Use of safety glasses & gloves is recommended
5. Verify contents of hardware packages from lists above

Front Installation

1. Turn front wheels to facilitate installation of Mud Guard and Fasteners
2. Remove factory push clips (plastic) from fender well lip to expose factory mounting holes using pliers and/or slotted screw driver.
3. Pull liner back & place provided plastic U Clips over factory holes in 3 locations along fender well lip. (Photo 1)
4. Place flap on to fender well making sure holes in flap align with U Clips in factory locations.
5. Fasten w/ short self-tapping screws and washers as shown. (Photo 2)
6. Check alignment. Adjust as needed. Tighten screws.

REPEAT ABOVE STEPS ON OPPOSITE SIDE

PHOTO 1



PHOTO 2



Rear Installation

1. Remove factory push clips (plastic) from fender well lip and underside of fender well (do not discard/needed for fastening bracket) with pliers and/or slotted screwdriver.
2. Slide plastic U Clips over holes on support bracket (2 per bracket)
3. Slide support bracket between liner and fender well lip and position to align holes beginning at factory mounting location on underside of fender well. (Photo 3 & 4)
4. Fasten bottom of bracket at hole in bend using the factory push clip previously removed.
5. Place flap on to fender well and align holes in flap with bracket and factory mounting locations.
6. Fasten flap at 2 factory hole locations using 2 long self-tapping screws and washers*
7. Next fasten flap to top & bottom studs in bracket using washers and locknuts. Adjust alignment before tightening all fasteners. (Photo 5)

REPEAT ABOVE STEPS ON OPPOSITE SIDE

*To access screw heads for tightening a Right Angle Bit Driver or Right Angle Screw Driver may be required.

PHOTO 3



PHOTO 4


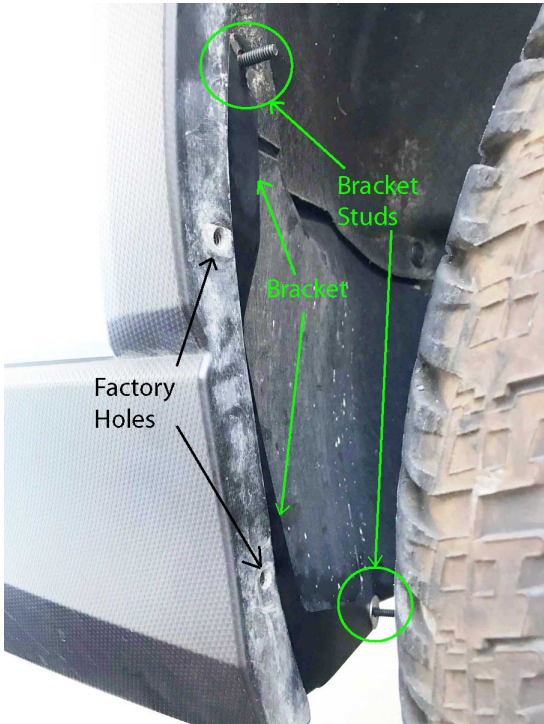


PHOTO 5

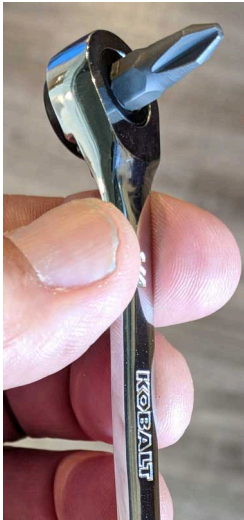

Right Angle Bit Driver