

# Tundra 2008 - 2019

## Mud Flap Installation


(Rear &/or Front)

### REAR INCLUDES:


- (2) Rear Flaps
- (8) # 14 Hex Self Tapping Screws
- (8) Washers

### FRONT INCLUDES:

- (2) Front Flaps
- (2) SS Brackets
- (2) 1/4-20 Metal U-Clips
- (2) 1/4-20 x 1" Hex Bolts
- (4) #14 Hex Self Tapping Screws
- (6) Washers

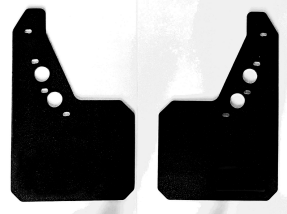

REAR

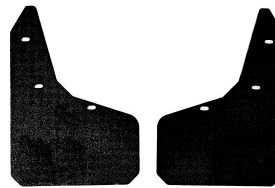


FRONT

## Rear Mud Flap Installation Instructions

**NOTE:** Removal of rear wheel will allow for easier access to wheel well for installation but is not necessary.

1. Remove OEM Mud Guards & Factory screws (see fig. 1)
2. Start by attaching flap to upper most mounting location w/ Self Tapping Screw & washer. Do not fully tighten until all attachments are complete.
3. Attach 3 remaining locations and adjust alignment before tightening screws. (Adjust so outside of flap is parallel to outside of tire and parallel to ground)
4. Repeat above steps for opposite side.

Figure 1

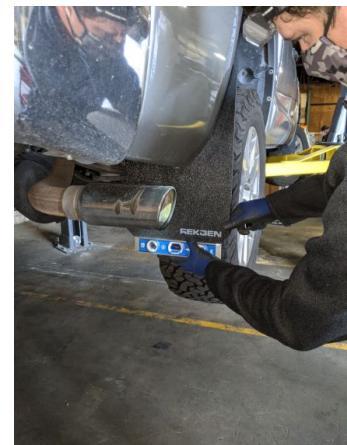

# Front Mud Flap Installation Instructions

**NOTE: Turning Front wheels towards the side being worked on allows for easier access to wheel well for installation**

1. Remove OEM Mud Guards & Factory screws

Figure 2

2. Begin by attaching SS Bracket to flap using metal u-clip at location C (attach to brkt w/ threads of u-clip facing away from tire) ,washer & 1/4-20 x 1" bolt (see figures 2, 3 & 4 PASSENGER SIDE )

NOTE: Bracket should be facing away from tire- The function of this bracket is to add rigidity to inside portion of flap.

3. Once bracket is attached to flap- fasten flap to fender well lip beginning with location A. Align with factory holes and fasten at A & B with #14 self tapping screws and washers (See figure 5).  
NOTE: Do not tighten until desired alignment is complete.

4. Repeat above steps for opposite side

