

Tacoma 2024+ (Generation 4) Mud Guard Installation

NOTE: REKMESH Brackets are NOT compatible with Rear wheel well on this vehicle!

INCLUDES:

- (2) Front Mud Guards
- (6) Short Self Tapping Screws
- (6) Fender Washers
- (2) Slotted Washers

- (2) Rear Mud Guards
- (8) Short Self Tapping Screws
- (8) Fender Washers

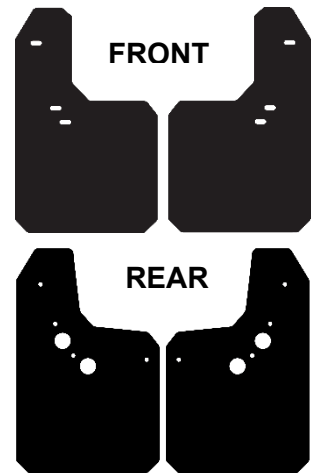


TOOLS NEEDED: RATCHET W/ 5/16" SOCKET


FRONT Mud Guard Installation Instructions

NOTE: Turn front wheels to facilitate installation of Mud Guard and Fasteners

1. Start by attaching Mud Guard to fender well by aligning slot A on mud guard to factory hole A on fender well using self tapping hex screw with fender washer (FIGURE 1).
2. Repeat step 1 at factory hole B. Align mud guard to your preference and tighten hex screws at location A & B.
3. Once Mud Guard is aligned and secured to your preference, Complete installation by fastening Mud Guard at location C using Self Tapping Screw, Fender Washer and Slotted Washer. (FIGURE 2 & 3)

NOTE: Long end of slotted washer should be pointed toward inside of mud guard with a slight downward angle (FIGURE 3). ***Slotted washer functions to push inside of mud guard away from tire to create added clearance.***

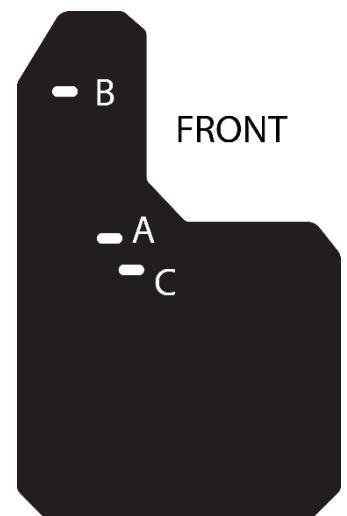

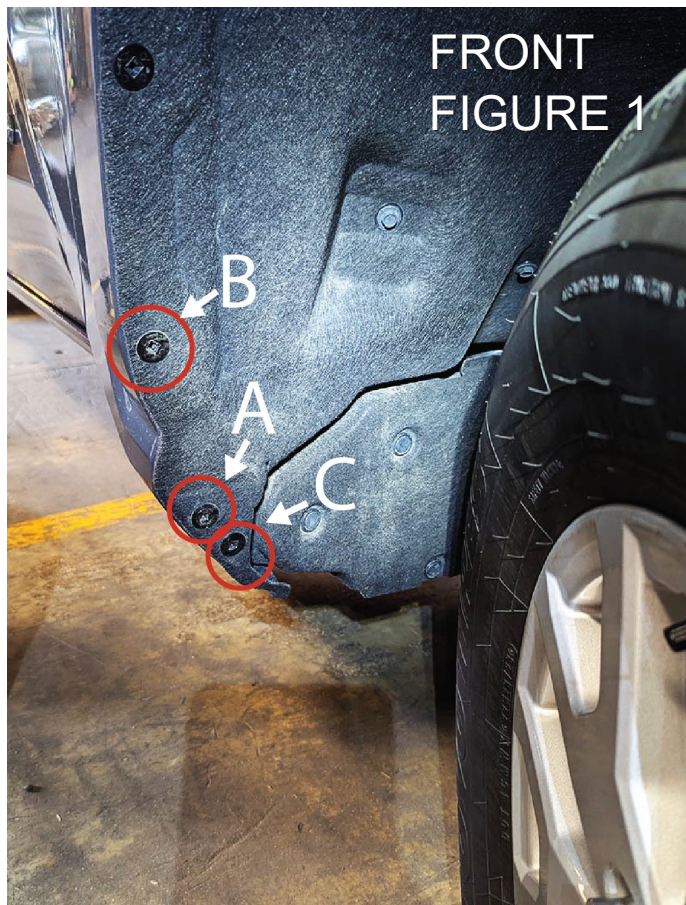

REAR Mud Guard Installation Instructions

NOTE: It is recommended, but not required, to install fasteners using sequence ABCD.

1. Start by attaching Mud Guard to fender well by aligning hole A on mud guard to factory hole A on fender well using self tapping hex screw with fender washer (FIGURE 5 & 6).
2. Repeat step 1 at locations B, C & D. NOTE: Align mud guard to your preference before tightening all fasteners with 5/16" socket.
3. Repeat above steps for opposite side.

