

Tundra 2022+ Mud Flap Installation Instructions



Tools needed: 3/8" Socket & a level

FRONT HARDWARE

- (6) #14 x 1" Self-Tapping Hex Screws
- (6) Large Fender Washers
- (2) Slotted Washers

REAR HARDWARE

- (2) Stainless Steel Brackets – Pre-installed on Flap with rivets
- (4) #14 x 1" Self-Tapping Hex Screws
- (6) Large Fender Washers
- (2) Factory Installed Hex Bolts

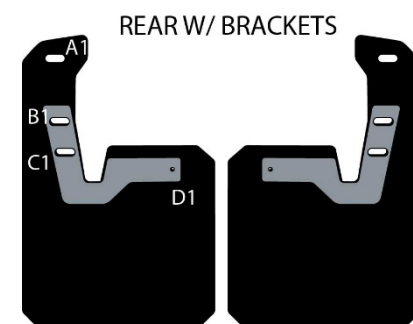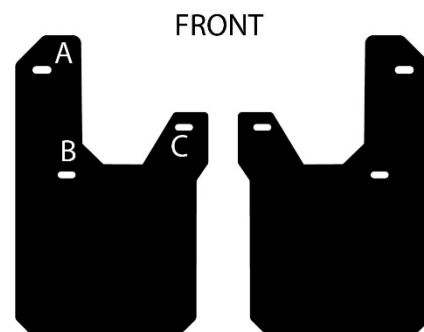

Front Mud Flap Installation Instructions

Important: Turning front wheels is recommended to allow access for installation


FIGURE 1

1. Remove Factory Screws at locations A, B & C (See Figure 1)
2. Start by attaching inside of flap to point C using 1" Self-Tapping Screw and Fender Washer (See Figure 2).
3. Next Fasten flap at point B using 1" Self-Tapping Screw, Fender Washer and Slotted Washer. Note: Slotted Washer is pre-bent to force pressure on the outside against fender well lip once tightened. (See Diagram).
4. Next attach flap at point A using 1" Self-Tapping Screw and Fender Washer. Note: Do not tighten screws completely until desired alignment is reached.
5. Repeat above steps on opposite side.



FRONT

FIGURE 2

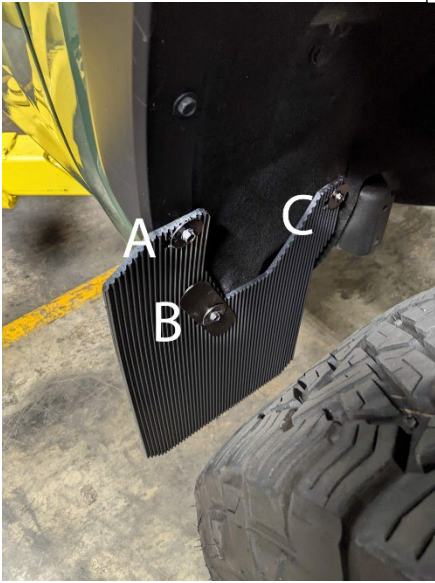

DIAGRAM

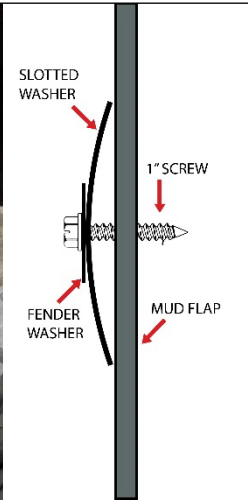


FIGURE 3



REAR

FIGURE 4



FIGURE 5



Rear Flap Installation Instructions

Important: It is recommended to read through all instructions prior to starting install

1. Remove Factory screws at 3 locations (See Figure 4)
NOTE: Keep factory screw at location C1 to use for installation.
2. Next slide inside of flap w/ bracket behind fender well.
Fasten flap at location C1 using factory screw and provided fender washer (See figure 5)
3. Next attach flap at locations B1 & A1 Using 1" Self-Tapping Screw and Fender Washers (See Figure 5) Note: Do not tighten completely until desired alignment is reached
4. Repeat above steps for opposite side.

