
2017+ HONDA CIVIC Type R Mud Flap Installation Instructions

INCLUDES:

FRONT

- | | |
|-----|------------------------------------|
| (2) | Front Flaps (w/ brackets attached) |
| (4) | Hex screws |
| (4) | Washers |



REAR

- | | |
|-----|-----------------------------------|
| (2) | Rear Flaps (w/ brackets attached) |
| (2) | Plastic Inserts |
| (2) | Hex Screws |
| (2) | Washers |

Front Mud Flap Installation Instructions

Important: It is recommended to read through all instructions prior to starting install

NOTE: TURNING FRONT WHEELS IS RECOMMENDED TO ALLOW ACCESS FOR INSTALLATION

1. Remove Factory screws at locations A & B (FIGURE 1 & 2)
2. Start by attaching Flap, w/ bracket attached, to locations A & B at fender well factory hole locations using 1" Stainless Steel screws and SS washers. Do not tighten screws completely until desired vertical and horizontal alignment is complete.
3. Once you have attached flap at locations A check front tire clearance by turning wheel left and right. Note: additional clearance can be attained by bending bottom part of bracket away from tire.
4. Adjust, as needed, to ensure flap is aligned vertically and horizontally to your preference, then tighten screws.
5. Repeat above steps for opposite side.

FIGURE 1

FRONT

FIGURE 2



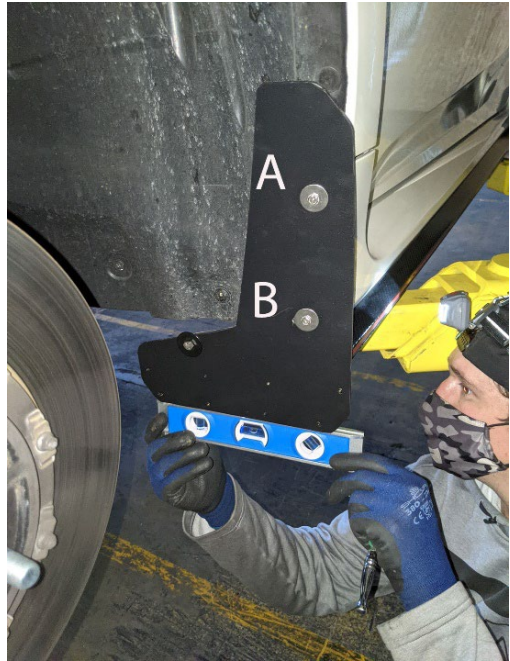


FIGURE 3

REAR

FIGURE 4

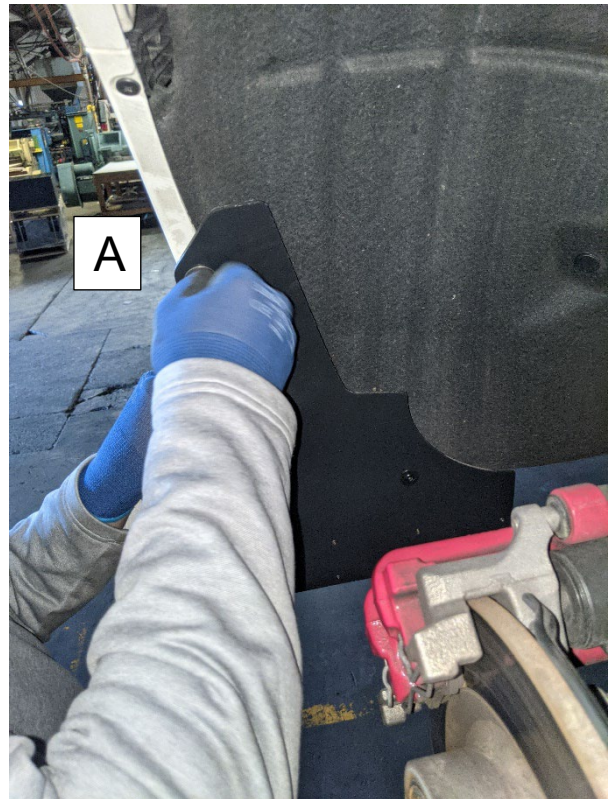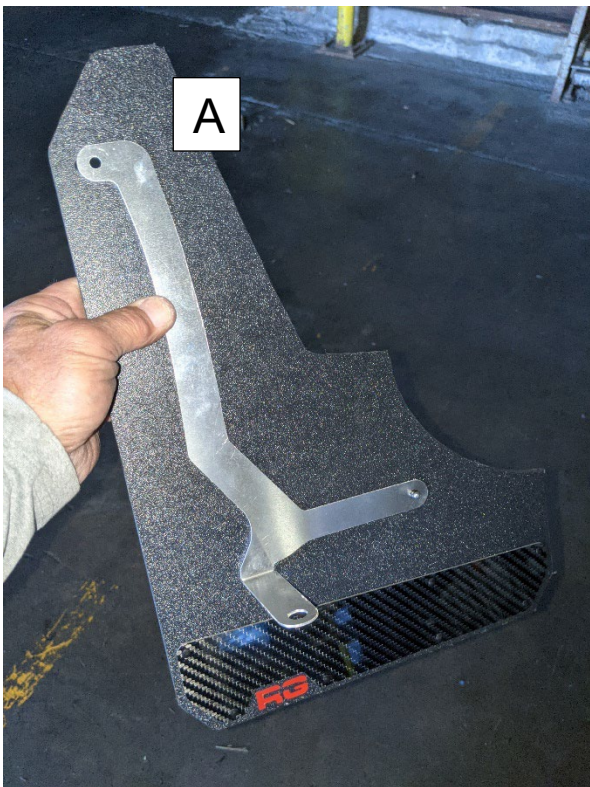

Rear Flap Installation Instructions

Important: It is recommended to read through all instructions prior to starting install

1. Remove Factory screws as needed and factory plastic push clip from undercarriage (Use flat head screwdriver or panel removal tool to remove factory plastic push clip)
2. Start by attaching Flap, w/ bracket, at top to factory hole location A using 1" Stainless steel screws, and SS washers (FIGURE 3 & 4). Do not tighten screws completely until desired vertical and horizontal alignment is complete.
3. Next attach bracket to undercarriage at factory attachment location using plastic insert using Phillips head screwdriver (FIGURE 5 & 6). Adjust as needed to ensure flap is aligned vertically and horizontally to your preference. Tighten all fasteners.
4. Repeat above steps for opposite side.

FIGURE 5



FIGURE 6



