



Universal REK-GEN Mud flaps Installation Using Clamping Support Brackets

Included in Universal Package: (2) REK-GEN Mud Flaps (2) Clamping Support Brackets + (8) Washers (4) Bolts, (4) Locknuts, (4) U- Clips



Figure 1

NOTE: *Drilling mounting holes in flaps is required for installation.*

STEP 1-Locate factory holes in fender well lip toward the bottom of fender well. If holes are covered by fender flares then mark hole locations on flares from back side of lip. Next pull back the flares and drill holes in flares at marked locations. (See Figure 1).



Figure 2


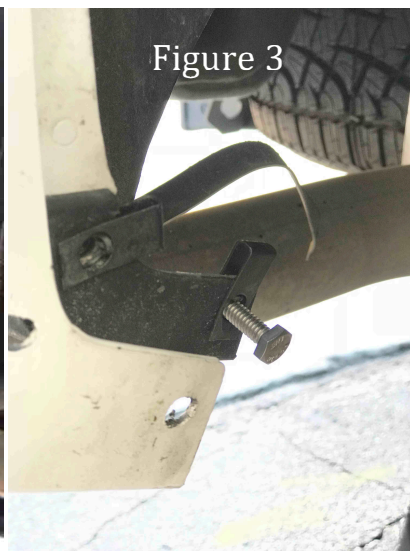


Figure 3

STEP 2-Place U-Clips over holes at factory hole locations (See Figure 2 & 3)
NOTE: Test hole alignment by hand threading bolts into U-Clip (See Figure 3)

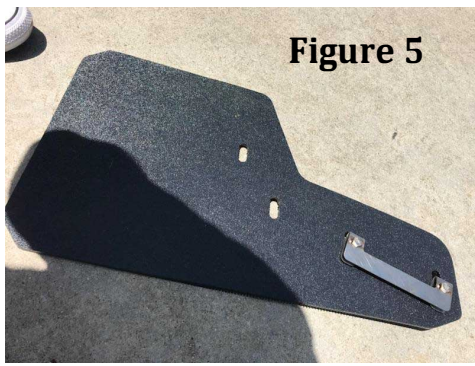

STEP 3-Align Mud Flap to your desired positioning to determine the location of the Clamping support Bracket.

STEP 4-Remove flap and Place Clamping Support Bracket with threaded studs sticking out on to fender lip towards the upper portion of the Flap .(See Figure 5 & 6) .



STEP 5-With all 4 mounting bolts in place, place a ball of clay or putty on the bolt heads and bolt studs.

STEP 6-Align flap to outer edge of tire or desired alignment for the best coverage and look. Once aligned press flap against bolts until clay transfers to flap.

STEP 7-Remove flap and drill 5/16" holes at marked locations.

Note: Once drilled you may want to use flap as a template to drill flap on opposite side of vehicle.

STEP 7-Next place washers and lock nuts onto threaded studs, and bottom mounting bolts tighten to close clamp bracket onto lip. (See Figure 7). Make any necessary adjustments and tighten all fasteners to secure mud flap.

