

---

# 2015+ VW GOLF – GTI Mud Flap Installation Instructions

**NOTE:** This product does not fit model MK7 Golf R

INCLUDES:

---

- |                        |
|------------------------|
| (2) <u>Front Flaps</u> |
| (2) Riveted Brackets   |
| (4) 1" long SS Screws  |
| (4) Washers            |

- |                           |
|---------------------------|
| (2) <u>Rear Flaps</u>     |
| (2) Riveted Brackets      |
| (4) 1-1/2" Long SS Screws |
| (4) Spacers               |
| (4) Washers               |



<b>Tools Required:</b> 5/16" (#8 metric) Socket Wrench + Level
---

## Front Mud Flap Installation Instructions

**Important:** It is recommended to read through all instructions prior to starting install

**NOTE:** TURNING FRONT WHEELS IS RECOMMENDED TO ALLOW ACCESS FOR INSTALLATION

1. Remove Factory screws
2. Start by attaching Flap, with bracket attached, to 2 factory hole locations using 1" Stainless Steel Screws and Washers. **NOTE:** Brackets are pre-attached to flaps with rivets for easy installation (see fig. 1, & 2). Do not tighten screws completely until desired vertical and horizontal alignment is complete.
3. Once you have attached flap at locations A & B check front tire clearance by turning wheel left and right. Note: Additional clearance can be attained by putting a slight bend on bottom part of bracket away from tire.
4. Adjust as needed to ensure flap is aligned vertically and horizontally to your preference. Tighten all screws.
5. Repeat above steps for opposite side.

FIGURE 1



FIGURE 2



# Rear Flap Installation Instructions

**Important:** It is recommended to read through all instructions prior to starting install

1. Remove Factory screws
2. Start by attaching Flap, w/ bracket attached, to 2 factory hole locations using 1-1/2" Stainless Steel Screws, Spacers and Washers. NOTE: Brackets are pre-attached to flaps with rivets for easy installation (see fig. 4 & 5). Do not tighten screws completely until desired vertical and horizontal alignment is complete.
3. Adjust as needed to ensure flap is aligned vertically and horizontally to your preference. Tighten all screws.
4. Repeat above steps for opposite side.

FIGURE 4

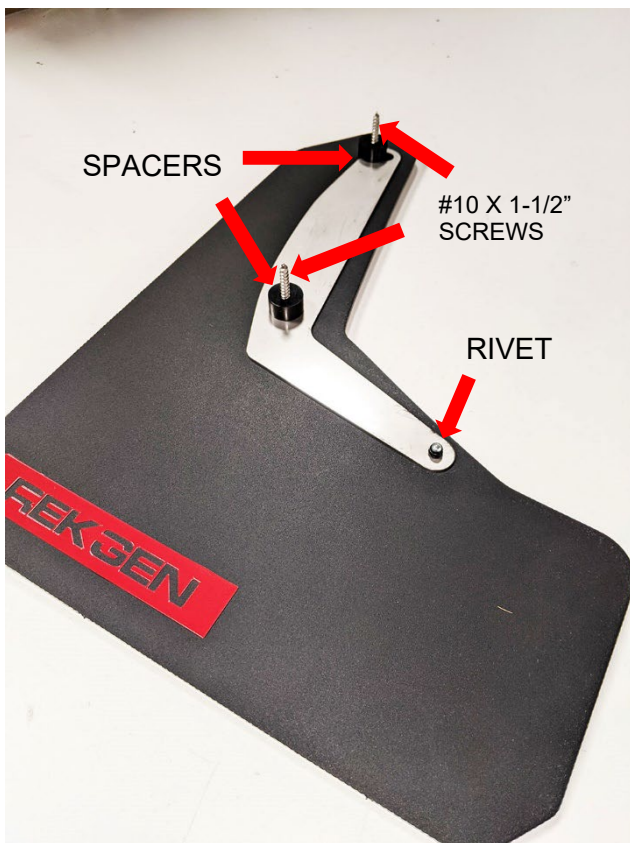


FIGURE 5

