

# BIG EZ RACK

Model # 12-2499

Model # 12-0102

*Copied by Many – Matched by None™*



PARTS LIST	
Qty	Name
2	Big EZ Rack with Strap
4	Phillips Head Screw

Holds up to 150 LBS



## STEP 1

**There are 3 ways to mount the rack:**

- A. Wall
- B. Free-Standing Frame Direct
- C. Free-Standing Frame with Brackets

### A. Mounting to Wall

**Tools Needed:** Tape Measure, Electric Drill,  $\frac{3}{16}$ " Drill Bit, #3 Phillips Head Driver and a cold beverage of your choice

The length of your boat will determine arm spacing. Ideal arm spacing is 40% of total boat length, (boat length X 0.4 = spacing).


1. Locate studs where arms will be mounted and mark desired height for the arms. Push a mounting screw into wall to mark the locations for holes. Wall studs are typically on 16" centers. *Screwing only into drywall is not sufficient and could result in injury to self and kayak.*
2. Pre-drill pilot hole for Phillips Head screw using a  $\frac{3}{16}$ " drill bit.



**Pro Tip:** An old woodworkers trick is to rub the screw threads on a bar of soap for easy installation.

3. Use #3 Phillips Head Driver to insert screws. Initially, leave top screw loose (helps when locating hole for lower screw). After inserting bottom screw, tighten both screws.
4. Mount second arm at same height as first arm.
5. Go to **STEP 2**

If you have not yet opened your cold beverage, this would be an appropriate time to do so.

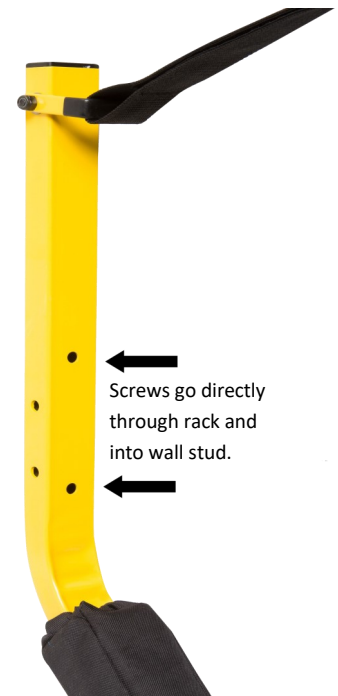


Rev. 7/22

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

SUSPENZ®, INC.  
8725 ROSWELL ROAD #0-220  
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045  
FAX: 770-518-8507  
WEBSITE: [WWW.SUSPENZ.COM](http://WWW.SUSPENZ.COM)

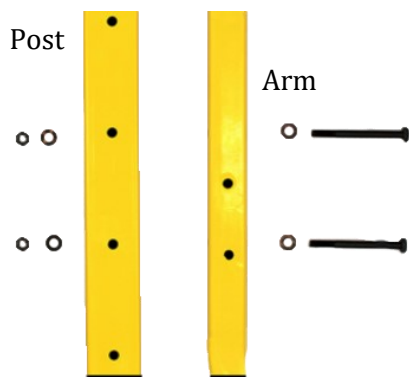

## B. Free-Standing Frame: Direct


**Tools Needed :** Two ½" Wrenches *or* one ½" Wrench and one #5 Allen Wrench

Using mounting hardware supplied in frame box, insert bolts through holes in arms then into the frame and tighten securely.

Go to **STEP 2**

## STEP 2: Strap Adjustments

1. Once both arms are mounted, place boat onto padded arms.
2. Place Velcro adjustable safety strap over boat. Buckle ends together then adjust safety straps to achieve a snug fit.

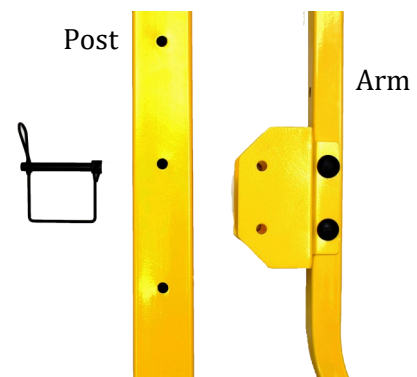

## C. Free-Standing Frame: with Brackets

**Tool Needed :** ½" Wrench

Attach Free-Standing bracket using instructions provided with the bracket. Attach arms to the frame using the locking pin. The locking pin can be inserted in either top or bottom hole of bracket for more exact positioning.

**Note:** Brackets sold separately: Model #31-5501 (Yellow) or Model # 31-5502 (Black). Brackets are required for attaching arms to back side of frame.

Go to **STEP 2**



FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

## OUR PLEDGE TO YOU

SuspENZ® products are warranted for life against defects in material or workmanship to the original owner. Product must be used for its intended purpose under normal conditions. Please visit [www.SuspENZ.com](http://www.SuspENZ.com) for complete warranty information.

SUSPENZ®, INC.  
8725 ROSWELL ROAD #0-220  
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045  
FAX: 770-518-8507  
WEBSITE: [WWW.SUSPENZ.COM](http://WWW.SUSPENZ.COM)