


BACK LEG

Model # 21-0401
Model # 22-0401

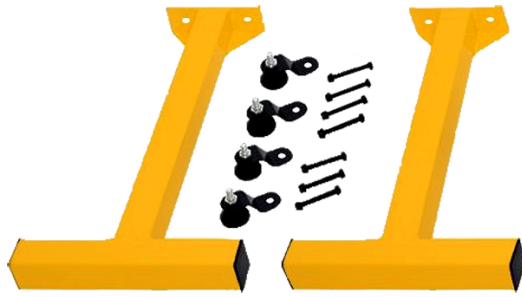

Tools Needed : 1/2" Wrench

Assembly

Parts Needed: 2 Back Legs, 8 Leveling Feet (with Hex Nuts) and 8 Anchors

The *Anchor* is used when anchoring Base and Back Leg to floor, ground or dock. These may be omitted when Base is on a stable level surface/environment.

- For use with *Anchors*, remove first *Hex Nut* from *Leveling Foot*, place *Anchor* on foot and then screw *Hex Nut* back on. Screw into *Back Legs*.
 - For use without *Anchors*, screw four *Leveling Feet* into welded nut in each *Back Leg*.
1. If adding *Back Leg* to existing Free-Standing Frame, remove the *Carriage Bolts, Washers, & Lock Nuts* from Base.
 2. Hold *Back Leg* to square holes on *Base* and *Post* and line up holes.
 3. Slide *Carriage Bolts* through square holes of all three pieces. Secure *Washer* and *Lock Nut* on the back side.



PARTS LIST	
Qty	Name
2	Back Leg
4	Leveling Foot
4	Anchor
8	Hex Nut
4	Carriage Bolt
4	Lock Nut
4	Washer



Rev. 12/17

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

OUR PLEDGE TO YOU

Suspenz® products are warranted for life against defects in material or workmanship to the original owner. Product must be used for its intended purpose under normal conditions. Please visit www.Suspenz.com for complete warranty information.

SUSPENZ®, INC.
8725 ROSWELL ROAD #0-220
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045
FAX: 770-518-8507
WEBSITE: WWW.SUSPENZ.COM