



PARTS LIST	
Qty	Name
2	Bunker Bars
4	Locking Pins

Tools needed:

(2) 1/2" crescent wrenches OR (2) Adjustable wrenches.

Install of “Big Yak” Bunker Bars on Super Duty Cart

1. Use two wrenches to remove the current nuts, bolts & washers from the existing Bunker Bars.

Note: *take special care to keep all the hardware including plastic washers* for next step.

2. Install the new “Big Yak” Bunker Bars:

- Orient each “Big Yak” so Stamped Dot on bar is closest to wheel.
- Be sure to place the *plastic washer* between “Big Yak” Bunker Bar and cart frame.


3. Insert all four (4) *Locking Pins* to set the “Big Yak” Bunker Bar width that best supports your kayak:

- 12” spread: “Big Yak” Bunker Bars angled in - toward each other.
- 19” spread: “Big Yak” Bunker Bars angled out - away from each other.

Use all four (4) *Locking Pins* to secure the Bunker Bars

NOTE: The Big Yak Bunker Bars are used as an add-on to the SuspENZ Super Duty (SD) Cart* to increase the wheel clearance for large fishing kayaks with tunnel hulls (Bonafide, Native Titan, etc.)

Rev. 6/19

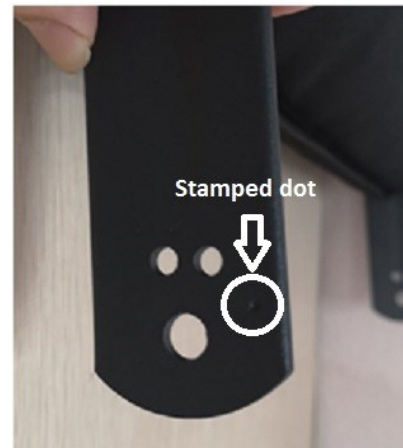

Orient the “Big Yak” Bunker Bars so that the Stamped Dot is next to each wheel



“Big Yak” Bunker Bars angled at 12” spread

*Fits:

- Super Duty (SD) Airless Cart (#22-9905)
- Super Duty (SD) Mag-Lite Airless Cart (#22-9906)
- Super Duty (SD) Mag-Lite Airless Cart (#22-9907)