

“BIG JON” BUNKER BARS FOR ALL-TERRAIN CART*

Model #
22-9903



PARTS LIST	
Qty	Name
2	Big Jon Bunker Bars
2	XL Straps

Weight Capacity of this cart with the Big Jon Bunker Bars is 300 lbs.

*These Extra wide Bunker Bars are designed to fit on to the SuspENZ ALL-TERRAIN cart (22-9908). They are also compatible with previous versions of this cart **

These Bunker Bars provide an extra wide platform (36" wide) for transporting flat bottom boats like a Jon Boat or a Sunfish sailboat. Can also be used for transporting lumber, ladders and more.

Tools needed:

(2) 1/2" crescent wrenches OR (2) Adjustable wrenches.

Installation of “Big Jon” Bunker Bars on All-Terrain Cart

1. Use two wrenches to remove the current nuts, bolts & washers from the existing Bunker Bars.
Note: *take special care to keep all the hardware including plastic washers* for next step. Note that the existing Bunker Bars run along the length of the cart parallel to the wheels.

***Fits:**

SuspENZ All-Terrain Super Duty Airless Cart (#22-9908)

SuspENZ Super Duty Mag-Lite Cart (#22-9907)

SuspENZ Super Duty Mag-Lite Cart (#22-9906)

SuspENZ Super Duty Airless Cart (#22-9905)




Rev. 6/22

SUSPENZ, INC.
8725 ROSWELL ROAD #0-220
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045
FAX: 770-518-8507
WEBSITE: WWW.SUSPENZ.COM

2. Use the 1" Hex Bolts and Nuts to install the Big Jon Bunker Bars running crosswise on the cart. Remove the plastic washer and save for the future if you re-install the original rotating Bunker Bars. This creates a strong flat surface joint between cart and Big Jon Bunker Bars. The Big Jon Bunker Bars are stationary and do not rotate so do not use the plastic washer. Install such that the attached long straps end up on the same side of the cart.

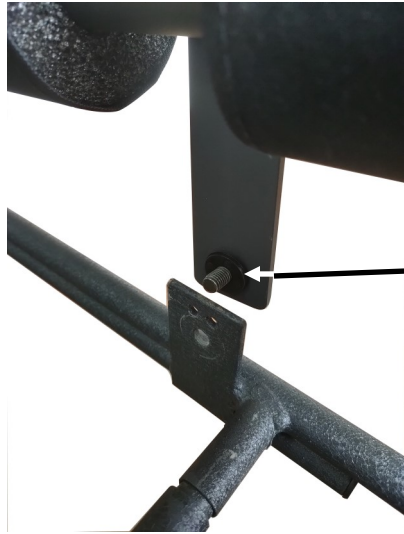

Remove plastic washer



3. The Big Jon Bunker Bars come with one extra long strap all ready installed. Remove the 4 straps from your All-Terrain cart. Install the two Buckle End straps on the free ends of the Big Jon Bunker Bars. Store the two remaining straps along with the plastic washers from step 2 so you can switch back to the original configuration if desired.

