

DOUBLE-UP SUP BEACH CART

Model # 22-9944



Holds up to 125 LBS

PARTS LIST	
Qty	Name
1	Top Frame
2	Loop Frame
1	Female End Wheel Base
1	Male End Wheel Base
2	Balloon Wheel
2	Quick Release Pins
5	D-Rings
1	Tie Down Strap
1	Manual Air Pump

Assembly


Tools Needed: None

Step 1: Assemble Wheel Base

Parts Needed: 1 Male End Wheel Base and 1 Female End Wheel Base

Identify the *Male End Wheel Base* and the *Female End Wheel Base*. Push base ends together and secure with *D-Ring*.

Caution: When closing the *D-Ring*, use the palm of your hand to lock it into place.

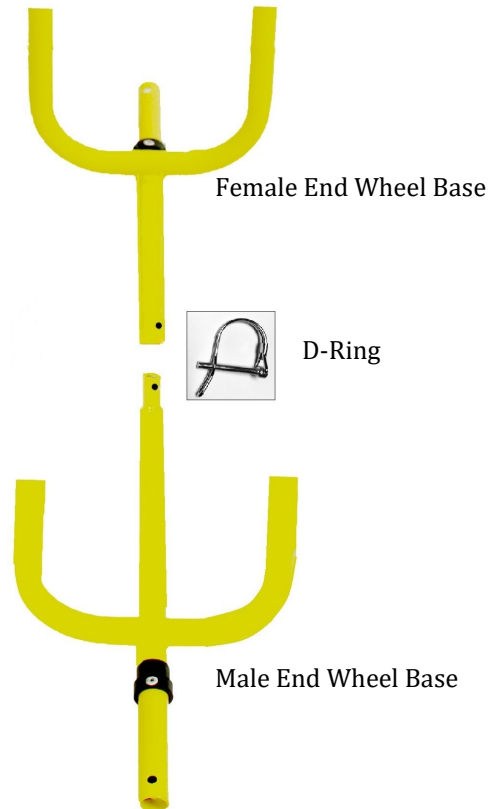



Scan* to see
Video Instructions
for Assembly & Use
or
Visit Suspenz.com
"Video & Manual" page
*QR code reader app required

Rev. 08/20

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

SUSPENZ®, INC.
8725 ROSWELL ROAD #0-220
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045
FAX: 770-518-8507
WEBSITE: WWW.SUSPENZ.COM

Step 2: Assemble Loop Frame to Wheel Base

Parts Needed: 4 *D-Rings*, 2 *Loop Frames*, and 1 *Assembled Wheel Base*

The "Cart" sticker faces outward when positioning the *Loop Frame*. Place assembled *Wheel Base* in an upright position.

Insert the *Loop Frame* into the posts of the *Wheel Base*. Secure with *D-Rings*. To align holes you may need to gently tap upwards on the *Loop Frame*.

Repeat for 2nd *Loop Frame*.



Step 2: Assemble Top Frame

Parts Needed: 1 *Top Frame*

Loosely set *Top Frame* on *Loop Frame*. Push in *Push Pins* on both sides of frame and snap *Top Frame* into place.



Caution: When closing the *D-Ring*, use the palm of your hand to lock it into place.

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

SUSPENZ®, INC.
8725 ROSWELL ROAD #0-220
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045
FAX: 770-518-8507
WEBSITE: WWW.SUSPENZ.COM

Step 3: Inflate Wheels

Parts Needed: 2 *Wheels*, 1 Manual Air Pump

Assembly

Inflate Balloon wheels with a hand pump. When inflated, wheel has a diameter of 12" to 13". It will feel soft, that is why it works well in sand.



Note: If wheels are "plowing sand" instead of riding over the sand, inflate wheels an additional 3 to 5 pumps.

Step 4: Assemble Wheel to Wheel Base


Parts Needed: 2 *Wheels*, 2 *Quick Release Pins*

Slide *Wheels* onto frame and insert *Quick Release Pins* downwards into hole next to wheels. Flip the locking ring over the end of axle to secure the *Pin*.



To Secure SUPs

1. Loop *Strap* around frame and top of SUPs.
2. Thread end of *Strap* through buckle.

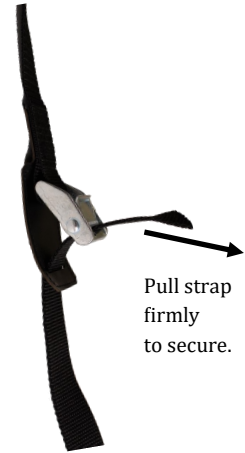

Use



Also Available:

Double-Up SUP Stand
(Model #22-9936)



FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

OUR PLEDGE TO YOU

Suspenz® products are warranted for life against defects in material or workmanship to the original owner. Product must be used for its intended purpose under normal conditions. Please visit www.Suspenz.com for complete warranty information.

SUSPENZ®, INC.
8725 ROSWELL ROAD #0-220
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045
FAX: 770-518-8507
WEBSITE: WWW.SUSPENZ.COM