


FS MOUNT BRACKET

Model # 31-5501

Model # 31-5502

Model # 32-5505

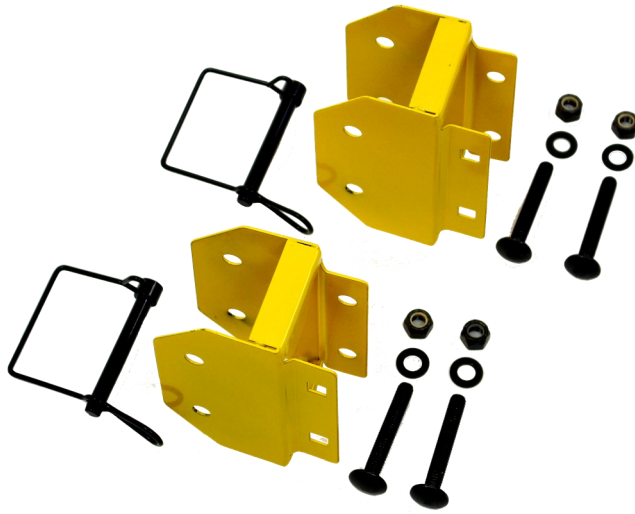


PARTS LIST	
Qty	Name
2	FS Bracket
2	Locking Pin
4	Washer
4	Lock Nut
4	Carriage Bolt

Tools Needed : Adjustable Wrench

Assembly

1. Attach Free-Standing brackets to arms and secure with *Carriage Bolts, Washers, and Lock Nuts*.
2. Attach arms (with bracket) to the frame using the *Locking Pin*.
3. The *Locking Pin* can be inserted in either top or bottom hole of bracket for more exact positioning.

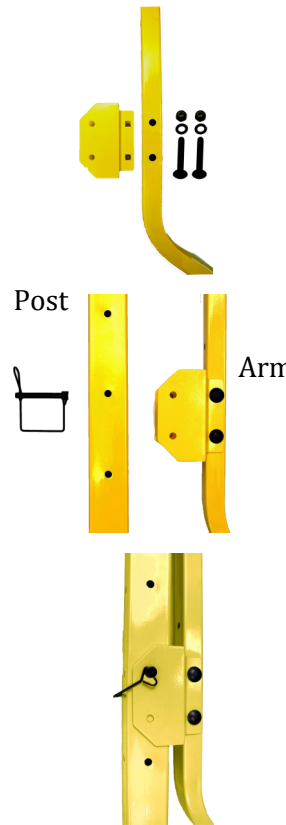

Rev. 10/16

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

OUR PLEDGE TO YOU

SuspENZ® products are warranted for life against defects in material or workmanship to the original owner. Product must be used for its intended purpose under normal conditions. Please visit www.SuspENZ.com for complete warranty information.

SUSPENZ®, INC.
8725 ROSWELL ROAD #0-220
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045
FAX: 770-518-8507
WEBSITE: WWW.SUSPENZ.COM