


EZ SUP CARRIER

Model # 44-0103



PARTS LIST	
Qty	Name
2	Top Foam Block
2	Bottom Foam Block
2	9' Bottom Block Cinch Strap
2	15' Top Block Cinch Strap
1	Mesh Storage Bag

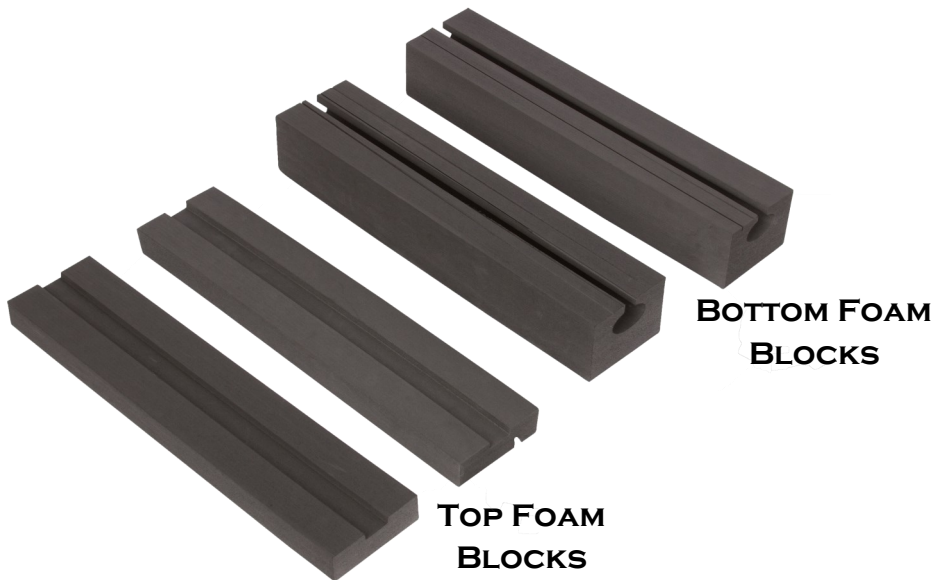

9' BOTTOM BLOCK CINCH STRAPS



15' TOP BLOCK CINCH STRAPS

SAFETY INFORMATION

SuspENZ is very serious about safety. It is critical that you properly secure the foam blocks to your SUP and vehicle. Failure to do so could result in serious bodily injury or property damage. Before assembly please read the complete manual. Be sure that you have all the parts and that they are not damaged in any way. Do not modify the blocks in any manner. Check to make sure that both the blocks and kayak are secure before driving. Periodically inspect the blocks and all parts for signs of wear or damage.

 This symbol in the instructions indicates an important warning. Please heed these warnings. 12/2017

SUSPENZ, INC.
8725 ROSWELL ROAD #0-220
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045
FAX: 770-518-8507
WEBSITE: WWW.SUSPENZ.COM

Assembly

1. Thread the two 9' block cinch straps through the slit underneath both bottom foam blocks.
2. Center SUP upside down on bottom foam blocks with slit away from SUP.

Note: Ideal spacing for blocks is 40% of SUP length. However, you may reduce spacing of foam blocks if they exceed the available roof length.

3. Place the top foam blocks (slit up) on the SUP and align with bottom foam blocks.
4. Thread end of strap through buckle and pull tight with strap in the slit.



Loading

1. Make sure bottom of blocks are clean and free of debris.
2. Load SUP & foam blocks onto car with rear of SUP (fin) to front of car. Reposition foam blocks if necessary.



Secure

1. Center SUP and blocks on the vehicle.
2. Open all 4 car doors. Toss non-buckle end of the 15' center cinch straps over the SUP, one cinch strap over each of the foam block pairs.
3. Pull strap through door then thread end of strap through buckle and pull tight. Close doors.

Note: Putting a few twists in the strap before threading into buckle will reduce wind noise.



New straps & ropes stretch! For the first few weeks of use, check to make sure straps are tight every 30 minutes of driving.



WARNINGS

- Do not exceed load limits for your vehicle.
- Holds one SUP.
- Before each use, inspect blocks and straps and tighten if necessary – these can loosen over time.
- Use caution when opening your hatch – longer SUP may prevent the hatch from fully opening.
- Roof antenna may need to be removed to prevent interference with longer SUP.
- Remove blocks before entering an automatic car wash.
- Do not let children play on blocks.
- To clean, use a soft cloth with water and mild detergent to clean parts.
- Suspenz is not responsible for any damage.

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

OUR PLEDGE TO YOU

Suspenz® products are warrantied for life against defects in material or workmanship to the original owner. Product must be used for its intended purpose under normal conditions. Please visit www.Suspenz.com for complete warranty information.

SUSPENZ, INC.
8725 ROSWELL ROAD #0-220
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045
FAX: 770-518-8507
WEBSITE: WWW.SUSPENZ.COM