




MINISCAPE INSTALLATION

1. Use the 5mm Punch Tool to produce a hole into the main poly pipe.  or 
2. Carefully insert a 5mm take off adaptor into the hole. 
3. Push Miniscape Drip_line onto 5mm take off adaptor. Immersing the end of the Miniscape in hot water for a few seconds will help make this job easier.



4. Run the Miniscape to the areas you wish to irrigate. The use of pipe stakes will ensure that Miniscape will remain in place. Note the following maximum run distances and some layout options:


-  Plants
-  Miniscape Pipe
-  Poly Pipe

0.15m Drip Spacing – max. distance = 10m
 0.30m Drip Spacing – max. distance = 16m
 0.50m Drip Spacing – max. distance = 24m



5. Now that you have run out the Miniscape to the desired locations the Miniscape must be flushed with water to purge out any debris that may have entered during installation.

6. Crimp the end using a piece of 13mm poly pipe, or insert end back into the poly line with a take-off adaptor, creating a loop. If using this loop technique your run length can be doubled. The poly sleeve is easily slid back to enable you to periodically flush out your system.

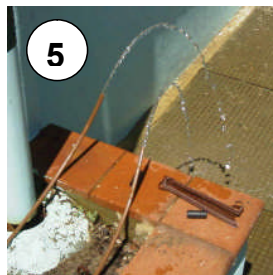

7. Congratulations, you are now ready to start watering with Miniscape.