

# INSTALLATION INSTRUCTIONS HONDA TALON SHORT WINDSHIELD PART # 77-2850

# **IMPORTANT NOTICES**

# READ AND UNDERSTAND THESE INSTRUCTIONS COMPLETELY BEFORE INSTALLATION TO AVOID INJURY TO YOURSELF, DAMAGE TO THE VEHICLE OR ACCESSORY.

- For proper installation, TWO people are required.
- Torque specifications must be followed when tightening bolts. Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.
  - As specified on carton label, once protective film on shields is removed, product cannot be returned.
- As specified on carton label, damage caused by packaging staples is not covered by warranty. All staples must be removed prior to removing product from carton.
- Failure to follow these installation instructions completely may void any warrantable components and result in product damage or personal injury.
- Do not use Loctite or any other similar fastener adhesive. These types of products react to plastics and cause cracking. Not covered by any warranty.
- Our windshields are made from the highest quality material providing optimum transparency and clarity. Blurriness and/or extrusion marks may or may not appear when looking through windshield from a wide, side-angle. This is normal for all extruded clear plastic materials.
- The application of improper cleaners, abrasive and/or dirty cleaning towels can severely damage the product. Failure to follow cleaning recommendation (provided herewith) may void any warrantable components.

#### **DEALER**

These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.

**Parts List** (parts available with kit only and not available separately)

ITEM		PART NAME	DESCRIPTION	QTY
A		Windshield	CNC windshield cut-out made of 1/4" thick GE MR10 polycarbonate or equivalent	1
В		Co-extruded bulb seal (1/4")	Includes: 48" Co-extruded bulb seal / #77-95BS [end user to cut to exact length]	1
INSTRUCTION BAG	C	Flop clamp set	Includes: 4 flop clamps, 4 philips truss head screws M6 x 20 and 4 plastic shoulder washers M6	1

#### 1. Installation

a) Find a clean flat area where you can safely lay down the windshield (Item A). Partially remove the protective film on both sides and apply the co-extruded bulb seal (Item C) to the lower lip using manual pressure to ensure good adhesion and cut any excess.





### **IMPORTANT NOTICES**

Torque specifications must be followed when tightening bolts.

Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.

b) Attach the clamps to the roll-cage as shown below and pre-adjust tightening tension of all clamps. NOTE: Keep all clamp handles open as shown in step 3 below; this will allow you to move the clamps up or down when installing the windshield for the first time.

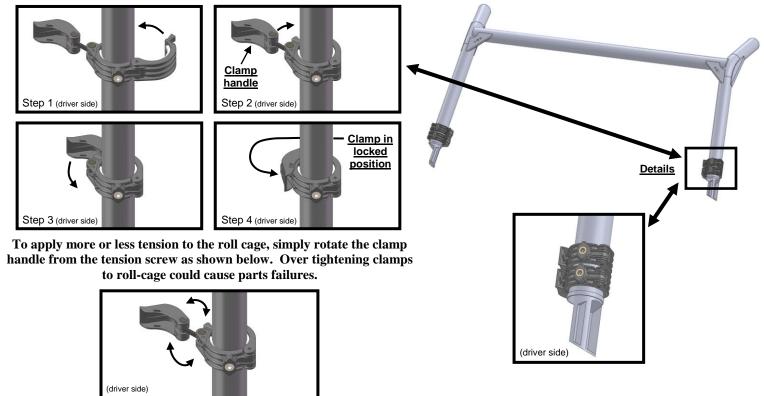

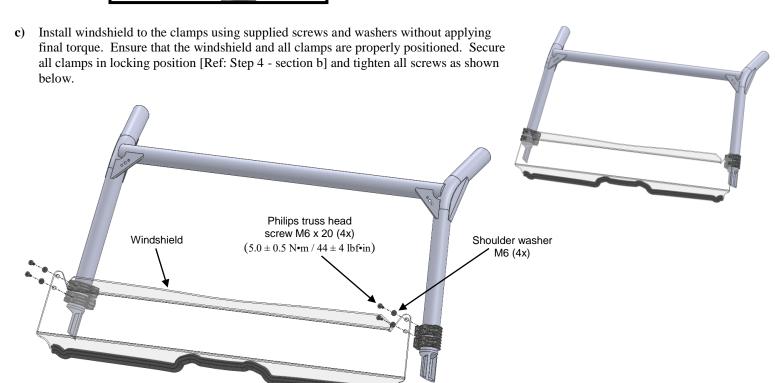

#### 2. Maintenance and Care

Tighten all hardware after first use and periodically thereafter.

## **CLEANING:**

- Rinse with lukewarm water; wash gently with mild soap or detergent and lukewarm water, using a soft cloth or sponge. DO NOT SCRUB or use brushes or squeegees.
  - Rinse again. Dry with soft cloth or moist cellulose sponge to prevent water spotting.
  - To remove wet paint, glazing compound or grease, rub lightly with a good grade of VM&P naphtha or isopropyl alcohol, then wash and rinse. DO NOT USE GASOLINE.

NOTICE: Abusive cleaning procedures by hand washing or automated washing equipment will eventually result in visual hazing, loss of light transmission and coating delamination.

#### **Compatible Cleaning Agents**

Aqueous Solution of Soaps and Detergents

Fantastik Joy Formula 409 Mr. Clean Top Job VM&P grade Naphtha Hexcel, F.O. 554 Neleco-Placer