

# APE OFFROAD

2515 Bypass Rd. Flemingsburg, KY 41041  
606-845-7439

## Instructions for Installation and Care of Chuck Wagon Soft Door / Rear Window Combo AS-WAGON-DRW02

**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.**

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.

1. Carefully unroll the Cab Enclosure on a large flat surface that is clean and free of dirt or other material.

2. Check over the parts included in the carton with the parts list shown below:

Velcro Hook strips:	2 each	-----	4" long
“ “	10 each	-----	6" long
“ “	2 each	-----	8" long
“ “	4 each	-----	12" long
“ “	2 each	-----	14" long
“ “	1 each	-----	24" long
Cab Enclosure	1 each		


**If any parts are damaged or missing please contact customer service at (606) 845-7439.**

3. Begin by removing the hard top and placing the 24" adhesive Velcro strip and two of the 12" adhesive strips around the top of the roll cage. The 24" strip will go across the top rear tube that runs from side to side of the Chuck Wagon. Install it centered and facing the front of the vehicle. The two 12" strips will go on the tubes at the top of the door frames between the two bars that run from side to side and place the Velcro on the bars facing the inside of the cab.

4. Loosely drape the Cab Enclosure over the Chuck Wagon roll cage. Starting with the Velcro tabs along the front edge of the cab. Work you way down, marking the proper locations with a china marker or crayon. Next apply the adhesive Velcro strips to the roll cage, being sure to clean the area well first. Below is a photo showing where the different size strips should be placed. One change to the picture below is the 14" Velcro that is sewn to the cab and will Velcro to the plastic clamp that holds the windshield in place. This replaces the 6" tab just below the 8" tab in the picture.



5. At the top of the front area and toward the bottom, you will notice strips of double sided Velcro. You will use the provided 6” adhesive hook strips with these. Below are photos showing how to attach these.

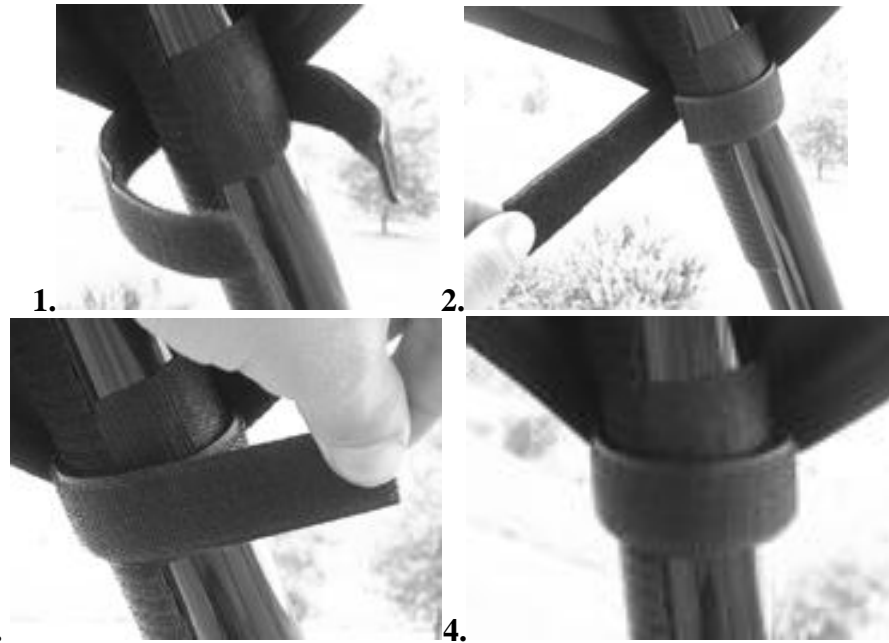

6. Working your way to the rear of the roll cage carefully fit the Cab into position. Be sure to pull the lower edge of the rear panel down between the rear of the roll cage and the front of the dump bed. Apply the four 6” latch strips here. Be certain to clean the surfaces before applying the adhesive loop strips!
7. To open and stow the doors, move the zipper fully rearward and fold the bottom portion of the doors up. Then begin to form a vertical roll with the door by rolling it inward from the front edge toward the rear of the door. Secure in place using the two hook and loop straps provided. Try to form a roll approximately 2” in diameter to assure that the door will not stick out very far while stowed.

### **Cleaning and Storage Recommendations:**

1. Before removing the Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Ape Offroad that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.

**Thank you for your purchase!**

## Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

**All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.**

If ordered from Ape Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Ape Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Ape Offroad's many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

## Warranty

To The Owner of this Product:

Thank you for purchasing one of Ape Offroad Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.