



## **FALCON RIDGE**

2515 Bypass Rd. Flemingsburg, KY 41041

606-845-7439

### **Instructions for Installation and Care of**

### **Kawasaki 4010 Mule**

### **Soft Rear Window**

KAW-4010-RW01


**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.**

1. Be sure to read these instructions thoroughly before unrolling and installing the 4010 Soft Rear Window. The installation is best done when the temperature is 65 degrees F. or warmer. This is to help the adhesive Velcro stick to the roll cage. If installation must be done outside in cold weather you must keep the Velcro warm until ready to install. You may also want to have a hair dryer or similar device to warm the roll cage as well.
2. Carefully unroll the Cab Enclosure on a large flat surface that is clean and free of dirt or other material that may soil or scratch the windows of the Cab. It will help to raise the bed prior installation.
3. Check over the parts included in the carton with the parts list shown below:


Velcro Hook strips:	8 each	3" long
“ “	6 each	10" long
“ “	1 each	36" long
4. To begin place the rear window up to the rear of the frame and mark the location for the two 10" adhesive strips across the top of the rear window on either side of the cutout. See photo below.



5. Then place the rest of the 10" adhesive strips down the sides of the rear window to match up with two tabs sewn along the edges. See photo below

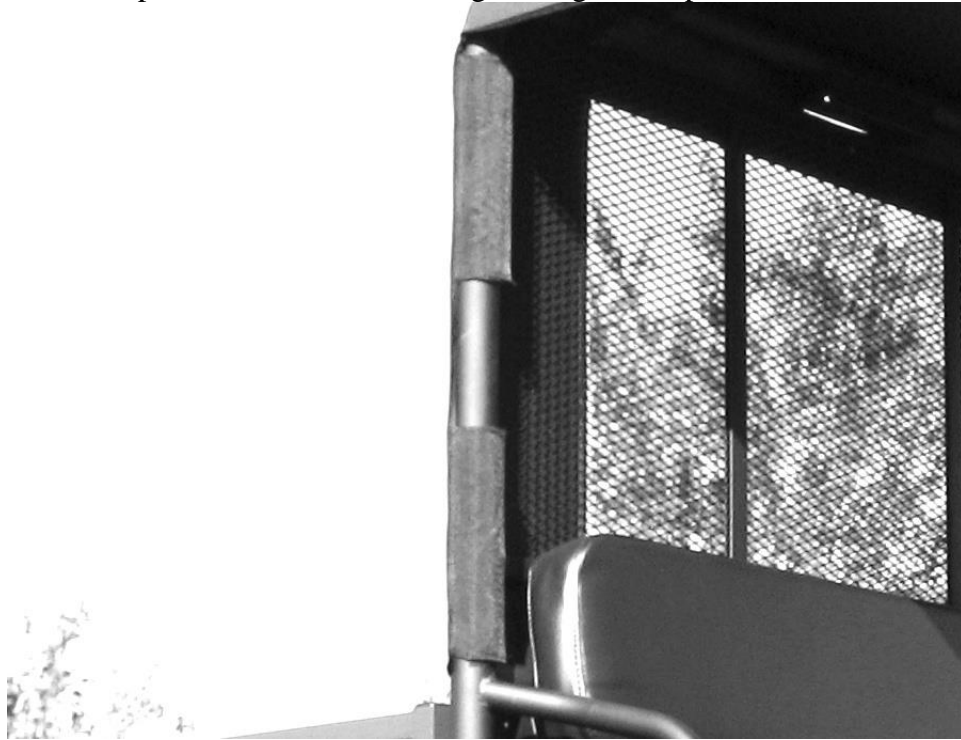

6. In the top corners, place a 3" adhesive strip on the inside of the bar where the double-sided Velcro strips are sewn perpendicular to the edges of the rear window. Photos below shows how this works.

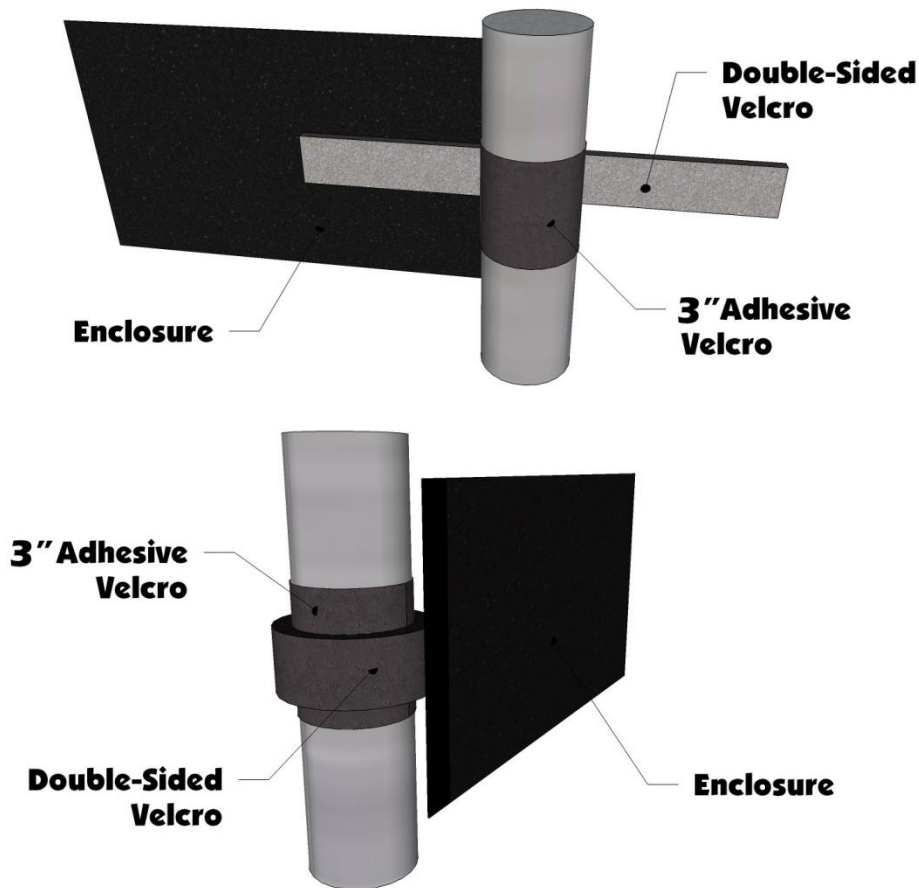

7. Finally attach the 36" adhesive strip across the bottom of the rear window to match up with the Velcro sewn along the bottom.

#### Cleaning and Storage Recommendations:

1. Before removing the Falcon Ridge Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag (I recommend a Flannel or Micro Fiber Cloth) or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.

3. A special cleaner conditioner is available from Falcon Ridge that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.