



FALCON RIDGE

2515 Bypass Rd. Flemingsburg, KY 41041

606-845-7439

Instructions for Installation and Care of

Kawasaki Pro-MX

Aero-Vent Polycarbonate Windshield


KAW-MX-WD05

NOTICE: Please check contents of package for any damage and make sure all parts fit correctly and you are happy with the product before removing protective film. Once the film is removed you cannot return the product for a full refund.

1. Be sure to read these instructions thoroughly before opening and installing the Kawasaki Pro-MX Aero-Vent Polycarbonate Windshield.
2. Check over the parts included in the cartons with the parts list shown below:

Velcro Strap Clamps	6 each
1" Bolts	4 each
2" Bolts	2 each
Nylon Bolts	5 each
Lock Nuts	6 each
Small Washers	8 each
1 ¼" Black Nylon Spacers	2 each
Slide Fasteners	10 each
54" End Bulb Rubber Gasket	1 each
Vent Sliders	2 each
Lexan Windshield	1 each

3. Start by pulling it out of the box, find a clean area to lay it down, and install the hardware. Begin by peeling off the protective film. Next take the 54" piece of rubber gasket and starting at one end firmly place along entire bottom edge of the Windshield as shown in the photo below.

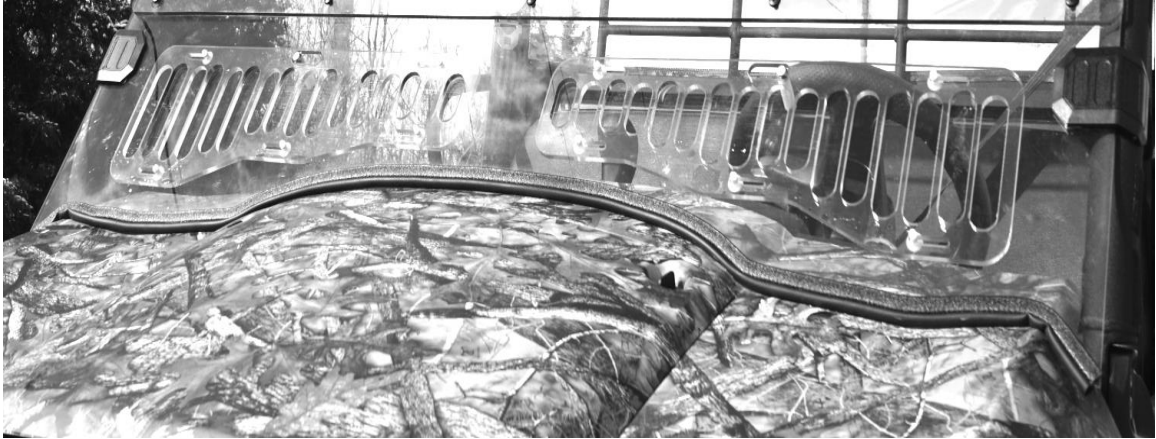

4. Next prepare the vent slider to be installed on the windshield. Take the 2" bolt, Black nylon spacers and lock nut and attach them to the vent sliders as shown in the photos below.



Take the spacer and slide it over the bolt as shown below




Now insert the bolt in the small holes and screw on the lock nuts so the end of the bolt is flush with the outside edge of the lock nut.

5. Now place the sliders on the inside surface of the windshield. And place the plastic slide fasteners through the slots on the slider and into the holes in the windshield. The lock nuts should be in the large slots of the windshield. See photo below.



6. Now install the lower portion to the upper portion using the nylon bolts. There are five holes in both section with the holes in the upper portion being bigger. Set the upper portion on top of the lower portion and screw them together making sure that the slots on the ends are lined up. The photo below shows how this looks.

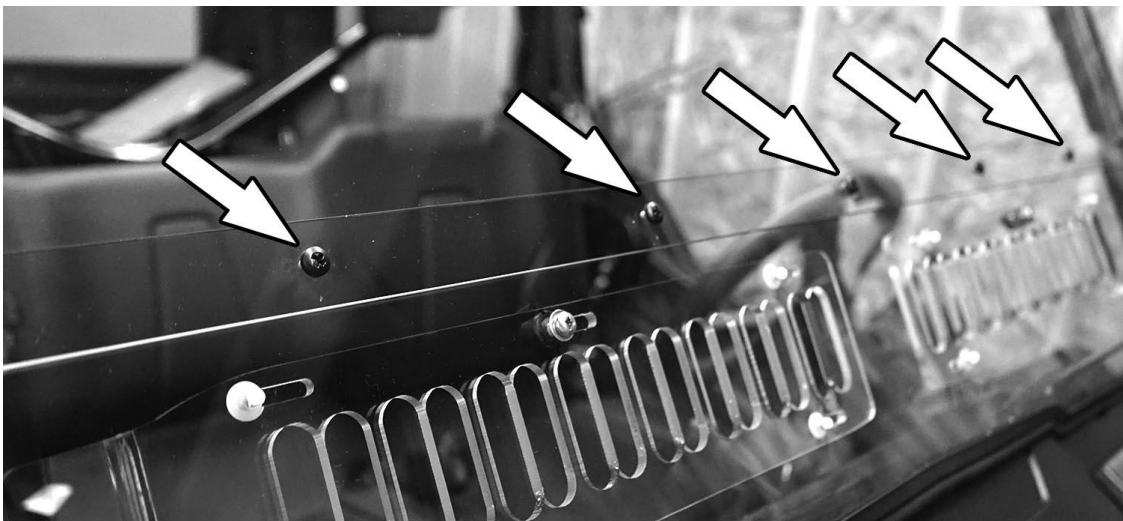


7. You are now ready to install the windshield on your roll cage.

8. Take the six Velcro clamps and place them through the square holes then wrap the strap around the roll cage and under the wire as shown in the photo below.



9. Then just Pull the strap back around the bar and attach it to the Velcro.
10. If you are using this windshield with an Falcon RidgeCab enclosure then you will use the Top Brace to sandwich the cab material and seal off the inside from the wind. The diagram below shows how it will work.

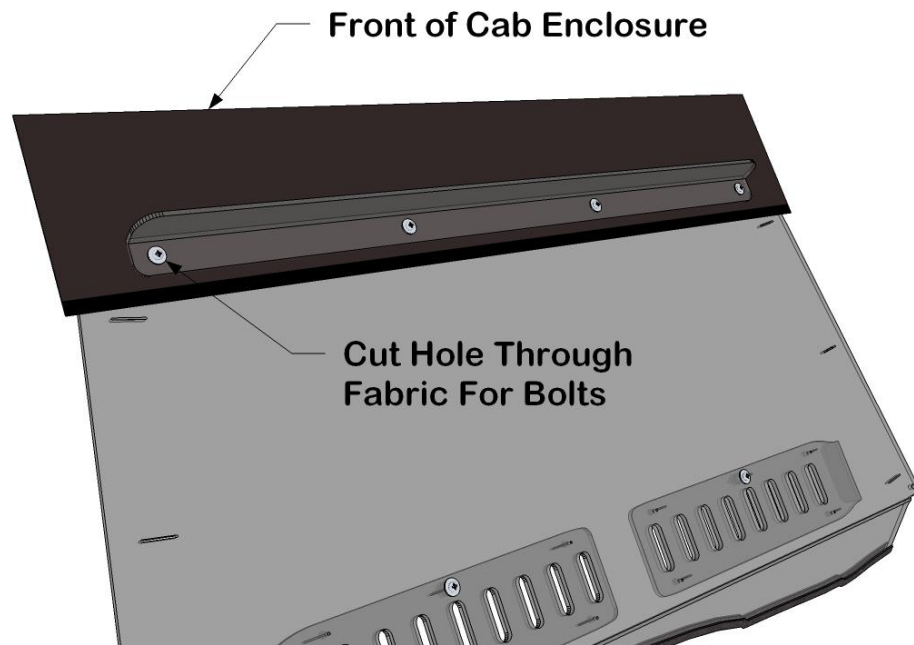

11. Now you are ready to take it out and enjoy. To clean the windshield, always clean using a liquid of some sort to decrease the chance of scratches. We recommend using micro fiber cloths that are readily available at any dollar store. Any window cleaner will work fine; just remember to use a soft clean rag or micro-fiber cloth to clean it.