

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041
606-845-7439

Instructions for Installation and Care of
2014-18 Polaris RZR4 Soft Top
PO-14RZR4-TC01

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the 14RZR4 Soft Top.
2. Check over the parts included in the carton with the parts list shown below:

2 “ Adhesive Hook	1 each	28” long
Polycarbonate Panel	1 each	
30” Webbing strap with loop	6 each	

3. Prior to installing the top you must first remove the two front bolts that attach the front plastic piece to the frame. There are two bolts on each side but only remove the top bolt as shown in the photo below.



4. Then take the small polycarbonate panel and peel the protective film. Then place the 28” adhesive Hook strip on the bottom of the of it approximately half an inch in front of the bend. The bottom of the panel will be the side that the bend is bent towards. Place the adhesive hook in the center of the of the piece as shown in the photo below



5. Next insert the polycarbonate panel into the pocket on the front of the soft top. Set it in the pocket as shown in the photo below making sure that the Velcro on the panel will match up with the Velcro sewn to the top.




6. Now push it all the way into the pocket and attach the Velcro together. See photos below.



7. Now you are ready to install to front section on the RZR. Set it up on the plastic visor and fold the soft top back so the holes of the polycarbonate panel are exposed. Now take the two bolts you removed from the visor earlier and reinstall them through the panel and into the visor. See photo below.



8. Now pull the soft top back over towards the rear of the vehicle and begin to install the six straps.

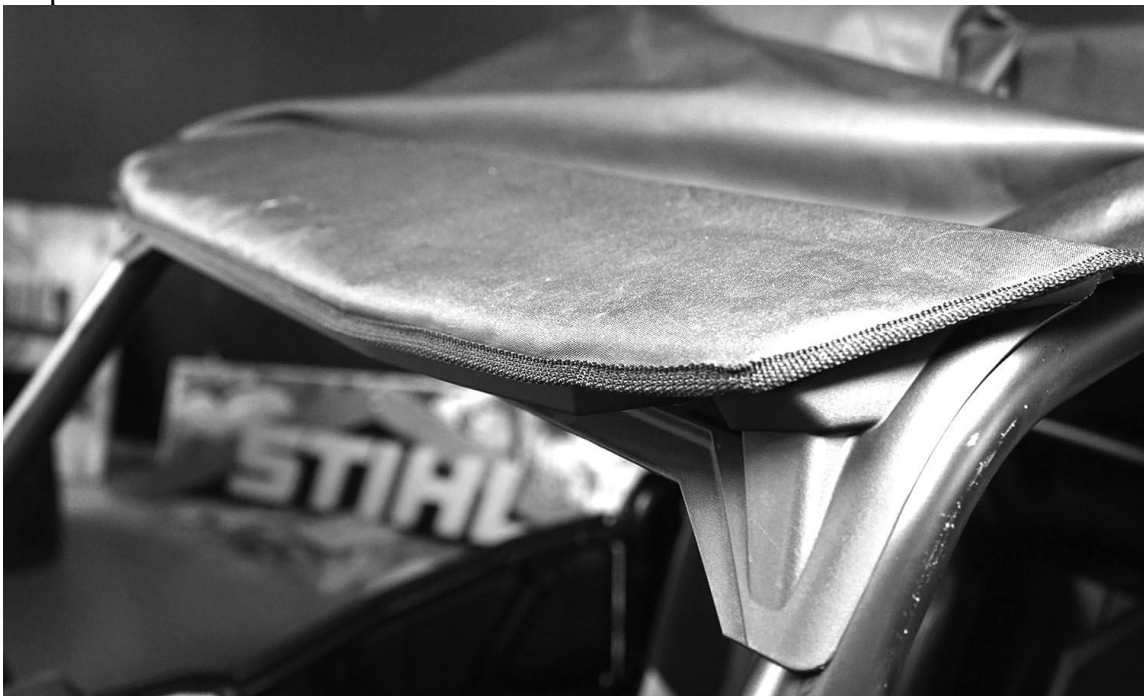

9. Now work your way around the rear of the vehicle and install the straps to tighten down the top. Wrap the looped end of the strap around the bars under the seat belt mount in the middle and under the cross bar on the second bar as shown in the photo below.



10. The last two straps attach to the end of the rear bars. Run the loop through the triangle hole where the two bars connect. See photo below



11. Finally make sure the top is centered and pull the straps tight. You may have to cut the ends of the straps and if you do make sure to melt the ends to prevent them from fraying out.

Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Over Armour Offroads many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

Warranty

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures, Tops &/or Windshields!
Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Over Armour Offroad
www.overarmouroffroad.com