



TR28/AS28

Installation Instructions




⚠ Please be sure to read the instruction manual thoroughly for your safety.


WHAT'S IN THE BOX?

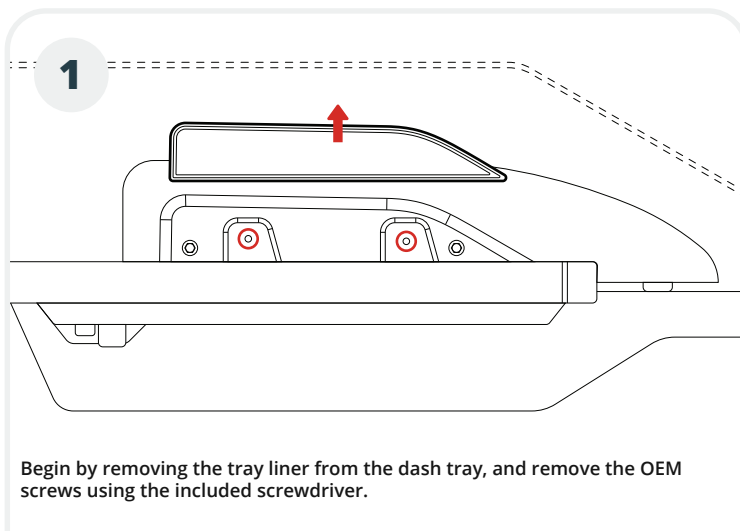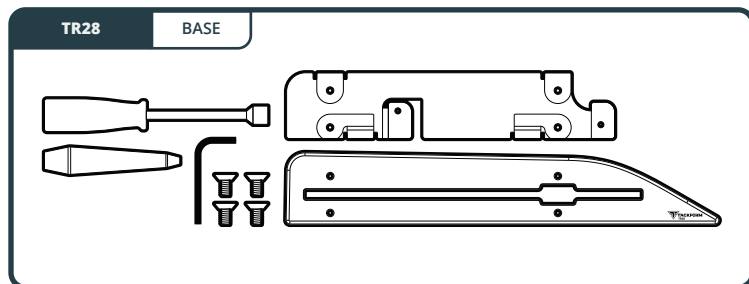


Begin by removing the tray liner from the dash tray, and remove the OEM screws using the included screwdriver.

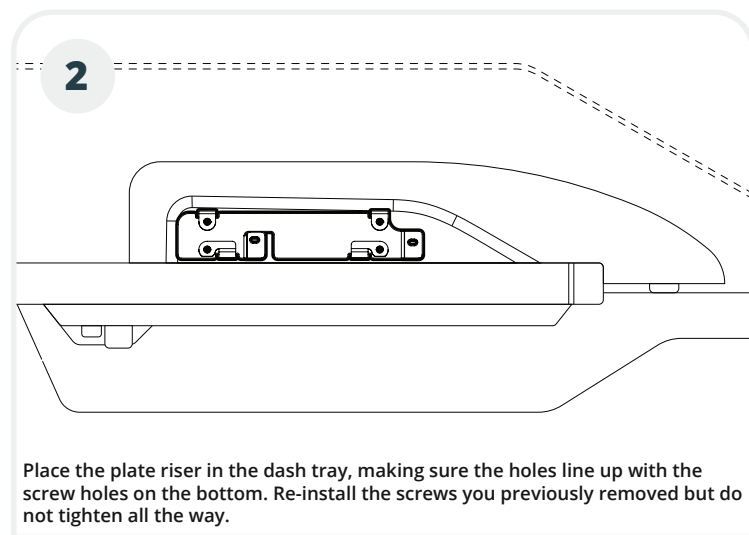

Place the plate riser in the dash tray, making sure the holes line up with the screw holes on the bottom. Re-install the screws you previously removed but do not tighten all the way.

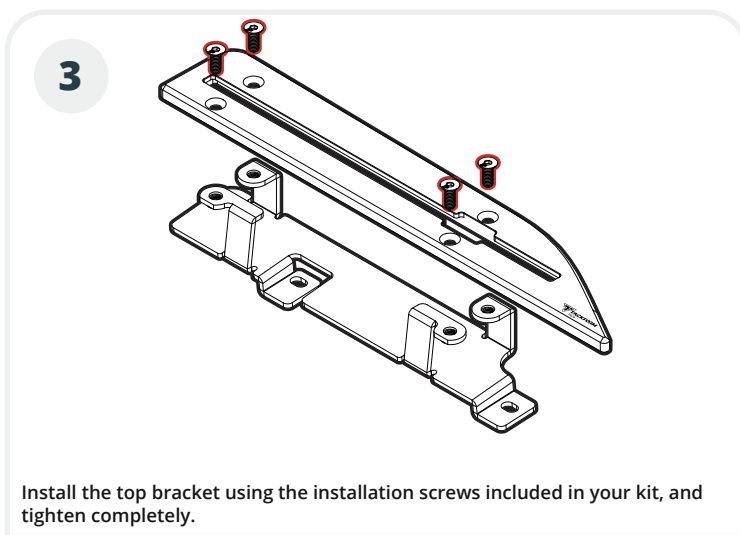

Install the top bracket using the installation screws included in your kit, and tighten completely.

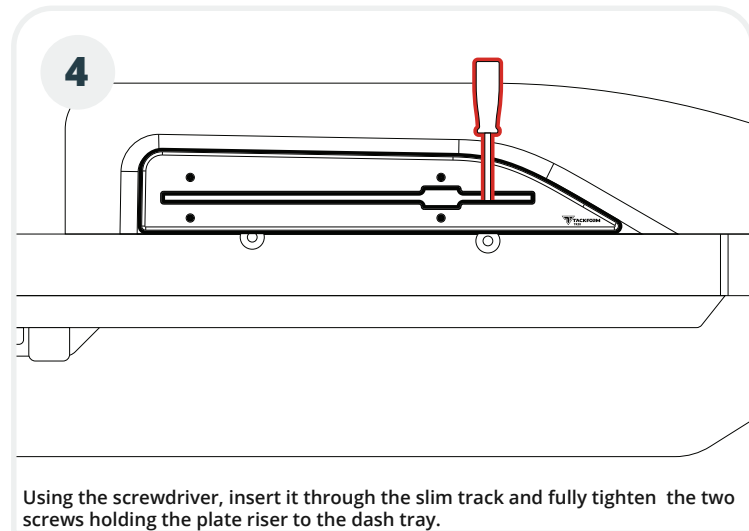

Using the screwdriver, insert it through the slim track and fully tighten the two screws holding the plate riser to the dash tray.

TACKFORM
Designed in the USA
Made in CHINA


(630) 332 3433
GET@TACKFORM.COM
WWW.TACKFORM.COM
ADDISON, IL 60101 USA

HOURS OF OPERATION
Mon - Fri 9:00am - 5:00pm



Safety Precautions: Tackform is not responsible for any damage caused to your vehicle, your device, or yourself due to the installation or use of this mount.

5 OPTIONAL ASSAULT TRACK RAIL INSTALL

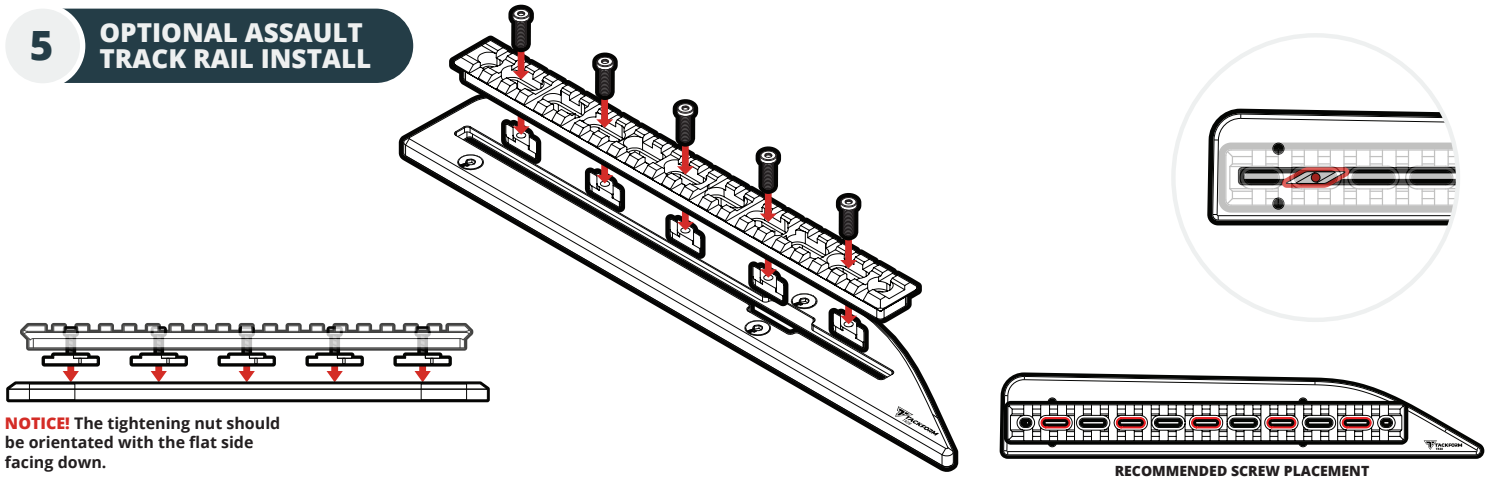

Insert the screws through the holes on the picatinny rail and partially thread the nuts on the underside. Avoid over-threading the nuts, as this can interfere with installation. Rotate the nuts parallel to the track opening and drop them into place. Once the rail is aligned and positioned on the track, securely tighten the screws.

TACKFORM

TEL: (630) 332 3433
EMAIL: GET@TACKFORM.COM

HOURS OF OPERATION
Mon - Fri 9:00am - 5:00pm

CUSTOMIZABLE

BILLET ALUMINUM KNOB & TRIM RING KITS



CUSTOMIZE YOURS
SCAN ME

