

Helmet Brimmer™ Installation Instructions

STEP 1 Select Helmet Brimmer™ Size


Helmet Brimmer™ Sizing Chart

HELMET SIZE	SPIRIT TX FTX	DAKOTA REBEL INTREPID	FALLON TAYLOR LIBERTY	AVALON	CHEYENNE	SIERRA
XS	A	N/A	A	N/A	N/A	N/A
S	A	A	A	A	A	A
M	A	A	A	A	B	A
L	B	A	A	A	B	A
XL	N/A	B	B	N/A	B	B

1. Locate the Troxel helmet model and size of the helmet you have on the chart above.
2. Refer to the size chart to determine if you need size A or B.

*Helmet Brimmer™ cannot be used with the following helmets: Terrain, Sport, Legacy, non-low profile Spirit and all helmet versions prior to 2014. **Not suggested for use with the ES model helmets.


STEP 2 Insert helmet visor into front pocket of the Helmet Brimmer™.

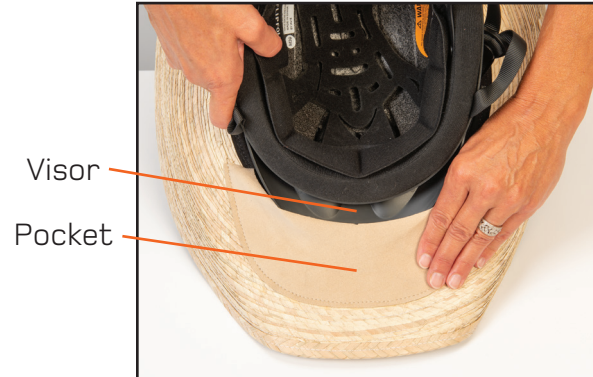


STEP 3 Push down the front of the Helmet Brimmer™ from the top side until the Helmet Brimmer™ touches the helmet visor.



STEP 4 Push down the rear of the Helmet Brimmer™ until you get to 1/4" - 1/2" distance from the center rear edge of the helmet.

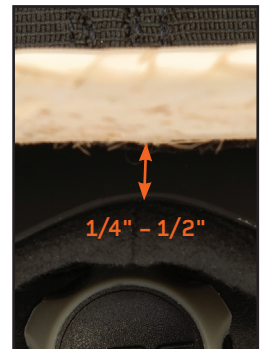

STEP 5 Insert each plastic clip between the outer shell and liner of the helmet.

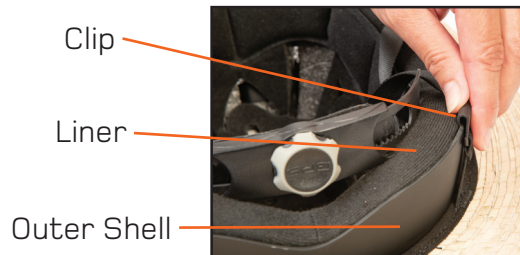

STEP 6 Recheck helmet fit with the installed Helmet Brimmer™. With the helmet level on your head, check the fit and straps to make sure the buckle is locked securely.