

2015-17 Ford Mustang GT

CORSA
PERFORMANCE

Part #: CC0014



IMPORTANT! WARRANTY AND INSTALLATION INSTRUCTIONS

Please Forward All Information to Consumer

Be sure to review the enclosed instructions prior to beginning the installation process. If you have any questions about the enclosed parts or instructions, or if you encounter a problem during installation:

CALL TECHNICAL SUPPORT: 440.891.0999 or 800.486.0999

**TO ACTIVATE YOUR WARRANTY GO TO:
CORSAPERFORMANCE.COM/WARRANTY**

COLOR INSTRUCTIONS ARE AVAILABLE BY PART NUMBER ON: CORSAPERFORMANCE.COM



NEVER work on a hot engine bay.
Allow time for the vehicle to cool.

INSTALL DIFFICULTY



RECOMMENDED TOOLS & SUPPLIES

- 15mm Socket Ratchet and Wrench
- 11/16" Wrench
- 2.5mm Hex Wrench
-

2015-17 Ford Mustang GT

CATCH CAN

Part #: CC0014



Please take time to read and understand these installation instructions.

CORSA recommends that the installation of this system be performed by a qualified service center or professional installer who has the necessary equipment, tools, and experienced personnel. However, if you decide to perform this installation yourself, the use of an additional person may be required.

WARNING: Never work on a hot engine bay. Allow time for the vehicle to cool.

This warranty does not extend to damaged or defect in the finish of a product or to any product, that in the opinion of CORSA Performance, has been misused, damaged by accident or negligence, altered or modified in any way, faulty installation or installed contrary to CORSA installation instructions, or repaired by an unauthorized service facility.

Full warranty available on www.corsaperformance.com

Please confirm that all parts are present according to the bill of materials before beginning the installation.

If something is missing call Tech Support at 440.891.099 or Toll Free: 1.800.486.0999




HARDWARE KIT


1. 5/8" NPT Barbed Elbow Fitting	2	4. Bracket	1	8. M10 Bolt	1
2. Catch Can Body	1	5. 4mm Hex Screws	3	NOT PICTURED:	
3. 5/8" Quick Disconnect Fittings	2	6. M10 Nut	1	9. 5/8" Hose A	12"
		7. Spacer	1	10. 5/8" Hose B	16"

REMOVAL INSTRUCTIONS

FACTORY PCV LINE

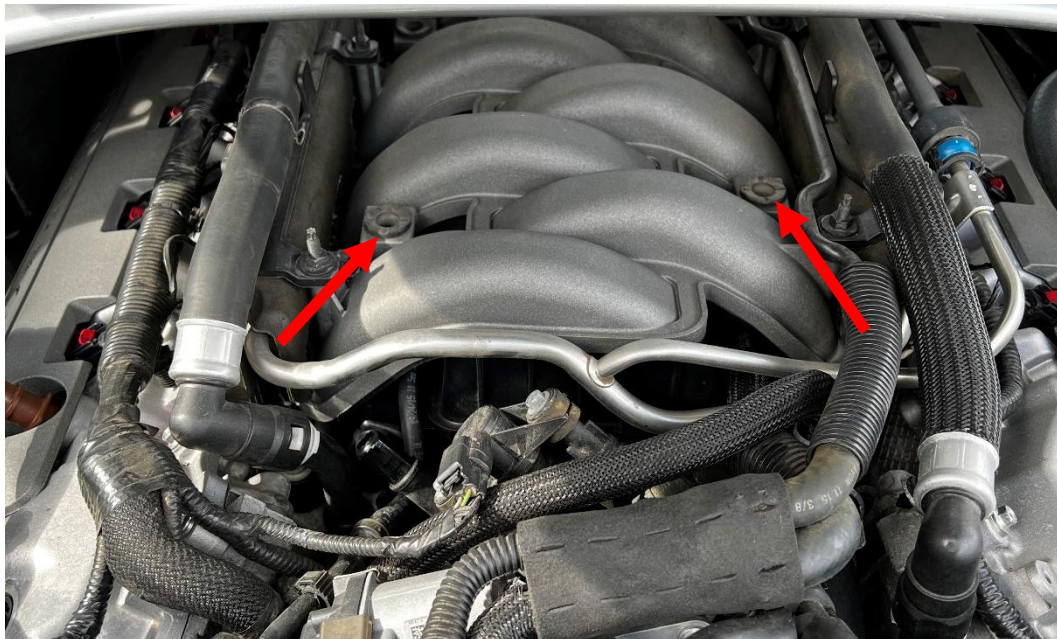

1. Remove the engine over by pulling it off of the press fit tabs.

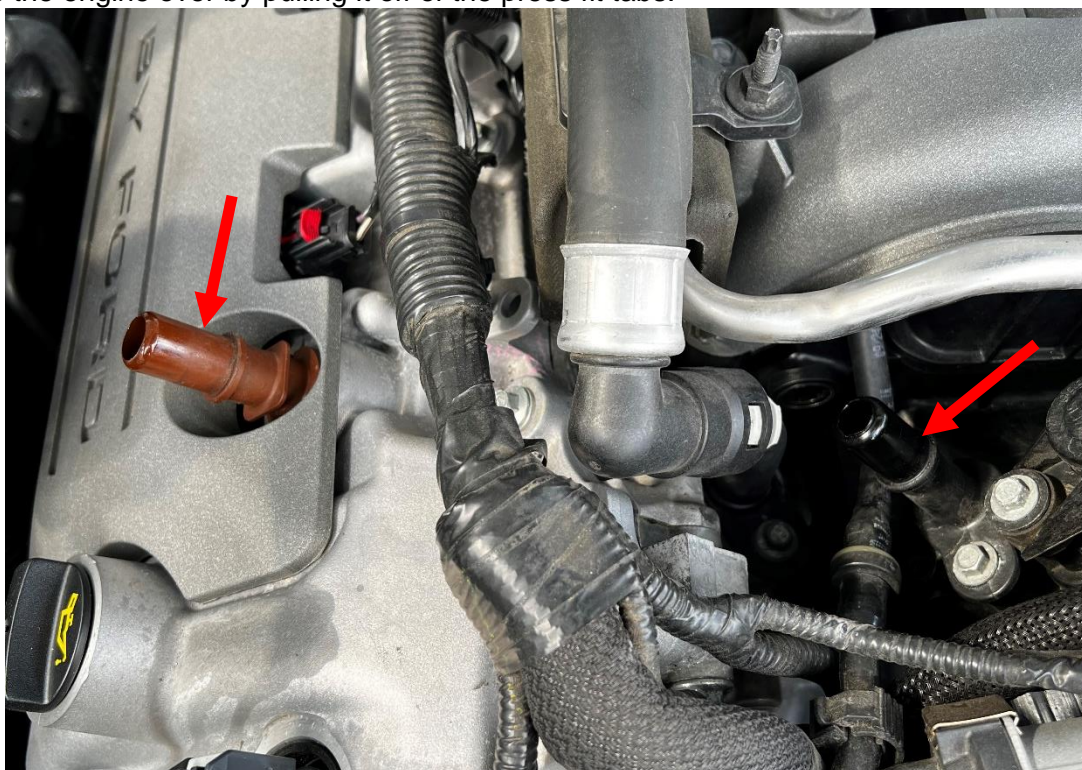

2. Remove stock PCV line which is located on the passenger side of the engine.

This concludes removal instructions.

INSTALLATION INSTRUCTIONS

CORSA CATCH CAN SYSTEM




1. Install barbed fittings to the catch can using an 11/16" wrench. **IMPORTANT:** Corsa highly recommends using thread sealant or PTFE tape on barbed fittings and bottom drain plug to prevent any leaks.



2. Use the supplied nut, bolt, and spacer to attach the bracket to the passenger side of the body above the windshield washer fluid cap. Place the spacer between the body panel and the bracket before tightening the nut/bolt using a 15mm wrench and ratchet.



3. Install the catch can to the bracket using the provided hex screws and a 2.5mm Allen wrench.

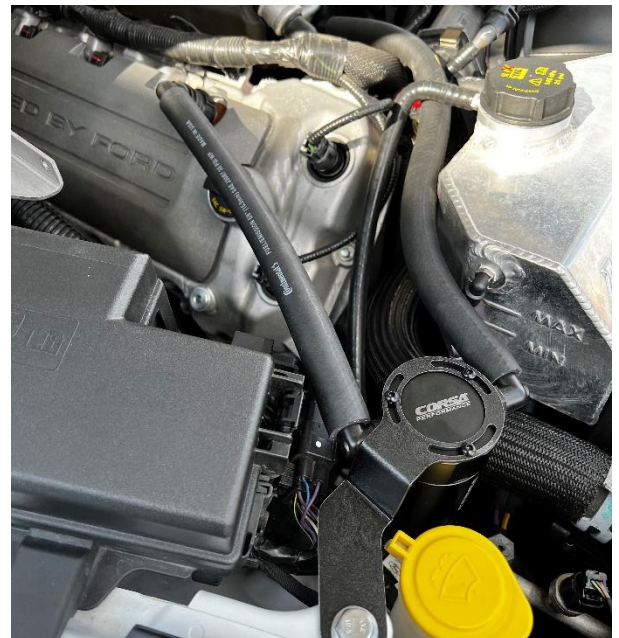

4. Connect the 2 quick disconnect fittings to one end of each hose. Attach hose A to the "A" end of the catch can and route to the BROWN fitting on the engine. Connect Hose B to the "B" side of the catch can and route it to the BLACK fitting on the engine. Reinstall engine cover.

This concludes installation instructions.

*Check that this catch can complies with your Federal, State and Local laws.
We recommend saving your stock PCV line.*

BEFORE ROAD TESTING

- 1.** Start engine, leaving the transmission in park and securing the parking brake.
 - 2.** Make sure to look and listen for any unusual noises or air leaks. Repair problems if needed.
 - 3.** Once completed it will be necessary to check periodically, after a few heat cycles, for realignment and tightening of all connections.
-

EMPTYING CATCH CAN: Twist off the bottom of the catch can and dispose of collected oil. It is recommended to check and empty the catch can with every oil change.
